


US-LT40A(B)L SERIES SCREWDRIVER

EXPLODED VIEW

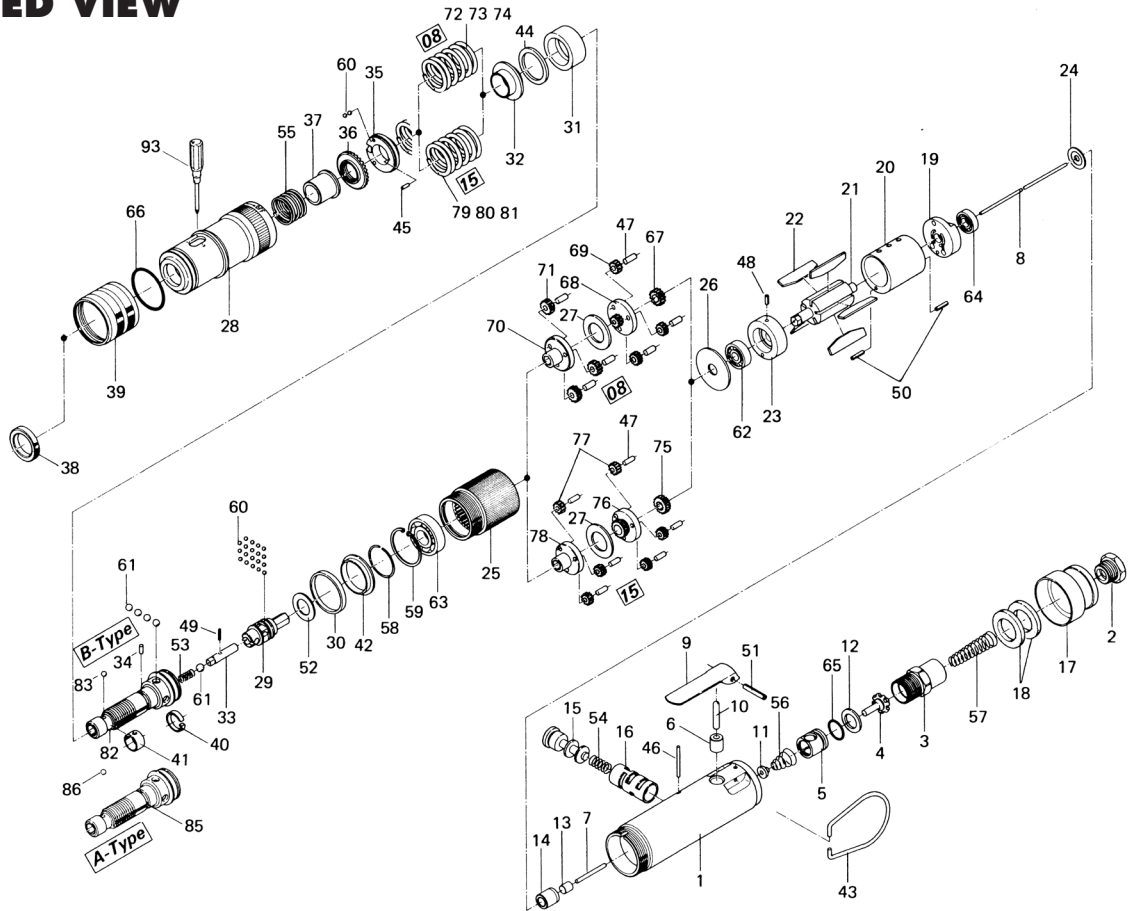

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	461-025-6	Casing	1	34	471-764-7	Notch Pin	1	PARTS FOR US-LT40L-08			
2	480-091-8	Air Inlet Bushing	1	35	472-562-8	Spring Holder	1	67	472-460-7	Rotor Gear	1
3	461-097-5	Air Inlet Connector	1	36	472-257-8	Regulating Screw	1	68	472-480-7	First Gear Cage	1
4	259-100-0	Valve	1	37	472-351-7	Bit Sleeve	1	69	472-470-7	First Planet Gear	3
5	461-102-6	Valve Bushing	1	38	472-567-7	Bushing	1	70	472-485-7	Second Gear Cage	1
6	553-103-1	Valve Rod Bushing	1	39	472-370-7	Clutch Casing Sleeve	1	71	472-471-7	Second Planet Gear	3
7	970-108-0	Pin (H) (2 x 26.8 A)	1	40	471-670-7	Band	1	72	976-515-0	Spring (22.7 x 28) (2.6) Standard	1
8	463-104-7	Valve Rod	1	41	471-356-7	Bit Band	1	73	976-516-0	Spring (22.1 x 28) (2.3) Weak	1
9	466-107-5	Valve Lever	1	42	463-334-7	Anvil Spacer	1	74	976-517-0	Spring (21.5 x 31) (2.0) Weaker	1
10	461-114-6	Valve Pin	1	43	010-790-1	Suspension Ring	1	PARTS FOR US-LT40L-15			
11	259-254-0	Shut-Off Valve	1	44	944-019-0	Back-up Ring (P-19)	1	75	472-460-5	Rotor Gear	1
12	996-424-0	Packing	1	45	970-092-0	Pin (2 x 5.5)	1	76	472-480-5	First Gear Cage	1
13	444-106-8	Valve Rod Cap	1	46	970-105-0	Pin (2 x 24)	1	77	472-470-5	First Planet Gear	1
14	461-567-6	Bushing	1	47	972-089-0	Roller Pin (3 x 8)	6	78	472-485-5	Second Gear Cage	1
15	893-057-1	Reverse Valve (Lock)	1	48	973-006-0	Roll Pin (2 x 6)	1	79	976-516-0	Spring (22.1 x 28) (2.3) Standard	1
16	472-211-7	Reverse Valve Bushing	1	49	969-470-0	Pin (E) (2 x 8)	1	80	976-515-0	Spring (22.7 x 28) (2.6) Strong	1
17	472-782-7	Exhaust Deflector	1	50	973-010-0	Roll Pin (2 x 10)	2	81	976-517-0	Spring (21.5 x 31) (2.0) Weak	1
18	161-835-4	Filter	2	51	973-118-0	Roll Pin (3 x 18)	1	PARTS FOR US-LT40BL			
19	472-285-7	Rear Plate	1	52	975-106-0	Cam Retainer	1	82	472-319-7	Anvil	1
20	472-286-7	Cylinder	1	53	976-058-0	Spring (4.5 x 11) (0.4)	1	83	981-002-0	Ball (1/8)	1
21	472-287-7	Rotor	1	54	976-147-0	Spring (7 x 12) (0.6)	1	PARTS FOR US-LT40AL			
22	472-288-0	Blade (PC)	5	55	976-450-0	Spring (18.5 x 10) (1.0)	1	85	472-319-6	Anvil	1
23	472-289-7	Front Plate	1	56	977-071-0	Cone Spring (5.5 x 11.5 x 15)	1	86	981-003-0	Ball (5/32)	1
24	461-291-6	Rear Plate Spacer	1	57	977-155-0	Cone Spring (7 x 10 x 35)	1	ACCESSORIES			
25	472-029-7	Gear Casing	1	58	978-218-0	Snap Ring (22 x 1)	1	93	939-402-0	Manual Driver (No.2)	1
26	472-807-7	Spacer	1	59	979-326-0	Inner Snap Ring (IRTW-26)	1				
27	496-483-1	Gear Cage Spacer	1	60	981-001-0	Ball (3/32)	21				
28	463-369-7	Clutch Casing	1	61	981-004-0	Ball (3/16)	5				
29	472-346-5	Cam	1	62	982-063-0	Ball Bearing (606ZZ)	1				
30	463-397-7	Back-up Spacer	1	63	982-100-0	Ball Bearing (6000)	1				
31	472-375-7	Cam Ring	1	64	987-039-0	Miniature Ball Bearing (R1560ZZ)	1				
32	472-379-8	Retainer	1	65	990-911-0	O-Ring (SNS-12)	1				
33	471-318-5	Pilot Pin	1	66	990-923-0	O-Ring (SNS-26)	1				

FOOTNOTES



10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number, and description.