



QUICK START GUIDE ACRADYNE GEN IV CONTROLLER


(Models w/Touchscreen Console only)

Step 1: Make connections

A. Connect the tool cable to the GEN IV controller




B. Connect the power cord.

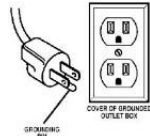

C. If required, connect the Redundant Earth ground.



(Consult manual for further details on proper Grounding of controller if needed)

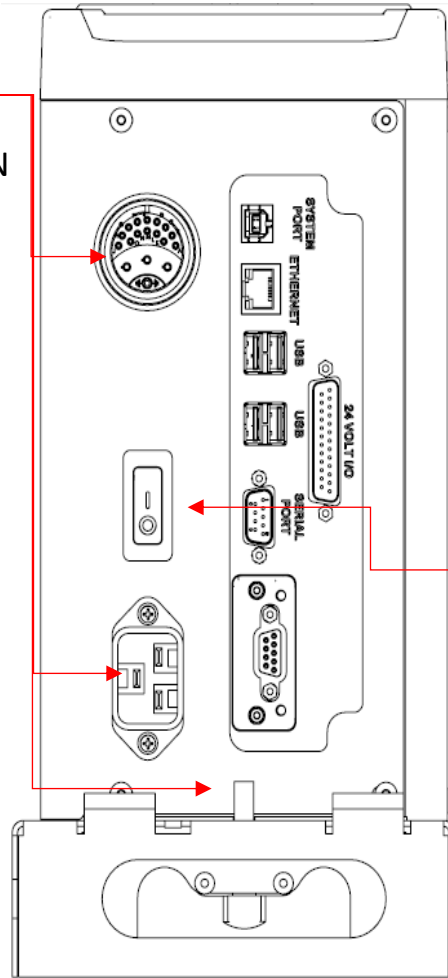

Step 2:

Power on Controller



Step 3:



On the Controller Main Display Menu press >



This will import three default PSets that can now be edited. More Psets can be added by using the Add and Edit buttons.



Note: For GEN IV models without touchscreen console, or when connecting through the web browser interface, this process is the same. Refer to the controller manual for connection instructions. For the complete Gen IV manual click on the Resources tab at:

www.aimco-global.com



AIMCO Technical Support Call Guide

Service Training

Steve Shepard

Direct: (503) 262-3475
(503) 254-6600, Ext. 175

Ken Maio

Direct: (503) 262-3406
(503) 254-6600, Ext. 206

Service/Repair AcraDyne

Kent Wall

Direct: (503) 262-3447
(503) 254-6600, Ext. 147

Greg Charland

Direct: (503) 262-3497
(503) 254-6600, Ext. 207

Service/Repair Electronics

Greg Charland

Direct: (503) 262-3497
(503) 254-6600, Ext. 207

Mike Sims

(503) 254-6600, Ext. 208

Service/Repair Pneumatic Tools

Kent Wall

Direct: (503) 262-3447
(503) 254-6600, Ext. 147

Greg Charland

Direct: (503) 262-3497
(503) 254-6600, Ext. 207

Technical Assistance: Performance and Specifications

Greg Charland

Direct: (503) 262-3497
(503) 254-6600, Ext. 207

Mike Sims

(503) 254-6600, Ext. 208

Electronics

Technical Assistance: Performance and Specifications

Steve Shepard

Direct: (503) 262-3475
(503) 254-6600, Ext. 175

Dennis Frey

(503) 254-6600, Ext. 176

Pneumatic Tools