



AcraDyne iEC DC Tool Controllers User Guide



PO Box 16460, Portland OR 97292-0460 • 800-852-1368 • Fax 800-582-9015

www.aimco-global.com

Introduction

Thank you for your purchase of an AcraDyne iEC DC Tool Controller from AIMCO. The iEC represents the most advanced controller for AcraDyne series electric controlled assembly tools and is capable interfacing with all series of AcraDyne tools.

This manual is designed to provide the user of the AcraDyne iEC Controller with a guide to understanding the features and functions of the controller. Programming this controller using AcraDyne's ToolWare software package provides a broad range of operating choices to tackle the most difficult assembly projects with ease. Statistical analysis, communication and system diagnostic features are also built in.

For more detailed programming, data analysis and system monitoring information please refer to the AcraDyne ToolWare Operations section at the back of this manual.

For additional service and support, please contact your AIMCO distributor or contact AIMCO at 1-800-852-1368 between the hours of 7:00 AM—4:00 PM Pacific Time.

Table of Contents

Safety Information	3
Front Panel Diagram (Figure 1)	4
Bottom Panel Diagram (Figure 2)	4
Top Panel Diagram (Figure 3)	4
Main Display Panel Diagram (Figure 4)	5
Dimensions	5
Initial Setup	6
Main Display Functions	
Changing Parameter Sets	8
Programming the Display Options (Steps 1-3)	8
Display Optional Values for Individual Rundowns (Steps 1-2)	10
Using the Optional Keypad Display Module (KDM)	
KDM Diagram	11
Parameter Set Terms	11
Turning the KDM On / Off	12
Main Menu: 1) Parameter Setup	
Setting Up Parameter Sets	12
Accessing Quick Start Parameter Sets	13
Editing Quick Start Parameter Sets	13
Configuring New Quick Start Parameter Sets	14
Configuring a Complete Parameter Set	
Entering / Editing Values in the KDM	15
Main Menu: 2) Calibration	16
Main Menu: 3) Administration Functions	
Parameter Set Defaults	17
Security	18
Tool Information	19
Reset Factory Defaults	19
Error Codes	20
Filter Frequency	20
Adaptive Control	21
Networking	22
Error Proofing	33
Appendix A Error Codes and Descriptions	34
Appendix B Menu Structures of KDM	35
Appendix C I/O Diagram & Definitions	37
Appendix D Light Assignment for Light Tower and Key Bypass	41
Appendix E Dual Trigger Lever Functionality for Gen 3-4 tools	41
Appendix F TUBE NUT Homing Sequence	42
Appendix G Frequently Asked Questions	43
Appendix H Toolware Users Guide - Separate Table of Contents	45

Safety Information

SAFETY REQUIREMENTS

READ AND SAVE THESE INSTRUCTIONS

WARNING!

Ensure that owner/operator has read all Safety Requirements and User Manuals prior to operating.
To avoid electric shock, which may result in personal injury and/or death, electrical supply must be meet the electrical requirements.

Do not operate power tools in explosive atmospheres, such as the presence of flammable liquids, gases or dust.

To avoid electric shock, which may result in personal injury and/or death, electrical connections must be properly grounded.

To avoid electric shock, which may result in personal injury and/or death, electrical wiring between the device, electrical supply and any peripheral equipment must be routed in a secure manner.

Switch device to the "OFF" position and disconnect from any power supply prior to servicing. Lock Out/Tag Out procedures should be followed.

To avoid electric shock, which may result in personal injury and/or death, cords should be kept from heat, sharp edges, or any other potentially hazardous conditions.

When operating a power tool outdoors, use an extension cord suitable for outdoor use.

Keep out of reach of children.

DANGER!

Contact with water, solvents, or other liquid substances may result in personal injury and/or death.

Do not operate equipment under the influence of drugs, alcohol or circumstances in which you are not fully alert.

Use safety equipment. Always wear eye protection.

Ensure the switch is in the off-position before plugging in.

Remove any adjusting key or wrench before turning the power tool on.

Do not wear loose clothing or jewelry. Keep hair, clothing and gloves away from moving parts.

POWER TOOL USE AND CARE

Do not force the power tool. Use the correct power tool for your application.

Do not use the power tool if the power switch does not turn it on and off.

Front Panel


Figure 1



- 1—Main Display Panel—Annunciation and Display programming (see Page 5 for detail)
- 2— Power Disconnect Switch— Turns controller on and off
- 3—Keypad Display Module (KDM)—Onboard Interface for setup and programming (Optional)

Bottom Panel


Figure 2

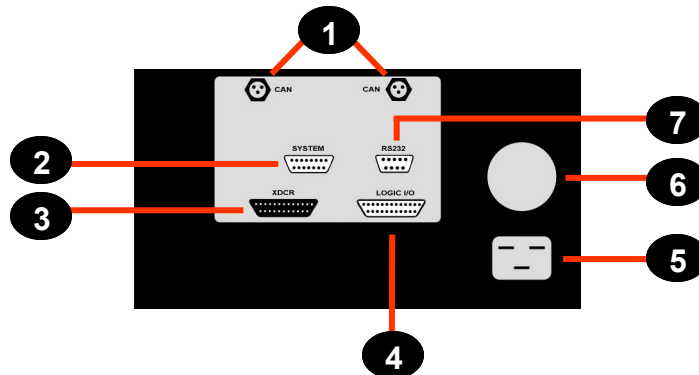

- 1—CAN Connectors— For connection of AEC-CIM communication module and peripheral devices
- 2—System Connector (DB-15 Pin)— For upgrading / changing controller firmware
- 3—External transducer Connector (DB-25 Pin)— Non active, future feature
- 4— External I/O Connector (DB-25 Pin)— Input and output of signals for process control
- 5—Power Cord Connection— IPC-29 Connector
- 6—Ethernet Connection Access / Light Tower Board Connection/ Bottom Exit Tool Connection (Optional)
- 7—RS232 Connection (DB-9 Pin)— Serial-data output for communication with peripherals such as bar code readers

Top Panel


Figure 3

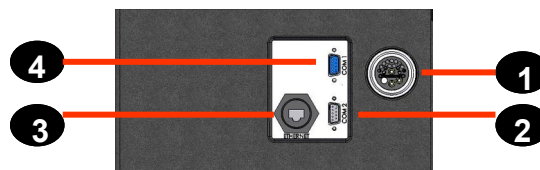

- 1—Tool Connector (26 Pin) —Standard connection point for tool cable
- 2—Serial data connection for peripherals
- 3—Ethernet connection port (2nd connection optional with advanced communication packages)
- 4—Serial data connection for peripherals


Main Display Panel

Figure 4

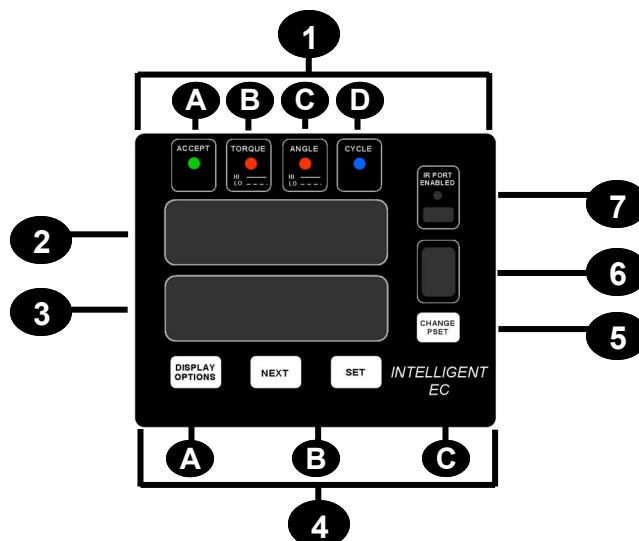

- 1—**Rundown Feedback Indicators**
 - A—**ACCEPT**— Green LED indicates OK rundown
 - B—**TORQUE**—Steady red indicates HI, flashing red indicates LO
 - C—**ANGLE**—Steady yellow indicates HI, flashing yellow indicates LO
 - D—**CYCLE**—Blue LED indicates tool is in rundown cycle
- 2—**Primary Display Field**—Displays Parameter Set Target or Rundown torque
- 3—**Secondary Display Field**—Selectable Display Choices (Angle etc...)
- 4—**Programmable Display Selection Buttons**
 - A—**Optional Display Access**—Accesses the Programmable Options menu
 - B—**NEXT**—Scrolls through the different display options for the Secondary Display
 - C—**SET**—Sets the selected display option in the Secondary Display
- 5—**CHANGE PSET**—Scrolls upwards through programmed Parameter Sets
- 6—**PSET Indicator**—displays PSET that is currently operating
- 7—**IR PORT ENABLED**—Future function, not currently enabled

Dimensions

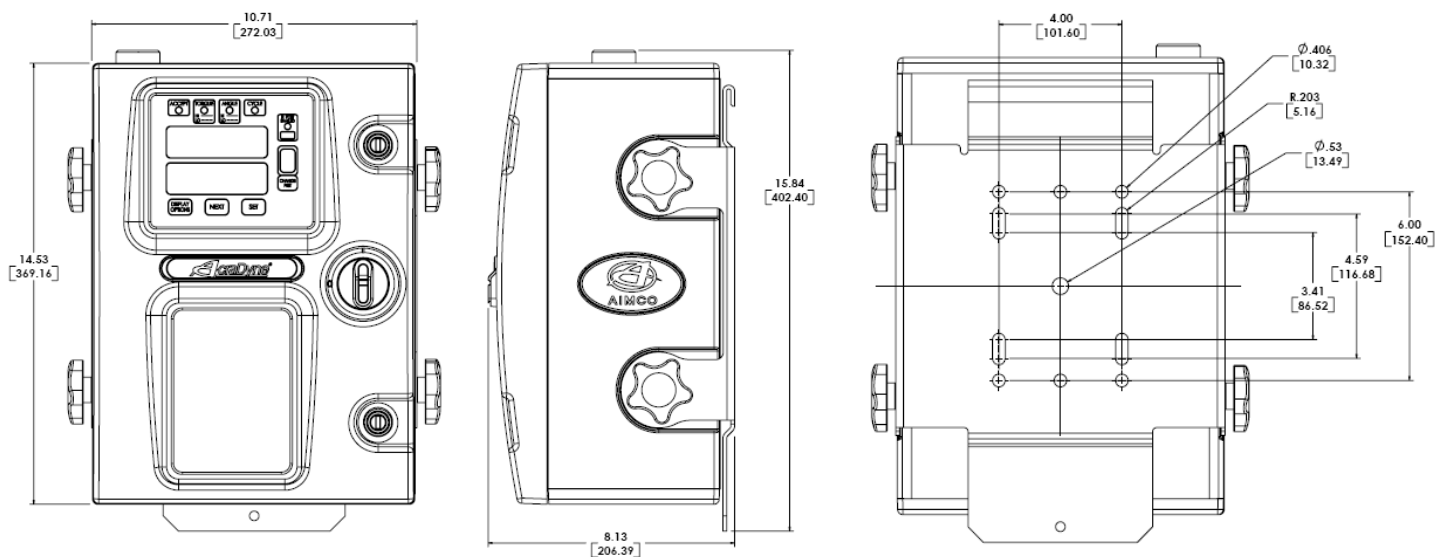

Inches / Millimeters

INITIAL SETUP

Step 1

Connect the tool cable to the Tool Connection (Figure 3, pg. 4). The cable consists of a male pinset housed in a molded connection with a notch or a 26-Pin male connector with two opposing locating pins. Align the notch of the tool cable with the notch of the connector or the male and female locating-pins and insert the cable. Next, securely thread the connector cover to the controller body.

Step 2

Repeat the above process to connect the cable to the AcraDyne tool that will be used with the controller. AcraDyne pistol-style tools manufactured prior to January 2011 are hard-wired on the tool side and require no additional connection.


Step 3

Plug the female end of the power cable into the Power Cable connection (Figure 2, pg. 4).


Step 4


Plug the male end of the power cable into the appropriate power source.

Due to the variety of 220V power outlets worldwide, the standard power cable plug-end provided with the controller may need to be modified to connect to local 220V power outlets.

 The iEC Controller is designed to work with either a 110V or 220V input supply. When operating a 3000 series tool on 120V, the maximum speed of the tool is $\frac{1}{2}$ of its catalog speed. Since speed parameters are set as a percentage of maximum, the actual speeds of these tools run on 110V will be $\frac{1}{2}$ of the speed run on 220V.

Step 5

Turn the controller on by rotating the Power Disconnect Switch (Figure 1, pg. 4), to the POWER ON position, represented by the  symbol.

 When an iEC with SCC code 2.0 and higher is powered on, three messages will be shown on the display:

SYS INIT- indicates the system is initializing

IEC “#.##” - indicates the firmware version that is operating in the controller

SERVO FIRMWARE (A or B) — indicates the firmware of the controller’s servo module

These messages are normal and will clear as the system finishes initializing.

INITIAL SETUP

! If the controller is powered on without a tool connected the following message will be shown on the display:

AUT FLT 129

This message is normal and will clear once a tool is connected

Step 6

To turn the controller off, rotate the Power Disconnect Switch to the POWER OFF position, represented by the **0** symbol

! To reboot the controller without turning off the Power Disconnect, press and hold the buttons simultaneously for 3 seconds.

NEXT

+

SET

Factory & Default Parameter Sets

Before the user programs the iEC controller for the first time, or after resetting the controller to factory default settings, one of three different groups of parameters may be present in the controller:

DEFAULT WITH NO TOOL CONNECTED—These parameters will start at 10 Nm and increase up to 80 Nm in increments of 10 Nm

DEFAULT WITH TOOL CONNECTED—This will create a group of 3 individual parameter sets, one each at 30%, 60% and 80% of the connected tools maximum torque capacity

TEST PARAMETER SETS—Because every AcraDyne iEC controller is tested before being shipped, some parameter sets that were used in this testing may be present in the controller.

! If a parameter set is selected that has a target torque above the maximum capability of the tool, the following message will be shown on the display

EXT FLT 4096

This message will clear when an allowable parameter set is selected **or** when the out-of-range parameter set is reprogrammed to be within the capabilities of the tool.

Main Display Functions

Changing Parameter Sets


To change the parameter set that is active, press the **CHANGE PSET** button (Fig. 4) until the desired parameter set number is displayed.

With each separate press of the button the parameter set numeral will advance upwards through the highest parameter set that is programmed and then cycle back to parameter set #1. A maximum of 8 parameter sets can be programmed into the iEC controller.


The display for each type of strategy will vary. The main control parameter (Torque, Angle or both) will be displayed when the Parameter Set is selected. The different strategies will display as follows:



Example: PSET #2, Torque Control Strategy, 25 ft-lb Target

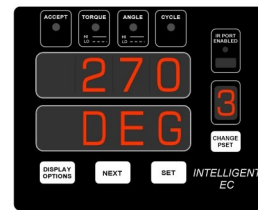

Example: PSET #3, Angle Control Strategy, 270 Degree Target

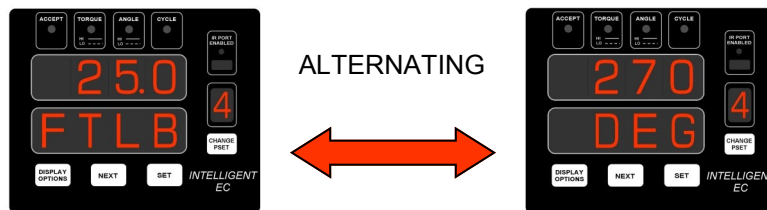

Example: PSET #4, Torque Control / Angle Control Strategy, 25 ft-lb Target, 270 Degree Target

Note: SCC Firmware Version 3.00 extends the number of parameter sets that can be programmed to 32. The extended parameter sets can be programmed via Toolware 3.0 or greater. For parameter sets 10 -32, the numeric Pset LED will flash the first digit, then the second followed by a pause. If any of the parameter sets are "Linked", the CHANGE PSET button will automatically skip to the first Pset of the Linked Pset group. (For information on Linked parameter sets, see the Setting Parameters section in the ToolWare portion of the user manual.)

Programming the Display Options

The Programmable Display Options feature in the iEC allows the user to select the information that will be displayed in the Secondary Display Field.

Step 1

Press the **DISPLAY OPTIONS** button (Fig. 4) to access the Display Options Menu.

Immediately a message will appear in the Primary Display Field (Fig. 4) that will indicate which display option is currently selected.

If no rundowns have been conducted since the most recent Power-On of the controller, the Secondary Display Field will display the default information relating to the current display option.

If rundowns have been conducted since the controller was last Powered-On, then the Secondary Display Field will display the value for that option pertaining to the most recent rundown in the current parameter set.

Main Display Functions

Step 2

To scroll through the available display options, press and release the **NEXT** button. Repeated presses will cycle the display options as follows



The definition of each Display Option is as follows:

DFLT (Default)	Field is blank if a Torque Control Strategy is programmed. For all other strategies the field will display the angle of rotation from Threshold to Final Torque
ANGL (Angle)	If selected, field will display angle of rotation for the previous rundown, regardless of strategy for the parameter set
BCNT (Batch Count)	Field will display the batch count information for the selected parameter set. Displayed values are current count (cc) and batch total (bt), with the information displayed as cc.bt .
TOT (Total Count)	Value shows the total number of rundowns for all parameter sets from midnight to midnight
OK (OK Count)	Value shows the total number of acceptable rundowns for all parameter sets from midnight to midnight
NOK (NOT OK Count)	Value shows the total number of unacceptable rundowns for all parameter sets from midnight to midnight
CP (Cp Value)	Statistical value is Cp for selected parameter set based on collection of programmed-minimum number of rundowns. This value is reset upon controller initialization or new Parameter Set Download or Tool Change
CPK (Cpk Value)	Statistical value is Cpk for selected parameter set based on collection of programmed-minimum number of rundowns. This value is reset upon controller initialization or new Parameter Set Download or Tool Change
JTRT (Joint Rate)	Displays joint rate of selected Parameter Set based on previous rundown. The value is displayed in degrees of rotation from the Joint Rate Threshold (not Parameter Set Threshold) to final torque. By default, the Joint Rate Threshold is 10% of target torque

Main Display Functions

Step 3

When the desired Display Option is selected, press the **SET** button (Fig. 4) to lock this option as the visible display. Once the SET button is pressed, the display screens will clear. Upon completing a rundown cycle, the value for the selected Display Option will be shown in the Secondary Display Field (Fig. 4).



The selected Display Option will be displayed for *all* Parameter Sets.

Display Optional Values for Individual Rundowns

By scrolling through the Display Options after a rundown cycle, the value for each option can be quickly viewed.

Step 1

Immediately after a rundown cycle, the selected Display Option will be shown in the Secondary Display Field. To view a different Display Option value, press the **NEXT** button before conducting another rundown.

Step 2


Continue to press the **NEXT** button to scroll through the available options. As each option is selected, the corresponding value will be displayed in the Secondary Display Field.



The Display Option that is last shown before another rundown is conducted will be set as the programmed display option.

To stop viewing the Display Option for the most recent rundown, simply conduct another rundown or press CHANGE PSET to select a different parameter set.

Using the Optional Keypad Display Module (KDM)

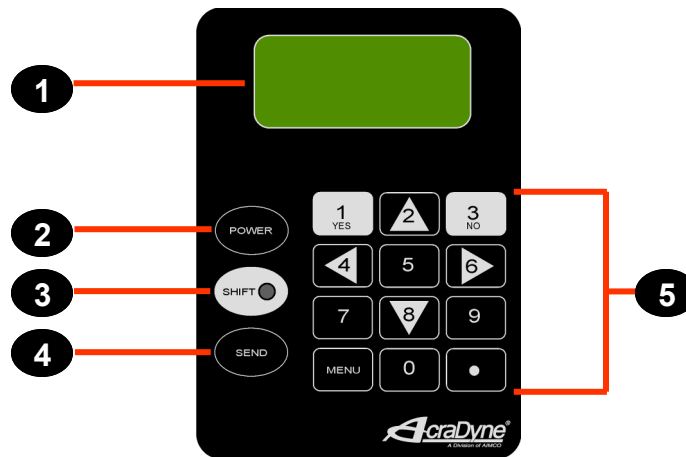

- 1—KDM Display Screen
- 2—KDM Power On / Off Button
- 3—Shift Button—used to access alternate functions on highlighted buttons
- 4—SEND Button—Used to send new or edited parameter sets to the tool and controller
- 5—Numerical / Alternate Function keypad

Parameter Set Terms

ANGLE CONTROL / TORQUE MONITOR—Control strategy in which angle is the control parameter, but torque is monitored.

ANGLE TARGET—Desired value for angle rotation; measured from threshold torque value.

AUTO-SET—Feature that allows manual entry of control parameters, but all others are determined by system defaults.

CYCLE COMPLETE—Torque level that determines the completion of a fastening cycle.

THRESHOLD—The torque value above which the system is, “in cycle” and data points are stored.

DOWNSHIFT TORQUE—Torque level at which the spindle changes from free speed to downshift speed.

ERGO MODE—Ramps the cut-off of power after reaching target torque, providing an ergonomic shutoff during a hand-held tightening operation. (*Can negatively effect cpk calculations*)

HI LIMIT—The upper control limit for torque and/or angle.

LO LIMIT—The lower control limit for torque and/or angle. Must be set lower than target parameter. Any torque/angle lower than this value will be indicated by a yellow light and with a Lo Torque and/or Low Angle error on KDM.

RPM FREE—Spindle output speed at the beginning of a tightening cycle, entered as a percentage of maximum tool speed.

RPM DOWN—Spindle output speed after exceeding downshift torque; entered as a percentage of maximum tool speed.

SSTART—(Soft Start) Speed of output spindle ramps up at a programmable rate to RPM free speed; allows the operator or system to engage the socket onto the fastener in a more controlled fashion.

TARGET TORQUE—Torque level which, when achieved, causes the power to the drive motor to be cut off.

TORQUE CONTROL—Control strategy in which torque is the only control parameter.

TORQUE CONTROL / ANGLE MONITOR—Control strategy in which torque is the control parameter, but rotational angle is monitored. A valuable strategy for controlling torque while also checking for cross threaded or stripped fasteners.

Using the Optional Keypad Display Module (KDM)

The Optional KDM allows for quick access to the IEC Control programming features. Not all features are accessible by use of the KDM. For access to higher level features (i.e..Batch Programming, Button Options, Linked PSet) please use a PC connected to the controller and the ToolWare software interface program.

Turning the KDM On

After turning on the iEC Controller (described in Initial Set-up, Pg. 6), press the **POWER** button on the KDM.

The following text will be shown on the KDM Display Screen:

-- ACRADYNE --
KDM 2007
FIRMWARE REV J
IEC CONNECTED

-- MAIN MENU --
1) SETUP PSET
2) CALIBRATION
3) ADMIN

Turning the KDM Off

- 1) Turning off the iEC Controller (detailed in Initial Set-up, Pg. 6)
- 2) Pressing the **POWER** button on the KDM for 2 seconds.

Note: The KDM does not support Psets above 8, Linked Psets, or Batch Control. These features are available via Toolware 3.0 or greater.

Main Menu: 1) Parameter Setup

Starting from the **Main Menu**, a variety of functions can be accessed through the KDM. Programming, calibration, controller set-up, security set-up, and error analysis can all be achieved through properly using the KDM. The following sections will detail the Menu Structure of the KDM and the various functions within each area.

Setting Up Parameter Sets

This section will detail how to set up parameter (PSETS) sets for assembly by using the KDM. There are two methods of programming a PSET—Quick Start or Configure.

QUICK START:

Quick Start Mode only requires the user to select the desired parameter set and target torque. All other values are set according to the system defaults (further explained in the ADMIN section—see Page 17).

CONFIGURE:

Configure Mode allows the operator to set up a new parameter set or edit all programmable operating functions for an existing parameter set.


Using the Optional Keypad Display Module (KDM)

Accessing Quick Start Parameter Sets

From the MAIN MENU, press **1** for **SETUP PSET**

Press **1** for **QUICK START**

The following text will be displayed on the KDM display screen:

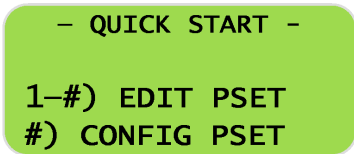


- QUICK START -
1-#) EDIT PSET
#) CONFIG PSET

Choose from **EDIT PSET** or **CONFIG PSET**. See the following sections for instructions on editing or configuring Quick Start parameter sets.

Editing Quick Start Parameter Sets


Depending on the number of Parameter Sets that have previously been programmed into the iEC Controller, the user will have the option of choosing from 1 to 8 parameter sets to edit.

Press the number of the Parameter Set that is to be edited. The following text will be displayed on the KDM display screen:




- QUICK START -
TORQUE: ##.#
UNITS: LB-FT
PS#

To change the target torque value in .1 unit increments press

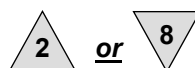

To change the target torque value in 1.0 unit increments press

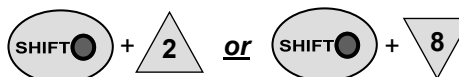

After the target torque is entered correctly, press



Verify that the correct parameter set is active by observing the **PSET Indicator** on the Main Display Panel. If the desired parameter set is not active, press **CHANGE PSET** to cycle through the available parameter sets until the appropriate set is displayed.

The tool is now ready to be run to the appropriate target torque value.

Using the Optional Keypad Display Module (KDM)

Configuring New Quick Start Parameter Sets



Depending on the number of Parameter Sets that have previously been programmed into the iEC Controller, the new parameter set will automatically be assigned a value from 2 through 8. Press the number on the KDM that corresponds to the number for the next parameter set to be configured. For example, if the following text were to be displayed in the Quick Start screen:





- QUICK START -
1-3) EDIT PSET
4) CONFIG PSET

the user would press **4** on the keypad to configure a new Quick Start Pset.

The following text will be displayed on the KDM display screen:

- QUICK START -
TORQUE : ##. #
UNITS: XX-XX
PS#

To change the target torque value in 0.1 unit increments press  or 

To change the target torque value in 1.0 unit increments press  +  or  + 

After the target torque is entered correctly, press 

Verify that the correct parameter set is active by observing the PSET Indicator on the Main Display Panel. If the desired parameter set is not active, press **CHANGE PSET** to cycle through the available parameter sets until the appropriate set is displayed.

The tool is now ready to be run to the appropriate target torque value.



When exiting from Quick Start mode, all torque values are cleared from the KDM. Upon re-entering Quick Start mode, target torque values for all parameters will be set to the value determined by applying the default percentage to the tool that is connected to the controller.

Configuring a Complete Parameter Set

For a detailed explanation of each of the programmable functions within a parameter set see the list of key terms in **Parameter Set Terms** on page 11.

From the MAIN MENU, press **1** for **SETUP PSET**

Press **2** for **CONFIGURE**

The following text will be displayed on the KDM display screen:

-CONFIGURE PSET-
1-#) EDIT PSET
#) CONFIG NEXT

Using the Optional Keypad Display Module (KDM)

Depending on the number of Parameter Sets that have previously been programmed into the iEC Controller, the user will have the option of choosing from 1 to 8 parameter sets to edit. If the user chooses to configure a new parameter, the next set will be assigned the next available PSet value, up to 8.

Press the button on the KDM corresponding to the PSET that will be edited or configured.

The following text will be displayed on the KDM display screen:

1) TQ CONTROL
2) TQCNT/ANGMON
3) TQMON/ANGCNT
4) TQCNT/ANGCNT



If editing a parameter set, the Control Strategy (definitions on page 11) of the PSET will be identified by an asterisk.

Press the button on the KDM corresponding to the desired Control Strategy.

The following text will briefly be displayed on the KDM display screen:

- CONFIGURE PSET -
UNITS: XX-XX
"CONT STRATEGY"

followed by the following text:




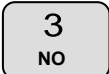
TQTARGET:##.# >
HI LIMIT:##.#
LO LIMIT:##.#
+/- %:##.# PS#

The **PS#** text in the bottom-right corner of the display is for the users reference and identifies the PSET that is being configured or edited.




 
Entering / Editing Values in the KDM

The flashing cursor highlights which field can be changed. Two possibilities exist for entering values into a field, depending on which function is being programmed:





For numeric values, press the appropriate key on the KDM.

For **YES** or **NO** entries, press  +  or  + 



When an **<** and/or **>** symbol appears in the upper-right corner of the KDM display, this notifies the user that additional functions may be accessed by scrolling to the previous or next page of text. To scroll to one of

these pages, press  +  or  + 

Using the Optional Keypad Display Module (KDM)

To move to and modify the next or previous function, press  +  or  + 

The cursor will then highlight the field that can be modified.


To clear a mistakenly entered value, press  + 

When all functions have been modified appropriately, press 

Verify that the correct parameter set is active by observing the PSET Indicator on the Main Display Panel. If the desired parameter set is not active, press **CHANGE PSET** to cycle through the available parameter sets until the appropriate set is displayed.

The tool is now ready to be run to the appropriate target torque value.

! The AUTO-SET function is under development for future versions of the iEC controller.

! If the user exits the CONFIGURE mode before pressing  all edits and modifications that have been entered will be lost and the entries will revert back to the previous value.

Main Menu: 2) Calibration

The Auto Cal is non functional for the user.

Using the Optional Keypad Display Module (KDM)

Main Menu: 3) Administration Functions

Parameter Set Defaults


Parameter set defaults are the values used to calculate control parameters when using either Quick Start or Auto Set. This is also the area where units of measurement for all parameters is set.

To access the Parameter Set Default function:

From the MAIN MENU, press **3** for **ADMIN**

Press **1** for **SETUP PSET**

The following text will be displayed on the KDM display screen:



TQTARGET%:##.##
TQ +/- %:##.##
TQTHOLD%:##.##
TQDSHIFT%:##.##

Navigation and value-entry is the same as described in the section Setting Up Parameter Sets on pages 12—16.

All programmable default values are described below:

TQTARGET%: The default *torque target* shown when entering quick programming. The value entered is a percentage of the maximum torque of the tool. For example, if the value entered is 80 and the maximum torque of the tool is 30 Nm, the default target torque when entering quick programming will be 27.0 Nm.

TQ+/-%: The default percentage used for *high and low torque limit*. The value entered is a percentage of target torque.

TQTHOLD%: The default *torque threshold*. The value entered is a percentage of target torque.

TQDSHIFT%: The default setting for *torque downshift* point. The value entered is a percentage of target torque.

CYCCOMP%: The default setting for *cycle complete* torque. The value entered is a percentage of target torque.

RPMFREE%: The default setting for *RPM free speed*. The value entered is a percentage of maximum output speed in revolutions per minute (RPM). 3000 series AcraDyne tools operating at 120V will run at 1/2 of the programmed speed.

RPMDOWN%: The default setting for spindle speed after crossing the downshift torque level. The value entered is a percentage of maximum output spindle speed in revolutions per minute (RPM).

UNITS: The default engineering units for operation. The KDM is only capable of using one engineering unit for all parameter sets. Changing the units in this section will affect all parameters sets.

Using the Optional Keypad Display Module (KDM)

Security

The security function allows the user to set up a password in order to prevent unauthorized persons from altering the programming of the iEC controller. Once the password function is activated, the user will be prompted to enter the correct password whenever attempting to navigate past the Main Menu.

! If the user changes the password and then loses or forgets the new password, the Factory Default password will still allow the user to access all menus and functions. Please call your AIMCO sales representative for assistance in entering the Factory Default Password.

To access the ADMIN SECURITY function:

From the MAIN MENU, press **3** for **ADMIN**

Press **2** for **SECURITY**

The following text will be displayed on the KDM display screen:

-ADMIN SECURITY-
1) ENABLE PWORD
2) CHANGE PWORD

If the password function is already enabled, the text will read **1) DISABLE PWORD**

To activate the password function, press **1) ENABLE PWORD**

To enter a new password, press **2) CHANGE PWORD**

The following text will be displayed on the KDM display screen:

NEW PWORD:

Enter a 4-digit password. Once the four digits are entered, the user will automatically be prompted to confirm the password.

When the correct password is confirmed, the following text will briefly be displayed on the KDM display screen:

PASSWORD CORRECT
SAVING PASSWORD
PASSWORD: ####

Using the Optional Keypad Display Module (KDM)

Tool Information

This section of the ADMIN menu provides the user with useful information regarding the tool that is currently connected to the iEC controller. This information may be needed for reference when setting up parameter sets or calibrating the tool.

The items that can be viewed in TOOL INFO are:

ID: The serial number for the tool

Tq: The maximum torque rating of the tool, in the units that are selected in PSET DEFAULTS

Speed: The maximum output-spindle speed of the tool in revolutions per minute (RPM)

CAL: The scaled value that correlates the voltage signal of the transducer to a torque value

To access the ADMIN SECURITY function:

From the MAIN MENU, press **3** for **ADMIN**

Press **3** for **TOOL INFO**

Reset Factory Defaults

The **RESET DEFAULTS** menu allows the user to quickly reset the iEC Controller setting to the original factory default values.

The values that can be reset are:


- 1) TOOL CAL VALUE
- 2) LOGIC I/O
- 3) PARAMETER SETS

To access the RESET DEFAULTS MENU:

From the MAIN MENU, press **3** for **ADMIN**

Press **4** for **RESET DEFAULTS** (this choice can also be viewed by scrolling to the next text page to view the additional ADMIN MENU options)

The following text will be displayed on the KDM display screen:

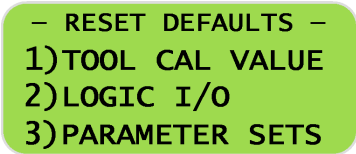

– RESET DEFAULTS –
1)TOOL CAL VALUE
2)LOGIC I/O
3)PARAMETER SETS


The user can then select the values to reset by pressing the corresponding number on the keypad.

Using the Optional Keypad Display Module (KDM)


The user will be prompted to confirm the desire to reset values with the following text:

– RESET DEFAULTS –
RESET “CHOICE”
TO DEFAULT Y/N ?

To select Y and confirm the desire to reset the values, press

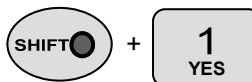

To cancel the reset process, press

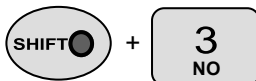

Error Codes

By default, the iEC Controller only displays Error Codes in the Primary and Secondary Display Fields of the Main Display Panel (Figures 1 & 4). These errors will display automatically when recorded. Error codes are listed in Appendix A in this users guide. For additional information on Error Codes contact AcraDyne Technical Support or your AIMCO representative.

Filter Frequency

The Filter Frequency is non functional for the user.

Using the Optional Keypad Display Module (KDM)

Adaptive Control

ADAPTIVE CONTROL provides the user with a function to allow the iEC Controller to adapt to the joint dynamics of a particular application and to adjust the target torque accordingly in order to provide accurate and repeatable performance.


ADAPTIVE CONTROL works only in Torque Control or Torque Control / Angle Monitor Strategies.

The user may access the ADAPTIVE CONTROL function by following these steps:

From the MAIN MENU, press **3** for **ADMIN**

Press **7** for **ADAPTIVE CONTROL**

The following text will be displayed on the KDM display screen:

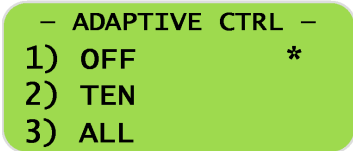

```
- ADAPTIVE CTRL -  
1) OFF *  
2) TEN  
3) ALL
```

The currently active choice is noted by an asterisk to the right of the option.

The Factory Default setting for ADAPTIVE CONTROL is **1) OFF**.

To enable or disable ADAPTIVE CONTROL, press the number on the keypad corresponding to the desired choice.

There are two modes of operation for ADAPTIVE CONTROL:

Adapt To 10 Rundowns:

The Control Target Torque is adjusted by the difference between the mean of the first 10 rundowns and the hi/lo limit mean.

Adapt To All Rundowns:

The Control Target Torque is adjusted by a *percentage* of the difference between the mean of each consecutive 10 rundowns and the high/low limit mean. This percentage is programmable through advanced user access.

! ADAPTIVE CONTROL should be used only in specific situations. Please contact AcraDyne Technical Support or your AIMCO representative for information on using and adjusting ADAPTIVE CONTROL.

Networking

The controller has several networking options available including Ethernet and hardwired field bus. All parameters pertaining to networking are configured in the web interface via its Ethernet.

Ethernet

Each Ethernet connection can be configured to communicate with most popular plant equipment including data collection servers, laptop software, and PLCs.

Ethernet ports by default are set to an IP address of 10.10.30.150 and need to be changed before being put into service.

To gain initial access to the controller:

- Configure a computer's Ethernet port to an IP address of 10.10.30.xxx. Do not set it to 10.10.30.150 that address is assigned to the controller. 10.10.30.99 works in most cases.
- Connect an Ethernet crossover cable from the computer to the controller.
- Launch the computer's web browser. Type the controller IP address (10.10.30.150) into its address bar.
- Navigate to the communications page.
- Set the desired IP Address, IP Mask, and Gateway.
- Cycle power on the controller and connect it to the network.

Web Interface

The controller's web interface is available from any computer on that has access on the local network. To access the web interface launch a browser and type the controller IP address into its address bar.

From the interface you will have access to the controller's status, internal data files, and parameters. The pages do not automatically refresh but selecting refresh from the browser will reload the latest information from the controller. Data files will be standard ASCII text in CSV (comma separated variables) format that can be opened in Microsoft Excel and other programs.

On pages with parameters there will be a submit button to apply any changes. All parameters on the page are submitted when the button is hit. When submitted each parameter will get range checked against allowable limits. If a parameter is outside of its range it will be limited to its minimum or maximum value. When the page is redrawn the edit fields will contain each parameter's final value.

Security

The web interface has an option to add a user password for security. A password is never required to view the web pages on the controller. It is only required to make a change to a parameter. If the controller password is not set (a zero length string) the user will not be prompted to enter a password for any changes. The controller is shipped from the factory without a password.

Networking

The security feature utilizes the authentication built into the browser. When a change to a parameter is made the controller checks the programmed password. If a password is required the controller will request it from the browser and in turn the browser will prompt the user. The browser will request a "User name" and "password". Since the controller only contains one password (one user) the "User name" can be left blank. Once the password is entered it is returned to the controller where it will be checked and if it is correct the parameters are saved. If it is incorrect the controller will request it from the browser again.

After a password has been entered most browsers will cache it and return on subsequent request without prompting the user. So as long as the browser is not closed it would not be necessary to enter the password on every change to the parameters.

To remove a password from the controller it just needs to be set to a zero length string and saved via the submit button. Of course this action requires the existing password. If the password is lost or unknown contact your AIMCO representative for a method of retrieval.

FTP

The controller has the ability to provide an FTP server to allow the transfer of stored rundown data. For security reason it is turned off by default. Changing the setting to from off to on or on to off will not take effect till power is cycled on the controller. Once enabled the FTP server will allow anonymous logins. The only files available are the rundown results in CSV and TXT format. These can be transferred to the client and deleted. No other FTP server features are supported.

Toolsnet

The controller has the ability to send rundown data to a ToolsNet server. Once the controller is on the local network there are five parameters that must be set to store data correctly on the server.

1. **Server IP Address:** This is the IP address of the Toolsnet server. If the server is on another subnet you will also have to verify the gateway in the Ethernet settings.
2. **Server Port Number:** This is the TCP port the server is listening on for a new connection. The default for this is 6547 but it should be verified with the local Toolsnet server administrator.
3. **Station Id:** This is used to identify the data in the Toolsnet database. Work with your local Toolsnet server administrator to set this correctly.
4. **System Number:** This is used to identify the data in the Toolsnet database. Work with your local Toolsnet server administrator to set this correctly.
5. **Station Number:** This is used to identify the data in the Toolsnet database. Work with your local Toolsnet server administrator to set this correctly.

PFCS

The controller has the ability to communicate over the Chrysler PFCS protocol over Ethernet or one of the serial ports. Once the controller is connect to the desired network there are several parameters used to configure it's behavior on the PFCS network.

1. **Server IP Address:** This is the IP address of the PFCS server. If the server is on another subnet you will also have to verify the gateway in the Ethernet settings. This parameter is not used for a serial connection to PFCS.
2. **Server Port Number:** This is the TCP port the server is listening on for a new connection. This parameter is not used for a serial connection to PFCS.
3. **Ack Time Out (sec):** The amount of time the controller will wait for an acknowledge from the PFCS server.
4. **No. Retries:** The number of times the controller will retry a message if it is not answered by the PFCS server.
5. **Reconnect Time Out (sec):** The amount of time the controller will wait before attempting to reconnect to the PFCS server.
6. **Connection Inactivity Time (sec):** The amount of time the controller will wait before send a keep alive message.
7. **Auto Machine Id:** If set to a 1 the controller will request a machine ID from PFCS. If it is a 0 it will use the programmed one from each parameter set.

Networking

Open Protocol

The controller has the ability to accept an “Open” protocol connection. This connection is available over Ethernet and/or the standard serial ports. Through this connection you can enable/disable the tool, set the active parameter set, collect rundown data, and much more.

1. **Port Number:** The TCP port number the controller listens on to accept an Open protocol connection via Ethernet. The default port is 4545 but can be changed if required.
2. **Cable Loss Detection:** Only used for a serial Open protocol connection. If set to 1 the controller will close the connection on a time-out. If it is set to 0 the controller will not close the connection. See the latest Open protocol specification for details on time-outs and keep alive messages.
3. **Cell ID:** Optional variable that is passed through the Open protocol connection.
4. **Channel ID:** Optional variable that is passed through the Open protocol connection.
5. **Controller Name:** Optional variable that is passed through the Open protocol connection.

To set up a serial port for Open protocol set the function on the desired COM port to “Open Protocol” and cycle the power on the controller.

Networking

The Controller supports the following MIDs. See the latest Open protocol specification for details on each MID.

MID	Description	Note
0001	Communication start	
0003	Communication stop	
0010	Parameter set numbers upload request	
0012	Parameter set data upload request	
0013	Parameter set data upload reply	
0018	Select Parameter set	
0020	Reset Parameter set batch size	
0040	Upload tool data	Rev 1 and 2 supported
0042	Disable tool	
0043	Enable tool	
0050	Vehicle Id Number download request	
0051	Vehicle Id Number upload subscribe	
0054	Vehicle Id Number upload unsubscribe	
0060	Last tightening result data subscribe	Rev 1-2 and 999 supported
0063	Last tightening result data unsubscribe	
0070	Alarm subscribe	
0073	Alarm Unsubscribe	
0080	Read time upload request	
0082	Set Time in the Torque Controller	
0150	Identifier download request	
214-215	IO device status messages	
216-219	Relay function subscription	Relays 1 ,2, 5-8, 11, 19-22, 24 only
220-223	Digital In function subscription	Input 1, 3, 8, 9, 16-18, 53 only
9999	Keep alive message	

Networking

Chrysler PFCS

The controller has the ability to connect to the Chrysler PFCS network. Once the controller is on the local network there are several parameters that must be set to work correctly.

1. **Server IP Address:** This is the IP address of the Chrysler server. If the server is on another subnet you will also have to verify the gateway in the Ethernet settings.
2. **Server Port Number:** This is the TCP port the server is listening on for a new connection.
3. **Ack Time Out:** This is the amount of time the controller will wait for an acknowledge message from the server. The default is 3 seconds.
4. **No. Retries:** The number of retries the controller will attempt before disconnecting. The default value is 3.
5. **Reconnect Time Out:** The amount of time the controller will wait before attempting to reconnect to the server. The default value is 20 seconds.
6. **Connection Inactivity Time:** The amount of time the controller will wait between connection attempts. The default value is 120 seconds.
7. **Auto Machine Id:** If set to "Yes" (default) the machine ID will be provided by the Chrysler PFCS server upon connection. If set to "No" the machine ID is entered per parameter set on the "Advanced" tab on the web interface. This will result in each parameter set having its own ID.

Networking

AIMCO Database

The controller has the ability to send rundown data to an AIMCO data collection server. Once the controller is on the local network there are two parameters that must be set to store data correctly on the server.

1. **Server IP Address:** This is the IP address of the AIMCO data collection server. If the server is on another subnet you will also have to verify the gateway in the Ethernet settings.
2. **Server Port Number:** This is the TCP port the server is listening on for a new connection. See your local AIMCO data collection server administrator for the correct port number.

Networking

Modbus TCP

The controller will accept a connection from a Modbus TCP master.

Controller Outputs

The Controller's outputs are located at address 0 and contain one status word.

	Controller Outputs															
	Bits															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Address 0	Handshake			Job Complete			Healthy	Running	Process number							

Bit	Name	Function
0-7	Process Number	Process number echo. Latched while it is in a job.
8	Running	Indicates the tool is running.
9	Healthy	Indicates the controller has no faults.
10	Not used	
11	Not used	
12	Job Complete	Indicates the job is complete. Will go off when Enable input goes off.
13	Not used	
14	Not used	
15	Handshake	Echo of the Handshake input

Controller Inputs

The Controller inputs are located at address 1024 and 1036. Address 1024 contains one control word and 1036 contains the 20 character VIN.

		Controller Inputs																
		Bits																
		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Address 1024	Handshake						Abort	Enable	Process number									

Bit	name	Function
0-7	Process Number	Process number input. The enable must be off to change the Process Number. On a change to the Process Number the batch is also reset.
8	Enable	On the rising edge of Enable the tool will be enabled.
9	Abort	If Abort is on the tool will be disabled.
10	Not used	
11	Not used	
12	Not used	
13	Not used	
14	Not used	
15	Handshake	Will be echoed to the Handshake output

Networking

Profibus/DeviceNET

The controller can have an optional Profibus or DeviceNET interface. These interfaces are accomplished through the use of a serial bridge. The serial bridge is provided by MKS Instruments, Inc. See the latest MKS documentation for details on sending and receiving messages.

Logical I/O

The controller has five status bytes of outputs.

		Controller Outputs							
		Bit							
		7	6	5	4	3	2	1	0
Byte	0							Tool Ready	Tool Enable
	1				Bypass	Batch Complete	Msg Received	Status NOK	Status OK
	2								
	3		Buzz Slow	Buzz Fast	Red	Yellow	Green	Blue	White
	4			Pause	Red Flashing	Yellow Flashing	Green Flashing	Blue Flashing	White Flashing

Byte	Bit	Name	Function
0	0	Tool Enable	The enabled state of the tool.
	1	Tool Ready	On if the tool is ready to run. Will be off if tool is disabled or there is a fault on the controller.
	2-7	Not used	
1	0	Status OK	Rundown status on for an accept. This bit is timed and will be on for ½ second.
	1	Status NOK	Rundown status on for a reject. This bit is timed and will be on for ½ second.
	2	Msg Received	On to indicate a message has been received from the MKS module and the inputs have changed. This bit is timed and will be on for ½ second.
	3	Batch Complete	Indicates the batch is complete. Will go off when batch is reset or when the tool enable is turned off.
	4	Bypass	State of the bypass input.
	5-7	Not used	
2	0-7	Not used	
3	0-6	Light Tower Status	Bitwise status of the Light Tower lights.
	7	Not used	
4	0-5	Light Tower Status	Bitwise status of the Light Tower lights.
	6-7	Not used	

		Controller Inputs							
		Bit							
		7	6	5	4	3	2	1	0
Byte	0					PSET			
	1		PLC Enable	White Flash	Pause				Tool Enable
	2-11	Sequence Number							
	12-31	Serial Number							

Networking

Byte	Bit	Name	Function
0	0-7	PSET	Set the active parameter set of 1-32. If 0 the active parameter set is left unchanged.
1	0	Tool Enable	If PLC Enable is 0 this input is ignored. If PLC Enable is 1 this bit can be used to enable or disable the tool.
	1-3	Not used	
	4	Pause	Setting Pause to 1 cause the light stack to strobe. Setting it to 0 put the light stack back into its normal operation.
	5	White Flash	Setting White Flash to 1 cause the light stack to flash the white light. Setting it to 0 put the light stack back into its normal operation.
	6	PLC Enable	Setting PLC Enable to 1 allows the Tool Enable bit. Setting it to 0 disables the Tool Enable function.
	7	Not used	
2-11	0-7	Sequence Number	10 character Sequence Number.
12-31	0-7	Serial Number	20 character Serial Number.

Ethernet/IP

The controller will accept a connection from an Ethernet/IP master. The controller has two connection assemblies. One for the controller's output image (Assembly Instance 100). The default size of this is 34 bytes. If fastening results are not included then the size is 2 bytes. And one for the controller's input image (Assembly Instance 112) with a size of 32 bytes.

Logic I/O

The controller has two status bytes of outputs (Assembly instance 100).

		Controller Outputs							
		Bit							
		7	6	5	4	3	2	1	0
Byte	0							Tool Ready	Tool Enable
	1				Bypass	Batch Complete		Status NOK	Status OK

Networking

Optionally the controller can include the fastening results in the output image. Including the fastening results increases the output size to thirty four bytes of data.

		Controller Outputs							
		Bit							
		7	6	5	4	3	2	1	0
Byte	0							Tool Ready	Tool Enable
	1				Bypass	Batch Complete		Status NOK	Status OK
	2-5	Final Torque (Real)							
	6-9	Torque Low Limit (Real)							
	10-13	Torque Target (Real)							
	14-17	Torque High Limit (Real)							
	18-21	Final Angle (Real)							
	22-25	Angle Low Limit (Real)							
	26-29	Angle Target (Real)							
	30-33	Angle High Limit (Real)							

Each value will be sent as a real (IEEE 754 float) and can be configured as little or big endian to match the receiving equipment.

Byte	Bit	Name	Function
0	0	Tool Enable	The enabled state of the tool.
	1	Tool Ready	On if the tool is ready to run. Will be off if tool is disabled or there is a fault on the controller.
	2-7	Not used	
1	0	Status OK	Rundown status on for an accept. This bit is timed and will be on for ½ second.
	1	Status NOK	Rundown status on for a reject. This bit is timed and will be on for ½ second.
	2	Not used	
	3	Batch Complete	Indicates the batch is complete. Will go off when batch is reset or when the tool enable is turned off.
	4	Bypass	State of the bypass input.
	5-7	Not used	

Networking

The reading of the results data should be done at the rising edge of the “Status OK” and “Status NOK”. This will insure the correct results are captured consistently. All the results are zeroed after the “Status OK” and “Status NOK” are turned off.

The controller consumes thirty two bytes of inputs (Assembly instance 112).

		Controller Inputs							
		Bit							
		7	6	5	4	3	2	1	0
Byte	0	PSET							
	1		PLC Enable	White Flash	Pause				Tool Enable
	2-11	Sequence Number							
	12-31	Serial Number							

Byte	Bit	Name	Function
0	0-7	PSET	Set the active parameter set of 1-32. If 0 the active parameter set is left unchanged.
1	0	Tool Enable	If PLC Enable is 0 this input is ignored. If PLC Enable is 1 this bit can be used to enable or disable the tool.
	1-3	Not used	
	4	Pause	Setting Pause to 1 cause the light stack to strobe. Setting it to 0 put the light stack back into its normal operation.
	5	White Flash	Setting White Flash to 1 cause the light stack to flash the white light. Setting it to 0 put the light stack back into its normal operation.
	6	PLC Enable	Setting PLC Enable to 1 allows the Tool Enable bit. Setting it to 0 disables the Tool Enable function.
	7	Not used	
2-11	0-7	Sequence Number	10 character Sequence Number.
12-31	0-7	Serial Number	20 character Serial Number.

Error Proofing

Barcode Reader

The max length of a barcode is 20 characters if it is longer the leading characters will be lost and the last 20 will be used. Since barcode readers send their characters in burst there is no need to program in a length. The software just waits for the reader to stop sending. Once the barcode is read the results are stored as the VIN.

Barcode Options

When a good barcode is received it can optionally reset the batch and/or enable the tool. A good barcode is determined by the VIN Pattern Matching option. If the barcode matches one of the parameter sets VIN matching patterns it will be considered a good read.

Reset Batch on Good Barcode scan

If enabled, controller will reset the batch count on a good barcode scan.

Enable Tool on Good Barcode scan

If enabled, controller will enable the tool on a good barcode scan.

VIN Pattern Matching

All new VINs from barcode readers, Profibus, DeviceNET, Ethernet/IP or protocols are checked against for a VIN match against each PSET (starting from #1 and through #8). If a match is found the PSET is changed. In order to qualify as a match the received barcode must be at least as long as the match string. The match string can contain "don't care" characters ('.') as a wild card. In the example below a barcode of "Abc123" selects PSET #1, "abc567" selects PSET #2, "def" selects PSET #4, "ABc" selects PSET #5, and "AB" does nothing.

Pset	Process Number	VIN Match	Machine ID
1	<input type="text" value="1"/>	<input type="text" value="Abc"/>	<input type="text" value="TM01"/>
2	<input type="text" value="2"/>	<input type="text" value="abc"/>	<input type="text" value="TM02"/>
3	<input type="text" value="3"/>	<input type="text" value="DEF"/>	<input type="text" value="TM03"/>
4	<input type="text" value="4"/>	<input type="text" value="def"/>	<input type="text" value="TM04"/>
5	<input type="text" value="5"/>	<input type="text" value="..c"/>	<input type="text" value="TM05"/>
6	<input type="text" value="6"/>	<input type="text"/>	<input type="text" value="TM06"/>
7	<input type="text" value="7"/>	<input type="text"/>	<input type="text" value="TM07"/>


APPENDIX A: Error Codes & Descriptions

<u>Error Code #</u>	<u>Fault</u>	<u>Description</u>
<u>AUT1</u>		
1	TID Timeout	Tool ID board communication timeout
32	Tool GND	Ground circuit problem between controller and tool
64	Power On Throttle	RUN command on during power up
128	Button Timeout	Button (run, fwd, rev) communication timeout
256	Button State	Illegal button state (example fwd and rev)
512	Undefined Voltage	Tool voltage parameter undefined
2048	Tool Update Req'd.	Tool parameter file is not compatible with controller version
4096	Illegal Tool	Tool type is not compatible with controller
<u>CYC1</u>		
1	Free Run Timeout	Tool has run below threshold level with no load for 5+ seconds
2	Load Run Timeout	Tool has run above threshold level for 15+ seconds
4	Hall Error	Motor communication signal error
8	Tool Offset	Tool cannot reach target torque due to transducer error
64	Tool Level	Tool transducer output beyond electrical limits
512	Locked Rotor	Motor has stalled for 100+ milliseconds
1024	Drive Fault	Motor drive shut down or not responding
<u>EXT1</u>		
1	PSet Value	Illegal parameter set value
8	TID Param Value	Tool ID board communication error
32	TID Param Timeout	Tool ID board communication error
4096	Target Value Fault	Torque target out of range of tool capabilities
<u>EXT2</u>		
1	TID EE Write	Communication timeout while writing to tool memory
2	Drive Comm	Communication timeout reading / writing to motor drive
4	Vbus	Measured controller voltage is not within required limits
8	Drive Update Req	Drive firmware not compatible with low speed control


NOTE—Multiple Error Codes will be displayed as the sum of each error code number indicated in the table above; for example, AUT1: 129 represents AUT1: 128 and AUT1: 1, which would be a tool ID board timeout and a button timeout

Appendix B: KDM Menu Structures

Main Menu Structure

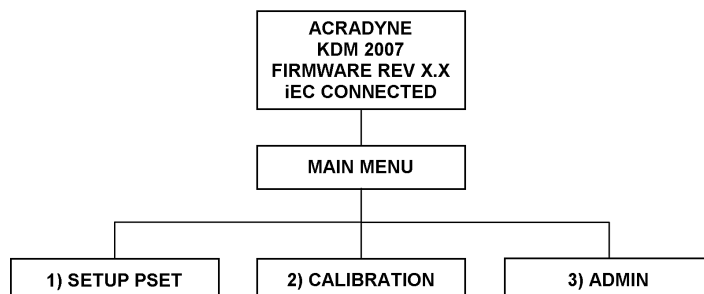


Parameter Set-up Menu

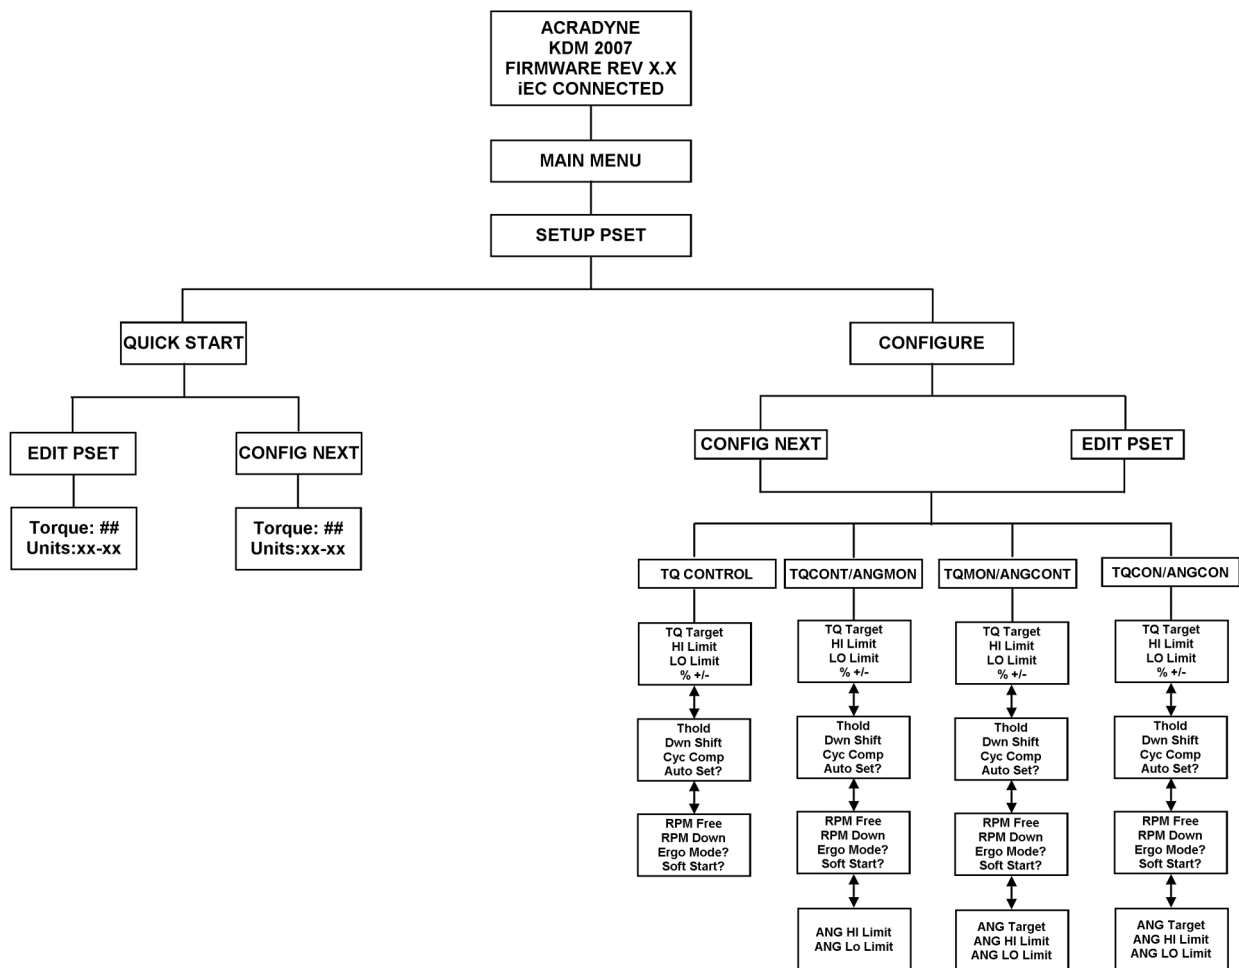


APPENDIX B: KDM Menu Structures

Administration Menu

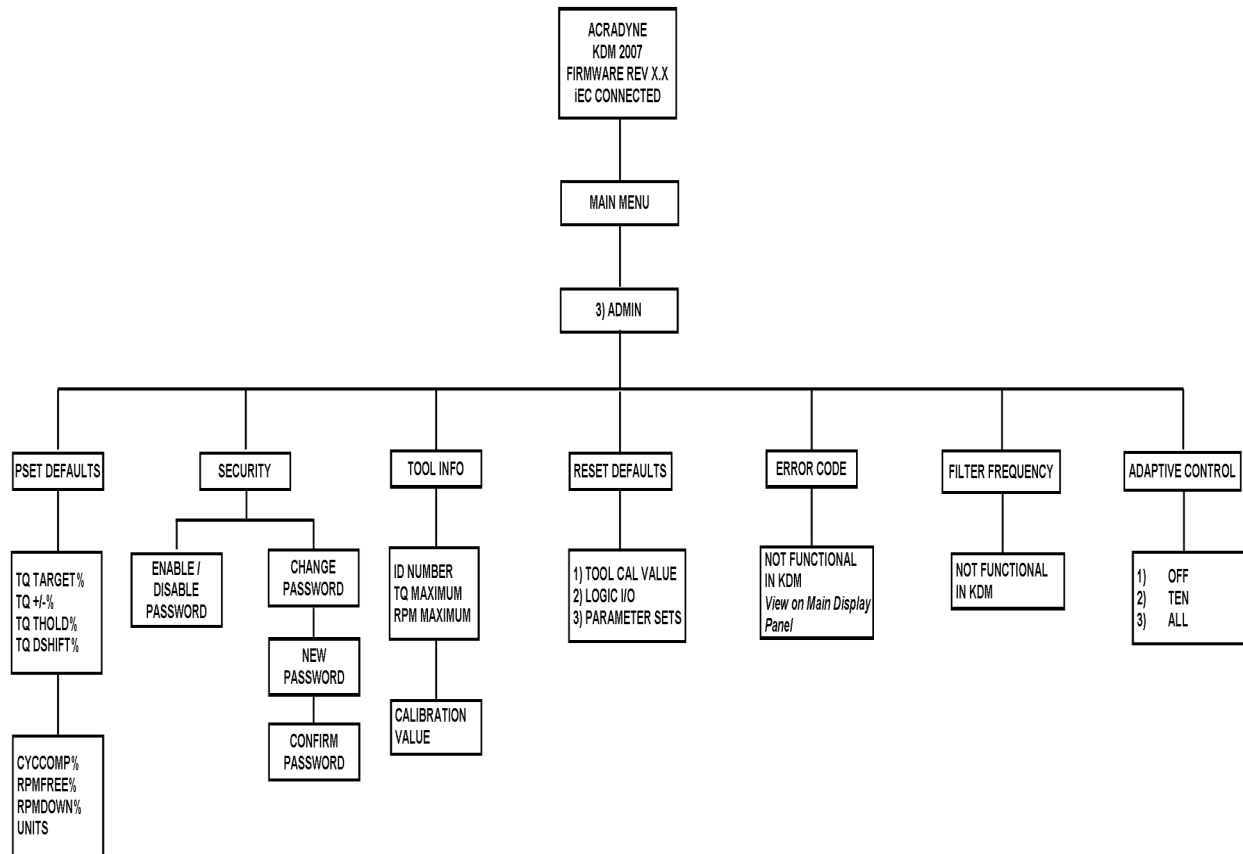

APPENDIX C: I/O Diagram & Definitions

iEC2, iEC3 and iEC4 series controllers have a range of Input / Output (I/O) capabilities. By referencing the diagram below, the user can access the controllers I/O functions for a variety of line control and error proofing functions. A connector kit is available (PT # 23490) from AIMCO to make connection to the I/O port on the iEC controller easier; contact your AIMCO sales representative for ordering information.

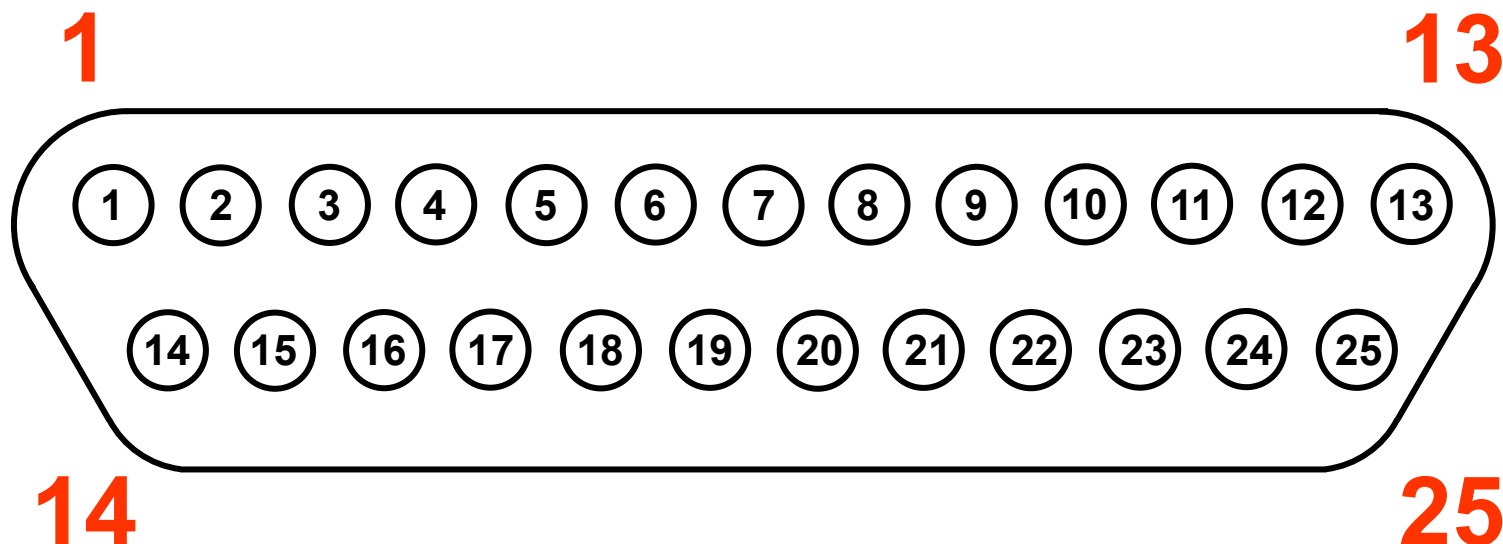

<u>Pin #</u>	<u>Definition</u>	<u>Pin #</u>	<u>Definition</u>
1	Output—Accept	14	Output—Torque Low
2	Output—Reject	15	Output—Angle High
3	Output—In Cycle	16	Output—Angle Low
4	Output—Torque High	17	Output—Batch Complete
5	Output—1-4 Common	18	Output—5-8 Common
6	Input—Run Forward	19	Input—Analog 1
7	Input—Run Reverse	20	Input—Analog 2
8	Input—Disable Tool	21	GND
9	Input—PSET Bit 1	22	GND
10	Input—PSET Bit 2	23	+24VDC
11	Input—PSET Bit 3	24	+24VDC
12	Input—Reset Batch	25	+24VDC
13	Input—Decrement Batch		

APPENDIX C: I/O Diagram & Definitions


LOGIC I/O CONNECTIONS

NOTE: Turn off the system before connecting to the LOGIC I/O port. There may be risk of damaging the controller.

24Vdc Supply: The internal 24Vdc power can supply up to 2 amps.

Inputs: The inputs are a sinking configuration with the common connected to the ground pins. 24Vdc is logic ON and 0Vdc is logic OFF.

LOGIC I/O INPUT CONNECTION EXAMPLE

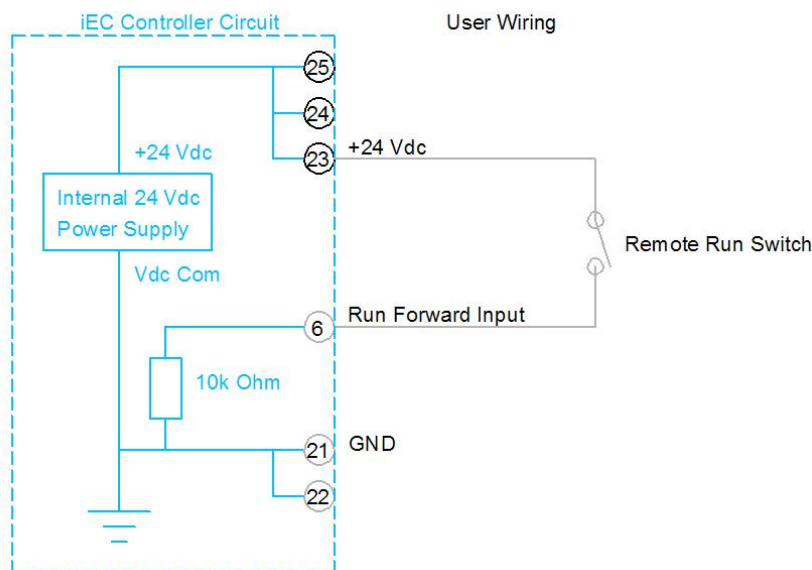


LOGIC I/O CONNECTIONS

Outputs: The outputs are normally open relay contacts. The relays are rated for 24Vdc, 1 amp.

Note: If the outputs are driving an inductive load such as a solenoid or large relay, it is recommended to add a diode in parallel with the load to prevent voltage surges.

LOGIC I/O OUTPUT CONNECTION EXAMPLE

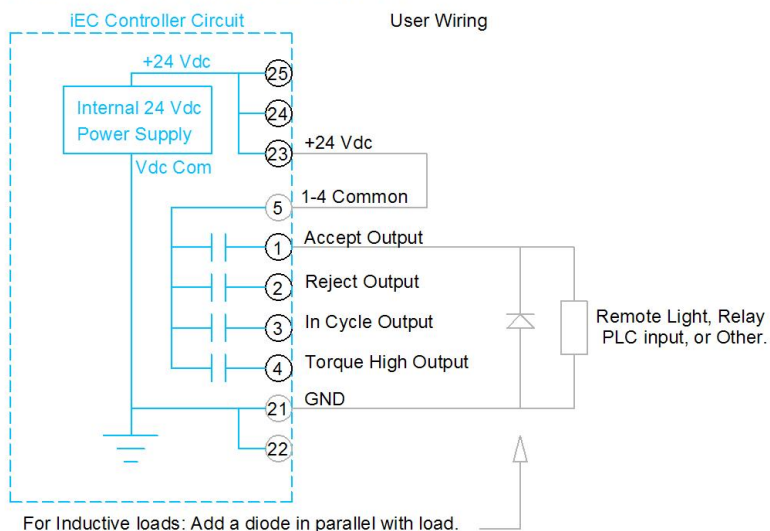

APPENDIX C: I/O Diagram & Definitions

I/O Definitions

Output 1, Accept

DB25 pin 1. The relay closes after achieving the target torque or target angle. The output is programmable for latched or timed operation using ToolWare.

Output 2, Reject

DB25 pin 2. The relay closes if the final torque or angle is outside of the High/Low limits. The output is programmable for latched or timed operation using ToolWare.

Output 3, In Cycle

DB25 pin 3. The relay is programmable for operating at threshold torque or on throttle pull. The relay closes when the torque level passes the threshold torque value when setup for “at threshold”. The relay closes when the throttle is pulled when setup for “at throttle”.

Output 4, Torque High

DB25 pin 4. The relay closes if the final torque exceeds the torque high level. The output is programmable for latched or timed operation using ToolWare.

Output 5, Torque Low

DB25 pin 14. The relay closes if the final torque falls below the torque low level. The output is programmable for latched or timed operation using ToolWare.

Output 6, Angle High

DB25 pin 15. The relay closes if the final angle exceeds the angle high level. The angle is measured from the torque threshold level. The output is programmable for latched or timed operation using ToolWare.

Output 7, Angle Low

DB25 pin 16. The relay closes if the final angle falls below the angle low level. The angle is measured from the torque threshold level. The output is programmable for latched or timed operation using ToolWare.

Output 8, Batch Done

DB25 pin 17. The relay closes after completing the batch count. The output is programmable for latched or timed operation using ToolWare. The batch count is also set using ToolWare.

Output 1-4 Common

DB25 pin 5. Connects to the common pins of output relays 1-4.

Output 5-8 Common

DB25 pin 18. Connects to the common pins of output relays 5-8.

Analog In 1

DB25 pin 19. Analog input 1, for future use.

APPENDIX C: I/O Diagram & Definitions

Analog In 2

DB25 pin 20. Analog input 2, for future use.

Input 1, Run Forward

DB25 pin 6. Runs tool forward. Buttons from I/O must be selected using ToolWare.

Input 2, Run Reverse

DB25 pin 7. Runs tool reverse. Buttons from I/O must be selected using ToolWare.

Input 3, Disable Tool

DB25 pin 8. Prevents the tool from running.

Input 4, Pset Bit 1

DB25 pin 9. Binary bit one for selecting parameter sets. See chart below.

Input 5, Pset Bit 2

DB25 pin 10. Binary bit two for selecting parameter sets. See chart below.

Input 6, Pset Bit 3

DB25 pin 11. Binary bit three for selecting parameter sets. See chart below.

Input 7, Reset Batch

DB25 pin 12. Sets the batch count to zero.

Input 8, Decrement Batch

DB25 pin 13. Decreases the batch count by one.

GND

DB25 pins 21 and 22. 0VDC.

+24VDC

DB25 pins 23-25. +24VDC

Parameter selection chart

	Pset 1	Pset 2	Pset 3	Pset 4	Pset 5	Pset 6	Pset 7	Pset 8
Bit 1	0	1	0	1	0	1	0	1
Bit 2	0	0	1	1	0	0	1	1
Bit 3	0	0	0	0	1	1	1	1

APPENDIX D: Light Assignment for Light Tower and Key Bypass

Light Color	Judgment
Green	Accept
Red	High Torque
Red Flashing	Low Torque
Yellow	High Angle
Yellow Flashing	Low Angle
Blue	Bypass
White	Tool Enabled
White Flashing	Assignable
Lights Strobe	Assignable

APPENDIX E: Dual Trigger Lever Functionality for Gen 3-4 tools

- Tool will not run unless both switches are pressed within 1 second of each other.
- If the 1 second timer times out, both switches must be released to reset the timer.
- If either trigger is released the tool stops.
- To restart the tool, both switches must be released and pressed within 1 second of each other again.
- Note: Logic I/O Run Forward and Run Reverse commands bypass the second trigger functionality.
- Note: Exceptions to second trigger function exist for Tube Nut Homing sequence.
- Note: The latching throttle feature is prevented in tools with dual triggers.

APPENDIX F: TUBE NUT Homing Sequence

- **Tubenut Homing Option: Home on Release and Repress of Trigger:**
 - If Single Trigger Lever:
 - Once the rundown is complete, releasing the lever and pressing it again is required to return the socket to home.
 - The tool will stop if the lever is released during homing, and will continue when the lever is again pressed.
 - Once the homing is complete, releasing the lever and pressing it again is required to start the next rundown cycle.
 - If Dual Trigger Levers are Installed:
 - Once the rundown is complete, releasing one of the levers, and pressing it again is required to return the socket to home.
 - Both levers must be pressed and held to return to home.
 - If either lever is released before the homing is complete the tool will stop. Homing will continue when both levers are again pressed.
 - Once the homing is complete, releasing both levers and pressing them again (within 1 second of each other) is required to start the next rundown cycle.
 - Arming Note:
 - If the arming timer times out the tool must be re-armed before homing can continue
- **Tubenut Homing Option: Auto Home on Release of Trigger:**
 - If Single Trigger Lever
 - Once the cycle is complete releasing the lever is required to return the socket to home.
 - Homing will continue until complete, regardless of lever position.
 - Once the homing is complete, releasing the lever and pressing it again is required to start the next rundown cycle.
 - If Dual Trigger Levers are Installed
 - Once the cycle is complete releasing either lever is required to return the socket to home.
 - Homing will continue until complete, regardless of either lever position.
 - Once the homing is complete, releasing both levers and pressing them again (within 1 second of each other) is required to start the next rundown cycle.
- **Tubenut Homing Option: Do Not Home:**
 - Once the cycle is complete the tool will not home and the tool is ready for the next cycle
 - Releasing the lever and pressing it again is required to start the next rundown cycle.

Notes: Using Logic I/O to run a Tubenut Tool.

- Once the rundown is complete, the run signal will need to be toggled in order to start homing.
- Once the homing is complete, the run signal will need to be toggled in order to start the next rundown cycle.
- Lever positions are ignored when using logic IO

APPENDIX G: FAQ'S

Q: HOW CAN I IMPROVE THE TOOL'S REPEATABILITY?

Generally speaking, slowing the tool down will improve its repeatability. Reducing the RPM FREE% value will give the tool more time to react as it approaches the target torque. Reducing the DOWNSHIFT TQ and/or RPM DOWN% may also have the same effect. Keep in mind that tool's RPM and Downshift points can affect ergonomics and overall productivity also; testing and running the tool on an application are the only ways to verify that the parameter set meets all requirements of the manufacturing process. Consistency of the joint characteristics must also be considered.

Q: HOW SHOULD I ADJUST THE SETTINGS FOR HARD JOINTS?

Because of how quickly torque rises upon reaching threshold torque, the tool should slow down to minimize overshooting the target torque. Two speed adjustments may be necessary. Maintain a reasonable RPM FREE% and RPM DOWN% during the rundown. Reduce the DOWNSHIFT (downshift torque) setting to give the tool more time to react once hitting the threshold torque. A value slightly above the THOLD (threshold torque) is recommended.

Q: HOW SHOULD I ADJUST THE SETTINGS FOR SOFT JOINTS?

A softer joint requires more tightening time. You can afford to increase the speed during the rundown and still maintain acceptable repeatability. Increase the DOWNSHIFT (downshift torque) setting a little at a time to decrease cycle time while still meeting the torque limit requirements.

Q: THE TOOL DOESN'T OPERATE WHEN I PRESS THE LEVER.

One common cause of this is choosing the improper tool for the parameter set; if the target torque value is above the tool's maximum rating then the tool will not run and "FLT EXT1 4096" will be displayed on the Main Display Panel. Another common reason for this problem is that the control ring on the tool is in a position that is programmed as NEUTRAL, the MFB button has been programmed for a non running scenario or the tool is running off I/O. Refer to the ToolWare Users Guide to correct this situation.

Q: HOW DO I CHANGE THE UNITS OF MEASURE?

The units of measure for torque is a universal setting for all parameter sets. To change the units, go to the Admin menu on the KDM and choose Pset Defaults. Keep in mind that the controller does not convert values for you. If you have a parameter setting of 10 Nm and you change the units to ft-lbs, the new setting is 10 ft-lbs. Changing the units of measure using Toolware allow for calculation of values. Refer to the Toolware users guide for more details. Lastly, being a universal setting, all parameter sets will use the same unit of measure.

Q: SHOULD I USE ERGO MODE?

At higher torque settings, using the Ergo Mode may seem more comfortable for some operators. The Ergo Mode releases the torque over a longer period of time, resulting in more gentle torque reaction. It's a personal preference; some operators prefer the Ergo Mode and some prefer to disable it. Ergo Mode is only enabled with 2000 series AcraDyne tools and may have a negative effect on cPk calculations.

APPENDIX G: FAQ'S

Q: ANGLE MEASUREMENT SEEMS TOO HIGH.

The controller starts to measure angle of rotation during the rundown when THOLD (threshold torque) is reached. If the threshold torque setting is below the prevailing torque of the joint, the tool will start measuring angle before the fastener is seated, resulting in a higher angle reading than anticipated. Ensure that the threshold torque value is above any anticipated prevailing torque of the joint.

Q: HOW CAN I RESET TO ALL THE FACTORY SETTINGS?

There are three groups of settings that can be reset - parameter sets, logic inputs/outputs, and calibration value. Within the ADMIN menu of the KDM, select RESET DEFAULTS. Resetting the parameter sets will erase all existing parameter set values. Resetting logic inputs/outputs will revert to the factory installed settings. Resetting the calibration value will revert the tool's calibration value to the factory setting burned into the tool's identification board. Resetting defaults is easily done using Toolware as well. Refer to the Toolware users guide for details.

Q: WHAT IS ADAPTIVE CONTROL?

Upon reaching target torque, the controller signals the tool to shut off and the tool stops. Depending on the speed of the tool and the joint rate, the final torque output may be higher than the target torque. This difference in torque is called "overshoot". Adaptive Control averages and centers the final torque readings around the target torque value. It averages the overshoot torque on 10 consecutive rundowns. After that, it pre-targets the tool to shut off before reaching the target so that the final reading is closer to your target torque setting. For example, if the target torque is 10 Nm, and the average of 10 readings is 10.2 Nm, using adaptive control will calculate the average overshoot torque of 0.2 Nm (10.2 - 10.0) and the tool will shut off at 9.8 Nm, so that the final torque reading is 10.0 Nm. Because of the way Cpk is measured, having more readings above the target torque decreases the Cpk value. Using Adaptive Control will result in a higher Cpk value since the range of the final torque readings is more centered on your target torque setting.

Q: WHAT IS THE CAL VALUE?

The cal value of an AcraDyne tool is based on a scale of 0 - 256 points. By adjusting this value, the torque values generated by the tool's transducer can be correlated with a torque value as determined by a master calibration transducer. Using the Calibrate Torque or Calibrate Angle features in Toolware with a Master Transducer can insure that your AcraDyne tool is operating in specification against the Master Transducer in your facility. Refer to the Toolware user's guide for details

Q: WHAT OTHER METHODS EXIST FOR PROGRAMMING THE IEC CONTROLLER?

By connecting the controller to a computer through the CAN connection or an existing Ethernet system, ToolWare can be used to conduct a wide range of programming, diagnostic and analytical procedures. For more information on ToolWare, refer to the ToolWare Users Guide section of this manual or contact your AIMCO sales representative.



ToolWare

**Operations Manual for PC Software Package to Interact
with iEC AcraDyne Tool Control Systems
Version 3**



PO Box 16460, Portland OR 97292-0460 • 800-852-1368 • Fax 800-582-9015

www.aimco-global.com

Introduction

ToolWare Version 3 is the software package designed for communicating with AcraDyne DC Electric Tool Controllers.

ToolWare provides an easy-to-use, Windows-based platform that can be used for:

- Tightening strategy programming
- Collection and viewing of rundown data
- Statistical analysis
- Rundown curve analysis
- I/O monitoring and configuration
- Maintenance and calibration alert programming
- Controller configuration programming
- Tool calibration
- Batch programming
- Network communication configuration

This version of ToolWare is designed to be fully compatible with all iEC series AcraDyne Tool Controllers and the iControl AcraDyne Tool Systems. In addition, this software compliments and enhances features and benefits of AcraDyne 1000, 2000, 3000 and 8000 (HT) series tools that are connected to and used with AcraDyne controllers.

While past versions of AcraDyne's ToolWare software have been completely backwards compatible, version 2.1.0.0 marks the first version that is no longer compatible with the discontinued Evolution series controllers. Should you require software to run the older Evolution or iControl controllers, please visit www.aimco-global.com and look to the "Downloads" tab. There you will find older versions of ToolWare that will function with the Evolution or iControl controllers and are downloadable free of charge.

Contents

Contents.....	3
1. Getting Started with ToolWare.....	5
1.1 Terminology and Abbreviations.....	5
1.2 Introduction to ToolWare.....	5
1.2.1 About this document.....	5
1.2.2 ToolWare Overview	5
1.3 ToolWare Installation	6
1.3.1 PC Requirements.....	6
1.3.2 Installing ToolWare	6
1.4 Introduction to ToolWare User Interface.....	7
1.4.1 ToolWare Menu Structure.....	8
1.4.2 Lower Menu Bar	9
1.4.3 Status Bar.....	9
1.5 Connecting IEC Controller with PC.....	10
1.5.1 Connecting to USB port	12
1.5.2 Connecting to Ethernet Port.....	12
1.5.3 Connecting to the network.....	12
2. Working with ToolWare.....	12
2.1 Connecting PC with the Controller.....	12
2.1.1 Setting up USB Connection.....	12
2.1.2 Setting up Ethernet Connection	13
2.2 Setting Parameters.....	15
2.2.1 Parameter Entry Fields.....	16
2.2.2 Parameter Sets.....	19
2.3 CurveWare.....	20
2.4 Monitoring I/O.....	21
2.5 File Menu	22
2.5.1 Connection	22
2.5.2 Open.....	23
2.5.3 Save	23
2.5.4 Print	23
2.5.5 Login.....	23
2.5.6 Language.....	23
2.5.7 Logoff	23
2.5.8 Exit.....	23
2.6 Controller	24
2.6.1 View Firmware Rev.....	24
2.6.2 Edit Configuration Parameters.....	24
2.6.3 Angle Offset Calibration	35
2.6.4 View/Edit Date Time	35
2.7 Tool.....	36
2.7.1 View.....	36
2.7.2 Edit.....	36
2.7.3 Calibrate.....	38

2.8	<i>Rundowns</i>	40
2.9	<i>Log Info</i>	41
2.10	<i>Statistics</i>	42
2.11	<i>AcraVision</i>	45
2.12	<i>System</i>	45
2.12.1	<i>Serial Test</i>	45
3.	<i>Addendum</i>	46
3.1	<i>Fault codes</i>	48
3.2	<i>Trouble Shooting</i>	47
3.3	<i>Tubenut Tool Setup Details</i>	48
3.3.1	<i>Tubenut Homing</i>	48
3.3.2	<i>Tubenut Pinch Detection</i>	50
3.3.3	<i>Tubenut Homing Start Input Logic Selection</i>	51

1. Getting Started with ToolWare

1.1 Terminology and Abbreviations

Terminology and abbreviations used in this manual are described in the table below.

Table 1.1 Terminology and Abbreviations

Term/Abbreviation	Explanation
Tool	AcraDyne Nut runners including Pistol, Straight and Tubenut wrench
Controller	AcraDyne iEC Controller
CIM	Controller Interface Module is an adapter between the Controller CAN bus and PC USB port
Rundown	A complete tightening cycle
SCC	Spindle Control Card
CNC	Communications Network Card
Gen 1	Tool with Light Ring
Gen 3 / 4	Tool with Multi-Function Button (MFB)

1.2 Introduction to ToolWare

1.2.1 About this document

This document is a manual for using ToolWare software. It consists of three parts:

Chapter 1: "Getting Started with ToolWare" introduces the software and gives step-by-step instructions on using it to run AcraDyne tools.

Chapter 2: "Working with ToolWare" gives detailed explanation of the software features and functions.

Chapter 3: "Addendum" provides reference information needed for troubleshooting and general knowledge.

1.2.2 ToolWare Overview

ToolWare is a software program designed for configuring AcraDyne electric tools and controllers directly from PC for threaded assembly applications. The ToolWare version in use must be compatible with the firmware of the Controller which consists of DSP firmware and CNC (Communication Network Card) firmware.

ToolWare compatibility with Torque Tool Controller Firmware

ToolWare Version	Compatible Firmware Release	
	DSP	CNC card
3.x.x.x	3.x.x	6.xx

Note. If you wish to update your controller software, please contact your AIMCO sales representative.

1.3 ToolWare Installation

1.3.1 PC Requirements

ToolWare requires a PC with 1GB or higher RAM and Windows XP or later version OS.

1.3.2 Installing ToolWare

To install ToolWare:

- Insert the installation CD and installation will start automatically. You can also manually start it by double clicking on “Setup.exe”.
- Follow instructions on screen to complete installation.
- User should have Administrative Privileges to install ToolWare.

It is recommended to have your ToolWare CD files or Download files stored on your Hard Drive.

1.4 Introduction to ToolWare User Interface

When ToolWare is initially opened, the selection box shown in Figure 1.4.1 will appear, if not connected to the controller.

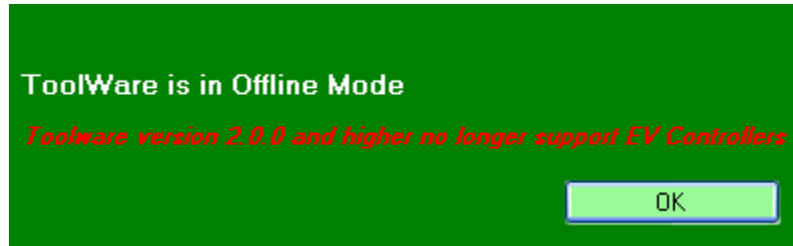


Figure 1.4.1 Dialog box for selection of controller platform being used

The ToolWare interface is similar to the workspace of most MS Windows applications. Figure 1.4.2 shows the main screen and structure consisting of two menu bars.

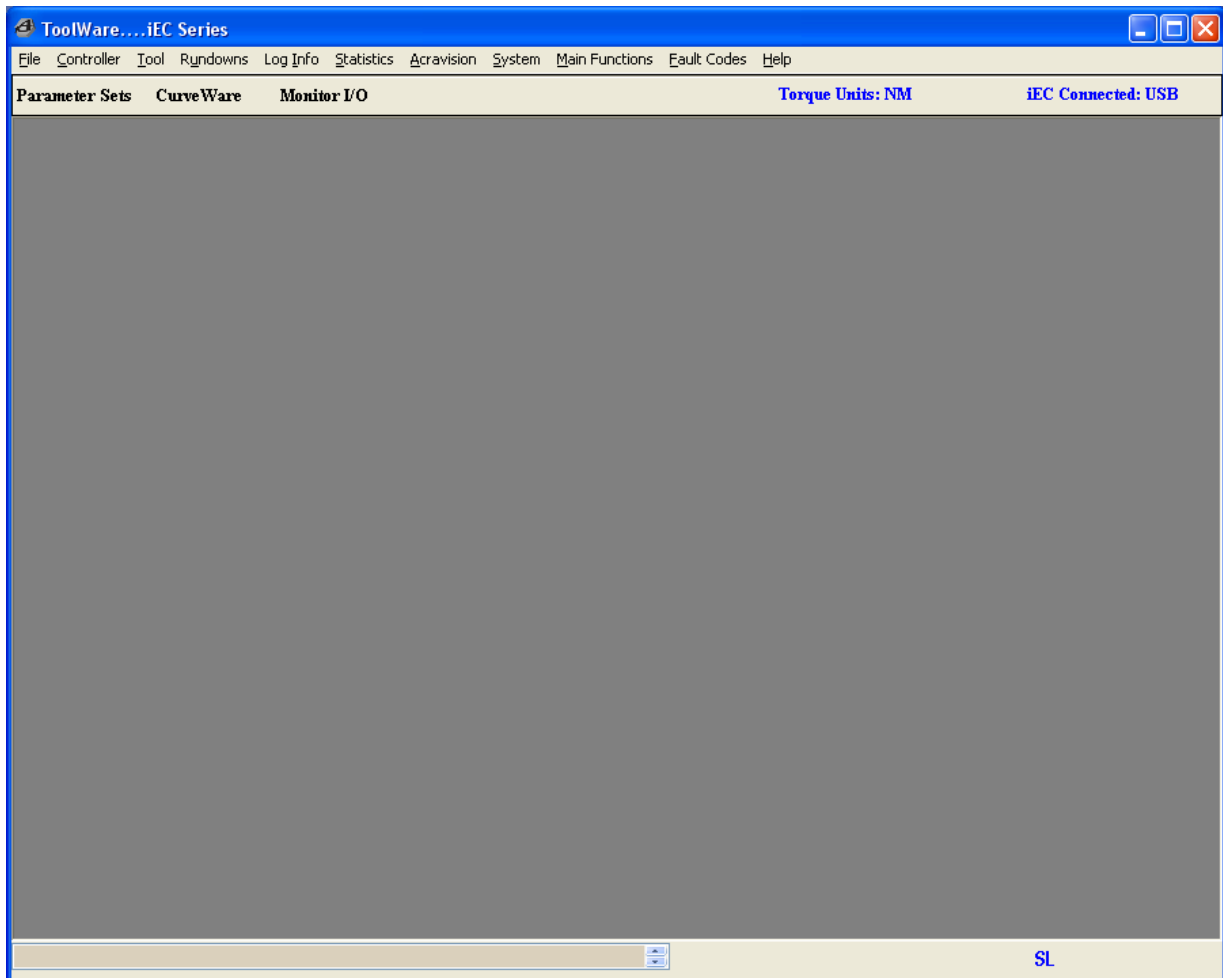


Figure 1.4.2 Main Screen of ToolWare

1.4.1 ToolWare Menu Structure

Menu Level			Supported Functionality
File	Connection		Establish Connection with the Controller
	Open		Open a file
	Save		Save a file
	Print		Prints screen graphic or data file
	LogIn		Login to the program to access appropriate menu items
	LANGUAGE		Switch Language Locale
	LogOff		Program remains open, some menu items not accessible
	Exit		Close the program
Controller	View Firmware Rev.		Returns controller's Servo & firmware version
	Edit Configuration Parameters		Modify controller configuration
	View / Edit Date/Time		Set the date & time in the Controller
	Reset Controller to Defaults		Restore factory values of controller parameters
Tool	View	Tool Parameters	View tool parameters
		Torque Cal Value	View the tool calibration value
		RPM's	View tool output drive rotations / minute
		Cycle Count	View number of cycles run by tool
		Motor Temp	View motor temp from tool
	Edit	Tool Setup	Set up tool parameters
	Calibrate	Torque	Calibrate the tool to a master transducer
		Buttons and LED's	Program and test buttons and LED's
		Service and Calibration Log	Set alerts for tool service and calibration
Rundowns			Display rundown data in a tabular format
Log Info	Usage		View tool and controller usage information
Statistics			Performs statistical analysis of a previously saved rundown-data file
AcraVision			Displays real-time rundown information in full-screen view
System	Serial Test		Used for testing of serial data string information.
	Fault Codes		Displays a list of fault codes for the controller and tool.
Main Functions	Parameter Sets		Opens the parameter set programming window.
	CurveWare		Displays rundown graphs for analysis
	Statistics		Performs statistical analysis of a previously saved rundown-data file
	Monitor I/O		Displays the status of I/O signals
Fault Codes			Displays a list of fault codes of the controller and tool.
Help	About ToolWare		Displays the latest version of the ToolWare.
	ToolWare Help		Opens a PDF Help file

1.4.2 Lower Menu Bar

Lower Menu Bar is a shortcut to the frequently used Upper Menu items located under <Main Functions> submenu. These frequently used functions include:

- Parameter Sets
- CurveWare
- Monitor I/O

1.4.3 Status Bar

Status Bar is combined with the Lower Menu Bar. Information displayed on the status bar is listed in the Table 1.4.3

Table 1.4.3 Status Bar Contents

<i>Status Item</i>	<i>Display Options</i>
Torque Units	N*m
	Lbs*ft
	Lbs*in
	KgCm
	KgM
Connection	Offline
	USB
	Ethernet

1.5 Connecting IEC Controller with PC

ToolWare supports –2 options of connecting Controller to PC depending on the interface and the model of AcraDyne Controller:

- USB port through the CIM adapter (P/N # AEC-CIM)
- Ethernet port through the Ethernet crossover cable or standard cable

Figure 1.5.1 and Figure 1.5.2 show the Communication / Connection interface panels of iEC Controller.

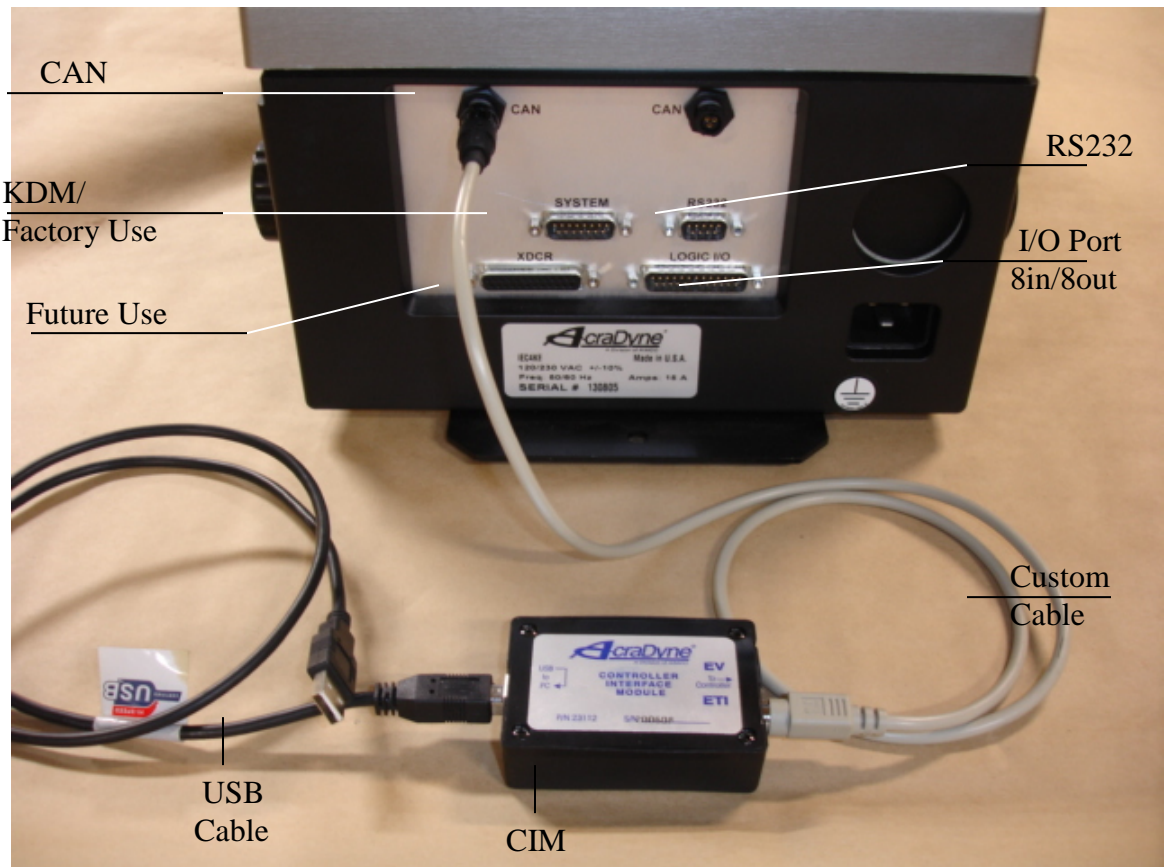


Figure 1.5.1 iEC Controller Bottom panel



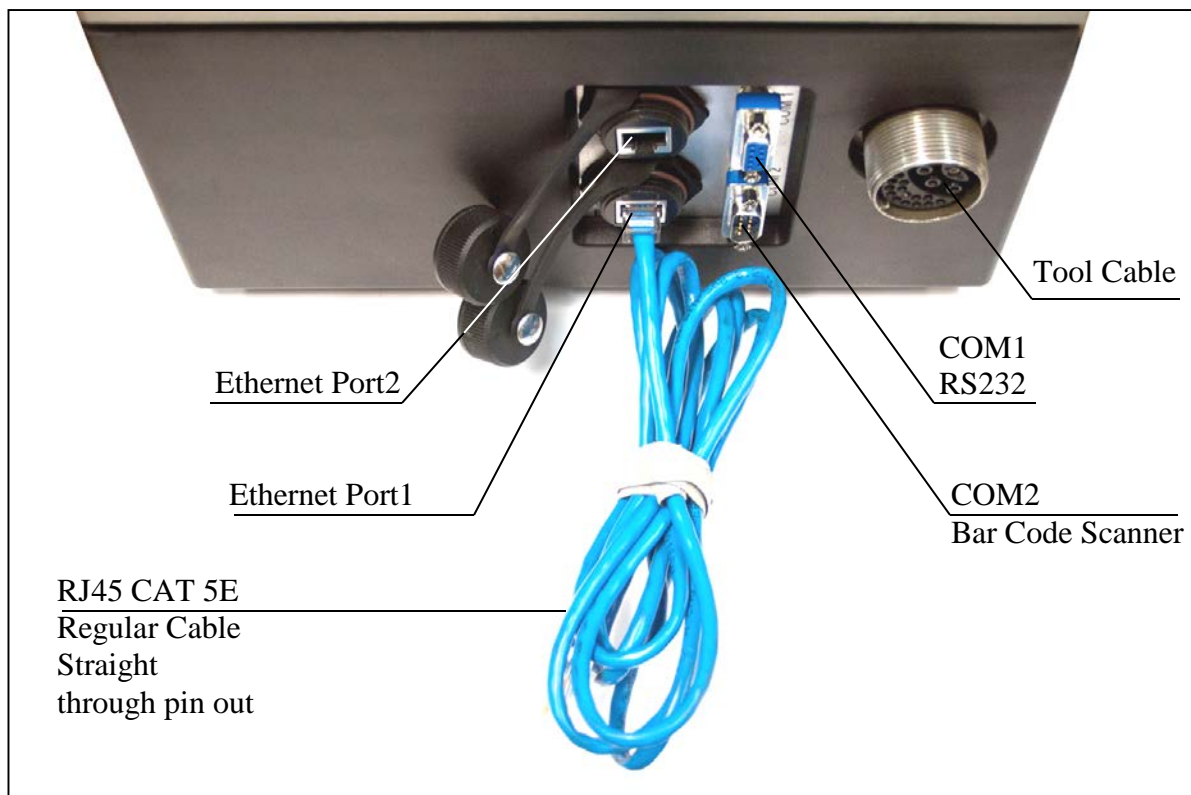


Figure 1.5.2 iEC controller electrical interface, top panel (Some connections available on iEC3 and iEC4 models only)


1.5.1 Connecting to USB port

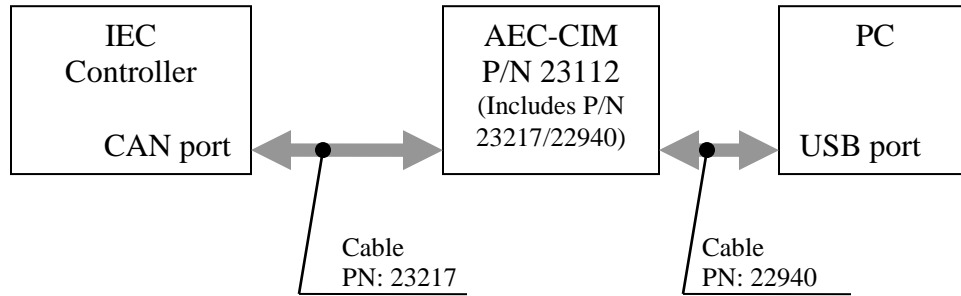

1.5.2 Connecting to Ethernet Port

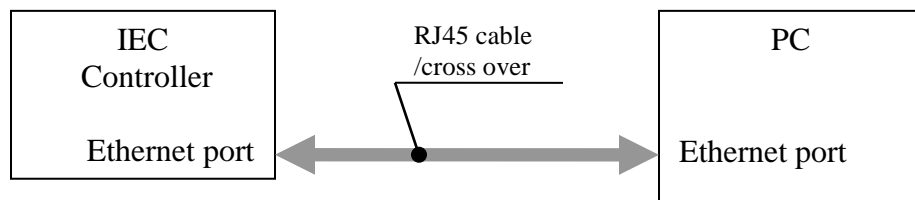

1.5.3 Connecting to the network

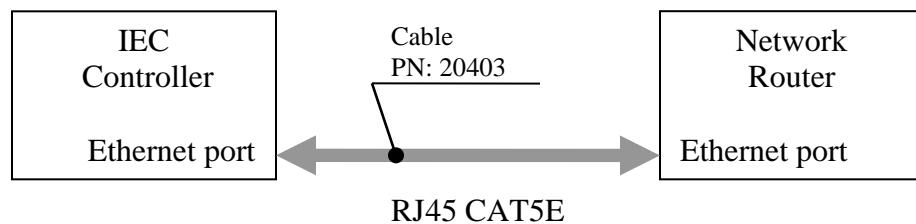

2. Working with ToolWare

2.1 Connecting PC with the Controller

2.1.1 Setting up USB Connection

Follow the steps below to set up USB connection.

- Turn on the computer.
- Plug the USB cable (PN: 22940) into your computer's USB Port or USB Hub and the other end to the CIM Module (PN: 23112).
- Plug the 23217 cable into the connector on the CIM and the other end of the cable to either of the CAN ports in the controller.

- Launch ToolWare and configure it for USB connection by selecting File/Connection/USB.

2.1.2 Setting up Ethernet Connection

Make physical connection

Connection options:

- Use Ethernet crossover or standard cable to connect Controller to PC directly.
- Use Ethernet crossover or standard cable to connect Controller to network router.

Specify the IP Address of controller in the PC


- Open Control Panel by clicking <Start/Settings/Control Panel>.
- Select <Network Connections> for configuration.
- Double click <Local Area Connection> to open its Status Window.
- Click on <Properties> button to open Properties Window.
- Scroll the list of connections to find <Internet Protocol (TCP/IP)> and double click it to open Internet Protocol Properties window.
- Click on <Use the following IP address> and enter the IP address of 10.10.30.155
- Set the subnet mask to 255.255.255.0.
- Click on <OK> button to exit <Internet Protocol Properties> window.
- Click on <OK> button to exit <Local Area Connection Area Properties> window.
- Click on <OK> button to exit <Local Area Connection Area Status> window.
- Exit <Control Panel> window.

Configure ToolWare for connection with PC:

- Launch ToolWare program.
- Click on <File/Connection/TCP/IP> to open <TCP/IP Connection Setup> window.
- Specify IP address of controller (10.10.30.150 by default)
- Click on <Connect> button to establish connection.
- Verify communication by reading DSP firmware version:
 - Select <DSP/View/Revision>;
 - Verify the DSP firmware version returned successfully.

Successful Connection

A successful Ethernet connection will be indicated by the following text on the main screen of the ToolWare program:

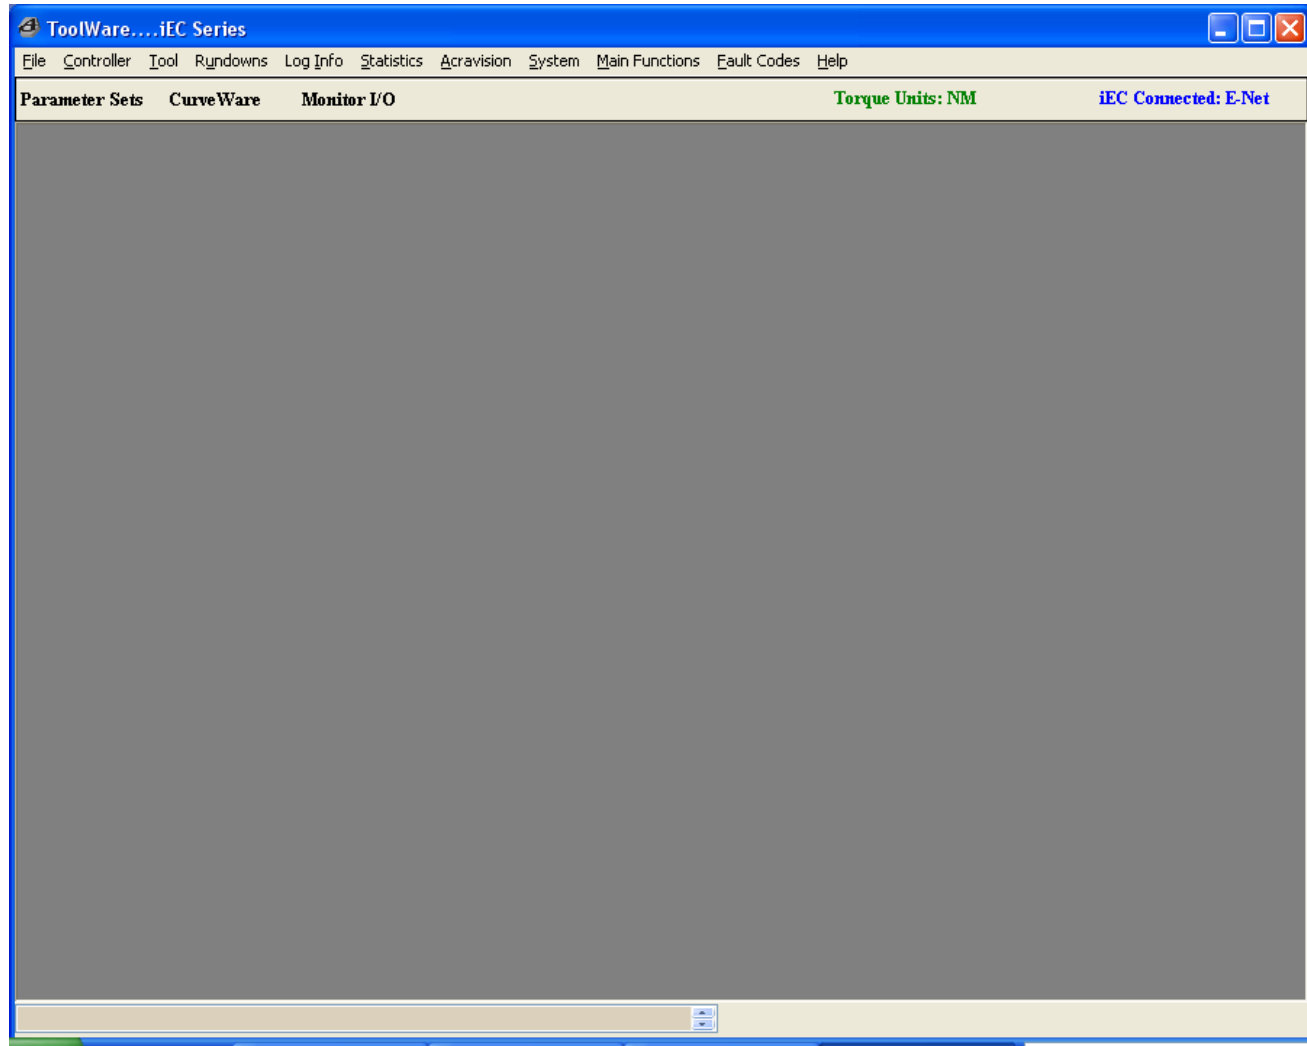

2.2 Setting Parameters

In ToolWare, select <Main Functions/Parameter Sets> from the top menu or select <Parameter Sets> directly from the lower menu to open <Parameter Sets View/Edit> window shown in the Figure 2.2. ToolWare can send and receive up to 32 Parameter sets to the controller.

ToolWare: IEC Series

File Help

Torque Units: NM IEC Connected: USB

Parameter Sets View/Edit

Parameter Enable 25 ☒ 26 ☒ 27 ☒ 28 ☒ 29 ☒ 30 ☒ 31 ☒ 32 ☒

○ Select ○ Select ○ Select ● Current ○ Select ○ Select ○ Select ○ Select

	25	26	27	28	29	30	31	32
Strategy	Tc	Tc	Tc	Tc	Tc	Tc	Tc	Tc
Direction	<input checked="" type="checkbox"/> CW	<input checked="" type="checkbox"/> CW	<input checked="" type="checkbox"/> CW	<input checked="" type="checkbox"/> CW	<input checked="" type="checkbox"/> CW	<input checked="" type="checkbox"/> CW	<input checked="" type="checkbox"/> CW	<input checked="" type="checkbox"/> CW
Tq High Limit	25.0	26.0	27.0	28.0	29.0	30.0	31.0	32.0
Tq Target	6.0	9.0	12.0	6.0	9.0	12.0	6.0	9.0
Tq Low Limit	5.4	8.1	10.8	5.4	8.1	10.8	5.4	8.1
Tq +/- %	0	0	0	0	0	0	0	0
Tq Downshift	1.0	4.5	6.0	1.0	4.5	6.0	1.0	4.5
Tq Threshold	0.7	1.5	1.5	0.7	1.5	1.5	0.7	1.5
Cycle Complete	0.4	0.7	0.7	0.4	0.7	0.7	0.4	0.7
Angle High Limit	0	0	0	0	0	0	0	0
Angle Target	0	0	0	0	0	0	0	0
Angle Low Limit	0	0	0	0	0	0	0	0
Rpm Freespeed %	30	60	80	30	60	80	30	60
Rpm Downshift %	30	40	70	30	40	70	30	40
Ergo Mode	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Soft Start	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Link Pset	0	0	0	0	0	0	0	0
Link Delay (ms)	0	0	0	0	0	0	0	0
Batch Settings	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Count Preset	0	0	0	0	0	0	0	1
Action								Act5
Next Pset								1
	Copy	Copy	Copy	Copy	Copy	Copy	Copy	Copy
	Delete	Delete	Delete	Delete	Delete	Delete	Delete	Delete

Receive Send New Open Save Reset To Factory Defaults

☐ Convert Units in Controller and ToolWare

Current Units NM

Current Parameter Set Changed To 28 SL

Figure 2.2 Parameter Sets View/Edit Window

2.2.1 Parameter Entry Fields

Strategy - Select one of four fastening strategy options.

- **Tc - Torque Control** strategy uses torque as the only control parameter. The Tool stops when *Tq Target* is reached. Rundown is considered to be successful (Accept) if the final torque value falls within the range specified by *Tq High Limit* and *Tq Low Limit* parameters.
- **Tc-Am - Torque Control/Angle Monitoring** strategy is convenient for detection of cross threaded or stripped fasteners. Rundown is considered to be successful (Accept) if the final torque value falls within the range specified by *Tq High Limit* and *Tq Low Limit* and final angle value falls within the range specified by *Angle High Limit* and *Angle Low Limit* parameters.
- **Tm-Ac - Torque Monitoring / Angle Control** strategy. The tool stops when *Angle Target* is reached or *Tq High Limit* is exceeded. Rundown is considered to be successful (Accept) if the final torque value falls within the range specified by torque upper and lower limits.
- **Tc-Ac - Torque Control / Angle Control** strategy. The tool stops if target torque or target angle is reached, whichever happens first. Rundown is considered to be successful (Accept) if both the final torque value and final angle value fall within their respective high and low limits.

Direction - defines fastening direction. It should be clock-wise (CW) for right-threaded fasteners and counter-clock-wise (CCW) for left-threaded fasteners.

Tq High Limit - used for Accept / Reject decision. Rundown does not pass if the measured torque exceeds this limit.

Tq Target - the target torque value.

Tq Low Limit - used for Accept / Reject decision. Rundown does not pass if the torque measured at the end of rundown is below this limit.

Tq ± % - high and low torque limits are automatically and symmetrically set around the target value.

Tq Downshift - the torque value at which the tool changes the speed from Freespeed RPM to Downshift RPM, in order to provide better accuracy of a final torque

Tq Threshold - specifies torque threshold value as a start point for the rundown cycle data acquisition.

Cycle Complete - the torque value that defines the completion of a fastening cycle. The cycle is complete if, after rising above the Tq Threshold value, torque drops below the Cycle Complete value.

Angle High Limit - is used for Accept / Reject decision. Rundown does not pass if the measured final angle exceeds this limit.

Angle Target - the target angle value

Angle Low Limit - used for Accept / Reject decision. Rundown does not pass if the final angle is below this limit.

Rpm Freespeed % - specifies initial tool output-drive speed. The parameter is expressed as a percentage of the tool's maximum rated speed.

Rpm Downshift % - specifies the speed of the tool after the Tq Downshift value is reached. The value is expressed as a percentage of the tool's maximum rated speed.

Ergo Mode - activates tool power ramping-down mode when fastening achieves Target Torque or Target Angle value. This feature reduces torque reaction in the hand-held tool as final torque or angle is achieved.

Soft Start - activates tool power ramping-up from zero to *Rpm Freespeed%* value. This allows for slower engagement of the fastener into the application.

Linked PSets – creates a group of sequential Parameter Sets actuated by a single trigger pull. To define the last Parameter Set in the group, unselect "Link PSet" by placing a 0 in the field.

Link Delay - used to add a delay time between the linked steps.

Running a Linked PSet rundown:

- To run a Linked PSet group, select the first PSet in the group as the "Current PSet". (Via the CHANGE PSET button on the controller, or using Logic IO, or using the "Current" PSet selection in Toolware)
- Link the PSets by selecting the next PSet in the Current PSet's "Link PSet" Drop down. If you want to have a delay between the rundowns enter that in the "Link Delay" Drop Down box. If you want to link more PSets then repeat this step.
- Run the tool as usual by pressing and holding the throttle.
- The tool will sequence thru each PSet in the Linked PSet group.
- At the completion of last the PSet of the group, the controller will signify the Linked PSet rundown is complete by lighting the cycle accept (or reject) led and turning off the blue In-cycle led.
- The current PSet will automatically reset to the first PSet in the group to ready for the next rundown.
- A release and repress of the trigger is necessary to start the next Linked PSet rundown.

Linked PSet Results Reporting:

The angle count is reset to 0 at the end of each linked step of a Linked PSet rundown.

RBR Combined with a Linked PSet Rundown Note:

The RBR, RB, and RBsp, options are only preformed at the end of the last step of a Linked PSet rundown

Results Reporting:

The results of the last PSet Step in the group are used to report.

If the trigger is released before the rundown sequence is complete, the results from the step that the controller was currently running, before being interrupted, are reported.

The controller reports curve data from the last rundown step and any linked previous steps if not separated by a delay time.

Batch Processing:

ToolWare allows the user to specify PSets for the sequence of rundowns. During the batch process the controller monitors each rundown and switches PSets automatically. We can control the actions of the controller as each step in the batch is completed. When PSets are linked only the last PSet has batch settings.

Count Preset – defines the number of accepted (ACCEPT) rundowns that must be completed for the associated parameter set

Action At Preset Count Complete - The choice of options for end-of-batch events is:

- Act1 - Reset count and output batch complete
- Act2 - Hold count and output batch complete
- Act3 - Disable tool – Hold count and output batch complete
- Act4 - Go to next PSet & do not output batch complete
- Act5 - Go to next PSet and output batch complete

Next PSet – determines the parameter set that is automatically activated when the count for the associated PSet is reached

2.2.2 Parameter Sets

Parameter Enable - check boxes allow the user to generate up to 32 different sets of parameters. Each set can be used individually or sets can be arranged into batch sequence. If the box is unchecked and the parameters are sent to the controller it deletes the parameter set.

Copy - button allows the user to copy one set of parameters into another. The user must specify the destination parameter set number.

Delete - removes parameter from overall set.

Receive - downloads parameters from the iEC Controller to PC. Downloaded parameters are displayed but not saved in the PC.

Send - uploads the current parameters from ToolWare to the controller. The controller will automatically switch to Parameter Set #1 after all parameter sets have been loaded.

New - allows the user to create a new set of parameters, regardless of what set is selected as currently active in the Controller or in the ToolWare.

Open - opens a saved Parameter file stored in the computer and displays it in the ToolWare Screen. Parameter set must be SENT to the controller to be used.

Save - saves the parameter sets displayed on the ToolWare screen as a file to a designated location on the computer.

Reset to Factory Defaults - resets the controller's parameters to the factory settings.

- If **Reset To Factory Defaults** is selected while tool is connected to controller, three parameter sets will be configured at 30%, 40% and 60% of the tool's maximum rated torque
- If **Reset To Factory Defaults** is selected while tool is disconnected from controller, eight parameters sets will be configured at 10 Nm, 20Nm, 30 Nm, 40 Nm, 50 Nm 60 Nm, 70 Nm and 80 Nm

Change units - changes the torque units in the ToolWare. Select SEND to change units in the Controller also.

Convert Units in Controller and ToolWare - if checked, automatically converts units in controller and ToolWare to new units when new unit of measurement is selected.

If Rundown-Backoff-Rundown or Low Speed Control are active in the controller, User will be notified on this screen.

2.3 CurveWare

In ToolWare, select <Main Functions/CurveWare> from the top menu or select <CurveWare> directly from the lower menu to open <CurveWare> window shown in the Figure 2.3. Only rundown information after most recent Power On of the controller can be graphed.

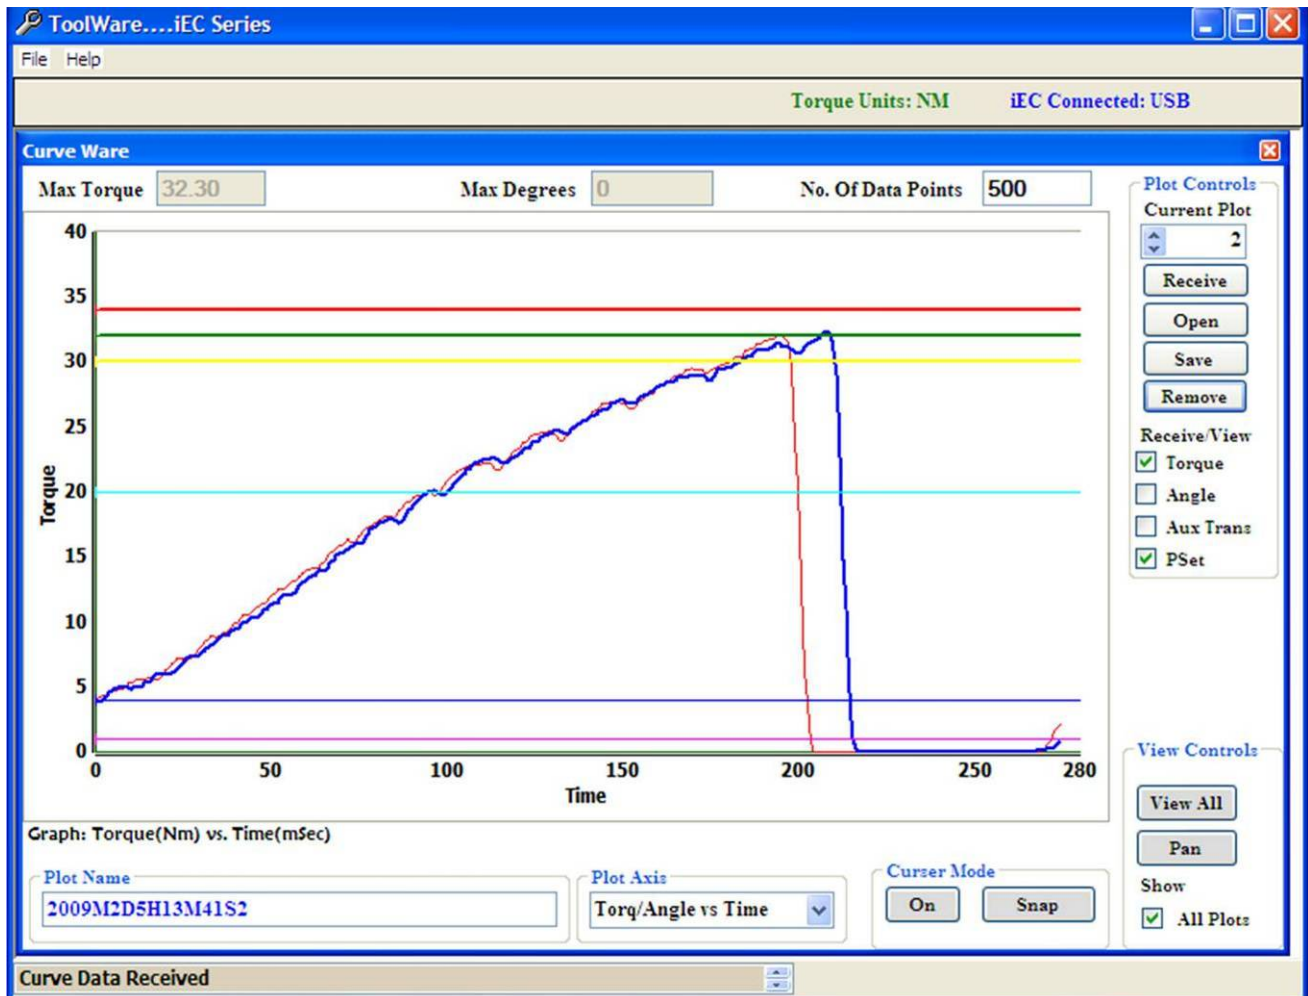


Figure 2.3 CurveWare example

Max Torque - is the upper torque limit of the rundown

Max Angle - is the upper angle limit of the rundown

No. of Data Points - is the number of data points that should be used in the plot. Maximal number of acquired data points is 4000.

Current Plot - the Nth rundown that has been recorded is highlighted in the graph.

Receive – downloads last rundown data from the Controller.

Save - saves data points of all curves in the plot in ASCII file.

Remove - removes the currently selected plot from the graph.

Receive/View - Receive/View allows the user to choose the display features of the graph.

Torque – downloads and displays torque data points.

Angle – downloads and displays angle data points.

PSet - displays markers indicating parameter set values.

View Controls

Pan - reposition the view in the drawing area.

Pan/Zoom – change magnification.

View All – return to the original dimensions.

Show All Plots - displays all the plots.

Cursor mode - restricts cursor locations to curve data points.

Plot Axis - allows user to choose between *Torque/Angle Vs Time* and *Torque Vs Angle*. The axes of the graph will change accordingly.

Plot Name – allows the user to rename the plot. By default, the plot name is formed by using the date and time at which the plot was created.

CurveWare allows for 10 sequential curves to be overlaid upon each other for analysis purposes.

2.4 Monitoring I/O

In ToolWare, select <Main Functions/Monitor I/O> from the top menu or select <Monitor I/O> directly from the lower menu to open <Monitor I/O> window shown in the Figure 2.4.

The I/O function is only available in iEC2, iEC3 and iEC4 models. A connector kit is available from AIMCO that allows the user to connect and route wiring to a variety of devices, including light-towers, socket trays, audible signals and PLC modules. The part number is #23490. Contact your AIMCO representative for this item.

This screen allows the user to activate and display the operation of the input and output signals to the controller. **Off Delays** of outputs in this screen and send it to the controller or receive the same from the controller. For testing and setting purposes the physical outputs and logical inputs can be forced ON/OFF temporally. This screen also shows the state of the physical I/O. We can temporally change the control source between Tool buttons and Logic I/O port.

Selection of PSets through IO is limited to PSets 1-8. Selection of entire 32 PSets library requires network connectivity.

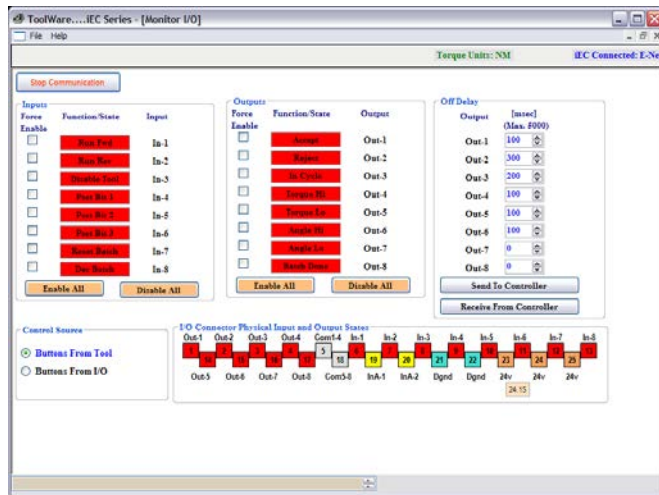


Figure 2.4 Monitor I/O screen

Off Delay - specifies how long the output signal will be ON before turning OFF. Each of the 8 input fields corresponds to the output field. Example: If 200 is the value in the first field that the output signal for Accept will be ON for duration of 200 mSec. If the value is 0, then the corresponding output will remain ON indefinitely or until the next rundown starts.

Control Source – allows user to choose the source that controls the tool operation

Buttons From Tool – Normal operating condition; tool lever and control ring control tool operation

Buttons From I/O – For testing purposes; allows the tool lever and control ring to be over-riden by buttons on the Monitor I/O screen

Force Enable – When Buttons From I/O is selected, this field selects which inputs and outputs can be forced through the Monitor I/O screen

Function/State – When Buttons From I/O is selected and the operation is selected by checking Force Enable, clicking on this field will force the respective operation to take place, regardless of tool button positions.

This field will be red when the operation is off and will turn green when the operation is on.

I/O Connector Physical States - this diagram is a real time display of the I/O connector. Each position corresponds to the indicated terminal on the 25-pin I/O connector on the bottom of the controller.

2.5 File Menu

In ToolWare, select <File> from the top menu. File Menu enables us to select the Connection type with which we want the ToolWare to connect to the Controller.

2.5.1 Connection

This enables the user to specify how ToolWare will connect with and communicate to the Controller. The options are as follows:

USB - is used if the computer is connected with the controller using the USB connection in the computer.

Ethernet - can be selected to set the IP address the connection should use.

Offline mode - gives the user the opportunity to -edit parameter files and configuration files to save without being connected to the controller

2.5.2 Open

Enables the user to select the file to open

2.5.3 Save

Saves the file to the PC in the specified directory

2.5.4 Print

Print the Screen or the Data.

2.5.5 Login

Login is not required for general access, though advanced features are not available in this mode. On occasion, when advanced features need to be accessed, a password will be given and can be entered here.

An AcraDyne technician or an AIMCO salesperson can create a temporary password to give to a customer. This password will be valid for the day it is given. This can be used when a customer needs to access technical areas on a temporary basis. It is based on the calendar date and will be valid until midnight of that date.

Contact your AIMCO sales representative to get more information on passwords for use with ToolWare.

2.5.6 Language

User can change language and locale either for the particular session or set it as default for the system. The application switches to the language the User selects.

2.5.7 Logoff

Log out of the user level the user is in.

2.5.8 Exit

Exits ToolWare

2.6 Controller

2.6.1 View Firmware Rev

Displays the current DSP revision and Servo Rev

2.6.2 Edit Configuration Parameters

The user can Edit the controller configuration from this screen. The screen is shown in Figure 2.6.2.

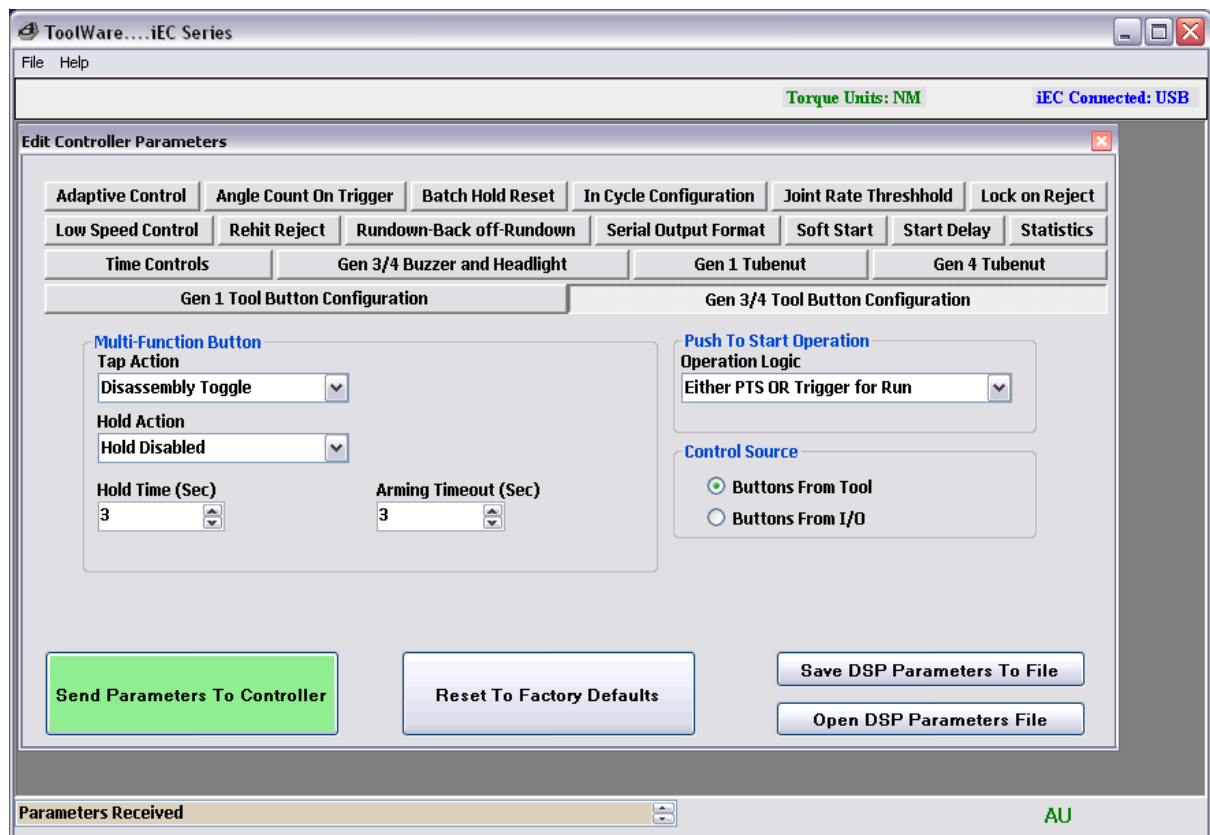


Figure 2.6.2 Edit Controller Parameter screen

Adaptive Control

Enable - Adaptive control is a useful option when a high CPK (Process Capability) is chosen as the most important variable. This is done by adjusting the control to ensure the average applied torque is centered between the upper and lower control limit.

This feature has three options, which are explained below.

Off - Turns adaptive control off. The tool will produce torque until the target torque is achieved. Therefore, all results will be equal to or greater than the target. This will cause the average torque to be greater than the target torque, thus making it extremely difficult to produce a high CPK.

First Ten - Takes an average of the first ten readings in a new parameter set and adjusts the control to make the average torque correspond with the target torque. Therefore, there will be readings both above and below the target torque, thus maximizing CPK.

- **All** - Similar to above, but continually adjusts the control based on the average of the previous ten readings in an attempt to maximize CPK.

Pct Adjustment: % Adjustment - Determines how much of a correction adaptive control will try to make. The higher the number, the greater the correction adaptive control will make.

In Cycle Configuration

At Threshold – the tool status is switched to <In Cycle> when torque reaches torque threshold set point.

At Throttle – the tool status is switched to <In Cycle> immediately when rundown is triggered.

Note: In Cycle Configuration “At Throttle” and Rehit Reject are mutually exclusive selections.

Rehit Reject

This feature prevents operator from attempting to tighten the fastener that has already been tightened. If this feature is enabled, the rundown will stop if the angle of rotation between cycle complete and threshold torque is less than a specified number of degrees.

Rehit Reject On/Off - If Enabled will abort the attempt to fasten a pre-tightened fastener. The default setting for this option is off.

Rehit Reject Angle - Used to determine if a fastener is already tightened. If the angles of rotation between cycles complete torque and cycle threshold torque is less than the programmed angle, then the fastener is assumed tightened and no pass/reject will be reported.

Note: Rehit Reject and In Cycle Configuration “At Throttle” are mutually exclusive selections.

Rundown-Backoff-Rundown

This feature includes three modes that engage reverse rotation of the tool.

Enable – activates the feature. There are four options available when the feature is enabled.

- **Rundown Backoff SP** - Tool will rundown to selected PSet torque, reverse the fastener a set number of degrees defined by Back Off Degrees. Reports the Torque and Angle from the rundown.
- **Rundown-Backoff-Rundown** – Rundown to the 1st Rundown torque (specified below) then reverse the fastener a set number of degrees and re-tighten the fastener to the target torque established in the parameter set. Reports the Torque and Angle at end of cycle.
- **Rundown-Backoff** - Tool will rundown to 1st Rundown Torque, reverse the fastener a set number of degrees. Reports the Torque and Angle at end of cycle.
- **Off** - Switches the Rundown-Backoff or Rundown-Backoff-Rundown to off mode

1st Rundown (in-lbs) - The initial rundown torque, measured in (in-lbs).

Dwell Time before Back Off - Dwell time [ms] between first rundown and the start of back off.

Back Off Degree - The amount of rotational degrees the fastener is backed off after reaching 1st rundown torque.

Back Off Torque Limit – This is the backoff torque limit, measured in (in-lbs)

Dwell Time before Second Rundown - Dwell time [ms] between back off and the start of second rundown.

Soft Start

This feature allows the user to set the speed and timing of how quickly the tool ramps up to Freespeed RPM

Dwell (ms) - the amount of time that the tool will rotate at slow speed before progressing to the Freespeed RPM (default 500 ms)

Dwell (RPM) - the RPM at which the tool will run during soft start period (default 90)

Ramp (ms) - the amount of time from the end of the soft start period until the tool reaches the Freespeed RPM (default 600 ms)

Start Delay

Start Delay On/Off - When enabled, the tool will ignore programmed torque parameters until the timer runs out. This is often used in jobs with prevailing torque that exceeds target torque. The default setting is disabled

Start Delay (ms) - The amount of time at the beginning of the fastening cycle, measured in milliseconds, which the tool will ignore programmed torque parameters. (default 500 ms)

Time Controls

Free Run Timeout – The amount of time, in seconds, the tool is allowed to run free without the load (before reaching cycle threshold). This is a safety feature in case the tool is placed down on the throttle. The default setting is 5 seconds.

Load Timeout - The amount of time the tool is allowed to run after crossing cycle threshold. The default setting is 15 seconds.

Cycle Complete - The amount of time, in ms, the torque must remain below cycle complete before the event is counted as a cycle and the final torque is displayed (default 200 ms).

Locked Rotor - Safety feature which shuts off the tool when it has reached a stalled condition. The amount of time, which the tool can remain in a stalled condition, is programmed (in milliseconds). The default setting is 100 ms.

Gen 1 Tool Button Configuration

This feature allows the user to program the functionality of the light ring. The default setting for this section is

- CW - Forward;
- Center - Reverse
- CCW - Auxiliary

Control Source allows user to choose the source that controls the tool operation Buttons from Tool/IO - Determines the source of the Trigger, Forward, Reverse, and Aux Commands.

Gen3 / 4 Tool Button Configuration

Multi-Function Button (MFB)

- Tap action: triggered if button held less than hold time.
- Hold action: triggered if button held to hold time or longer.
- Hold Time: Amount of time required to hold the MFB until Hold Action is triggered.
- Arming Timeout: Amount of time after the tool is armed, that the tool will automatically disarm.

Tap MFB Function Options

Actions will commence upon release of the MFB button on the tool as programmed

- Arming (Tubenut Tool Default): Tapping MFB button arms (activates) the start function but does not start the tool. Blue status light illuminates to indicate tool is Armed. Arming will reset in 3 seconds if tool start is not initiated.
- Change PSET: Tapping MFB button toggles between PSET A and PSET B. Status lights flash indicating PSET A is selected or twice if PSET B is selected
- Reset Reject Tone: Tapping MFB button silences reject tone
- Tap Disabled: Tapping MFB button has no effect on tool

Hold MFB Function Options

Actions will commence after Hold timer preset time has elapsed (Adjustable in Hold Time window). Default value is 1 second.

- Arming (Tubenut Tool Default): Holding MFB button arms (activates) the start function but does not start the tool. Blue status light illuminates to indicate tool is Armed. Arming will reset in 3 seconds if tool start is not initiated.
- Change PSET: Holding MFB button toggles between PSET A and PSET B. Status lights flash indicating PSET A is selected or twice if PSET B is selected
- Reset Reject Tone: Holding MFB button silences reject tone
- Hold Disabled (Default): Holding MFB button has no effect on tool

Push to Start Operation

Choices are:

- Both Push to Start (PTS) and Trigger must be depressed for tool start
- Either PTS or Trigger may be pressed for tool start (Default)

Control Source allows user to choose the source that controls the tool operation Buttons from Tool/IO - Determines the source of the Trigger, Forward, Reverse, and Aux Commands.

Gen1 Tube Nut

Homing Type - There are three options

- No Home
- Home on release and repress of main trigger
- Auto Home on release of Main trigger

Tube Nut Back off RPM - The speed, expressed in RPM, which a tube nut tool will return to the open position upon release of throttle. The default setting for this is 100 RPM.

Reverse Dwell - The amount of time before the output tries to return to home, after the throttle is released (default 500 ms).

Home Dwell - The amount of time that the output is held at home position (default 500 ms).

WARNING: If Latching Throttle is Enabled and Tubenut Homing Option is set to “Auto Home on Release of Main Trigger”, the Tubenut will attempt to home prematurely.

Gen 4 Tubenut

Multi-Function Button (MFB)

- Tap action: triggered if button held less than hold time.
- Hold action: triggered if button held to hold time or longer.
- Hold Time: Amount of time required to hold the MFB until Hold Action is triggered.
- Arming Timeout: Amount of time after the tool is armed, that the tool will automatically disarm.

Tap MFB Function Options

Actions will commence upon release of the MFB button on the tool as programmed

- Home Retry: Tapping the MFB button puts the tool into homing mode. All LEDs will flash and the horn will beep to signal the tool is in homing mode. Pressing the throttle(s) will start the homing move. After the homing is complete and the throttle(s) released, the tool will return to fastening mode. LEDs and horn will return to the previous state. ‘Tool disable’ will be ignored during the retry homing cycle.
- Arming (Tubenut Tool Default): Tapping MFB button arms (activates) the start function but does not start the tool. Blue status light illuminates to indicate tool is Armed. Arming will reset in 3 seconds if tool start is not initiated.
- Change PSET: Tapping MFB button toggles between PSET A and PSET B. Status lights flash indicating PSET A is selected or twice if PSET B is selected
- Reset Reject Tone: Tapping MFB button silences reject tone
- Tap Disabled: Tapping MFB button has no effect on tool

Hold MFB Function Options

Actions will commence after Hold timer preset time has elapsed (Adjustable in Hold Time window) Default value is 1 second.

- Home Retry: Holding the MFB button puts the tool into homing mode. All LEDs will flash and the horn will beep to signal the tool is in homing mode. Pressing the throttle(s) will start the homing move. After the homing is complete and the throttle(s) released, the tool will return to fastening mode. LEDs and horn will return to the previous state. 'Tool disable' will be ignored during the retry homing cycle.
- Arming (Tubenut Tool Default): Holding MFB button arms (activates) the start function but does not start the tool. Blue status light illuminates to indicate tool is Armed. Arming will reset in 3 seconds if tool start is not initiated.
- Change PSET: Holding MFB button toggles between PSET A and PSET B. Status lights flash indicating PSET A is selected or twice if PSET B is selected
- Reset Reject Tone: Holding MFB button silences reject tone
- Hold Disabled (Default): Holding MFB button has no effect on tool

Homing Type - There are three options

- No Home
- Home on release and repress of main trigger
- Auto Home on release of Main trigger

Tube Nut Back off RPM - The speed, expressed in RPM, which a tube nut tool will return to the open position upon release of throttle. The default setting for this is 100 RPM.

Reverse Dwell - The amount of time before the output tries to return to home, after the throttle is released (default 500 ms).

Home Dwell - The amount of time that the output is held at home position (default 500 ms).

Note: If Latching Throttle is Enabled and Tubenut Homing Option is set to "Auto Home on Release of Main Trigger" the Tubenut will attempt to home prematurely.

Latching Throttle

Pull trigger and tool finishes cycle automatically.

A second trigger tap stops tool.

Tool will unlatch automatically at the end of the rundown.

Latching Throttle Options:

- Latch by Using the MFB Option

1. Press and hold trigger
 2. Press and hold MFB
 3. Release trigger
 4. Release MFB
- Press and Hold Option
 1. Hold trigger down for x seconds to latch throttle.
 - No Latch Option (Default)

Serial Output Format

This function allows the user to select the format of the information in the ASCII character string packet that is sent out of the controller via the RS232 Port.

a) Standard Output:

Format:

O P HHHHH LLLLL TTTT P HHHHH LLLLL AAAAA CR CR

O: Overall Pass/Fail

P: Tq Pass/Fail

HHHHH: Tq High Limit

LLLLL: Tq Low Limit

TTTTT: Tq Result

P: Angle Pass/Fail

HHHHH: Angle High Limit

LLLLL: Angle Low Limit

AAAAA: Angle Result

CR

CR

b) Profibus Output:

Format:

**%CAN 1 O P HHHHH LLLLL TTTT P HHHHH LLLLL AAAAA NAC%
CRLF**

%CAN: Msg Start

1: PSet ("1" – "9") for PSets 1-9, ("A" – "W") for PSets 10-32

O: Overall Pass/Fail

P: Tq Pass/Fail

HHHHH: Tq High Limit

LLLLL: Tq Low Limit

TTTTT: Tq Result

P: Angle Pass/Fail

HHHHH: Angle High Limit
LLLLL: Angle Low Limit
AAAAA: Angle Result
NAC%: Msg End
CR
LF

c) Standard Output with CR/LF

Format:

O P HHHHH LLLLL TTTT P HHHHH LLLLL AAAAA 1 CR LF

O: Overall Pass/Fail
P: Tq Pass/Fail
HHHHH: Tq High Limit
LLLLL: Tq Low Limit
TTTTT: Tq Result
P: Angle Pass/Fail
HHHHH: Angle High Limit
LLLLL: Angle Low Limit
AAAAA: Angle Result
1: PSet ("1" – "9") for PSets 1-9, ("A" – "W") for PSets 10-32
CR
LF

d) UEC Serial

Format:

P 1 BB TTT.T AAAA 0000 0000 J

(Notice that there is a decimal point next to the least significant T)

P: parameter set ("1" – "9") for PSets 1-9, ("A" – "W") for PSets 10-32
B: batch count
T: torque result
A: angle result
J: judgment (@=overall pass, H=low torque, I (eye)=hi torque, J=low angle, K=hi angle)

Statistics

Minimum Stats - Number of rundowns that need to be performed before the statistics will be calculated and displayed on the controller.

Stat Samples - Maximum number of rundowns used for calculating and displaying statistical data on the iEC controller.

Statistical Outliers - The statistical outliers' parameter is a code that is used to determine if the data from a rundown will be excluded from the data set being used in the static calculations that are displayed on the iEC controller. The exclusions are based on the results of the rundowns.

The following are the codes for each exclusion type:

- 2 - Final Torque Result Above High Limit
- 4 - Final Torque Result Below Low Limit
- 8 - Final Angle Result Above High Limit
- 16 - Final Angle Result Below High Limit
- 128 - Re-Hit

To exclude any combination of the above list add up the code values.

Example: To exclude all rundowns where the final torque was above the high limit (2) or the angle was below the low limit (16), Set the value for statistical outliers to $2 + 16 = 18$

Lock on Reject

When enabled, this prevents the tool from starting a new rundown if the result of the last rundown was a reject.

The tool remains locked until reverse is selected on the tool or from the Logic IO Reverse Input.

The Default setting is off.

Batch Hold Reset

Batch Control Reset Options for: "Disable Tool – Hold Count & Output Batch Complete"

The following are options to re-enable the tool after it has been disabled in batch control:

- Option 1: Re-enable the tool by toggling the RESET_BATCH Logic I/O input (default).
- Option 2: Re-enable the tool by selecting a new PSET or by toggling the RESET_BATCH input. (This option gives the operator that ability to manually re-enable the tool from the Controller front panel by pressing the CHANGE PSET button.)

Low Speed Control Mode:

Low Speed Control mode is designed to allow a tool to apply torque energy more consistently to a joint at lower RPM's. The feature precisely manages power delivery to the tool motor from the servo insuring the rotation of the fastener is done at a constant velocity even when the desired RPM is extremely slow.

IEC controllers are able to run this feature assuming the servo in the controller is REVB or higher and SCC code is 1.16 or higher. SCC installed code and Servo REV level is indicated each time the controller is powered on. This information is visible on the LED display.

Controllers capable of Low Speed Control mode default to standard control unless selection of Low Speed Control is consciously made. Confirmation of Low Speed Control being in effect is shown in red type on the Parameter Set screen whenever it is in use. Low Speed Control is a feature that applies across all PSETs globally. Selection of Low Speed Control ON or OFF requires a Power Cycling of the IEC control for the change to become effective. Prompts will indicate to the user this requirement and the LED on the IEC controller will change to OFF indicating that a Power Cycle is required.

While Low Speed Control has many benefits and is not inherently negative to tool performance when left in use, it does apply slightly higher power levels to the tool motor and in high duty cycle applications where it is not necessary, this feature should be turned off.

Specific Information Related to Low Speed Control:

- RPM range of tools when used with Low Speed Control activated is 4%-100% of the tool's normal speed rating
- Tubenut tools may not home accurately in Low Speed Control Mode.
- Ergo Mode is not usable when using Low Speed Control
- Low Speed Control is effective on all 1000 Series, 2000 Series and 3000 Series tools up to 90NM (larger tools are unable to use this feature)

Disable Tool when SVC/CAL Due

- Option to select(Default) – Disable tool in preset Service or Calibration period exceeded (date or time) LED warning appears on IEC Tool re-enabling accomplished by (to be determined)
- Option de-selected – Tool remains enabled, LED warning appears on IEC

Angle Count Configuration

- This option determines when the angle count is started. Start angle count at threshold (default): The angle count is started when the tool crosses threshold torque,
- Start angle count on throttle.: The angle count is started when the tool is activated.

Gen 3 / 4 Buzzer and Headlight

Buzzer ON -When enabled, the Buzzer serves two purposes:

- In disassembly mode, the buzzer beeps. When a rundown is rejected the buzzer also beeps.
- If a rundown is rejected, the beeping can be stopped by making a successful rundown or using the MFB option "Stop Reject Tone".

Headlight ON - Enables or Disables the Headlight.

2.6.3 Angle Offset Calibration

Angle Calibration Value:

- The value for this will determine how much to add or subtract to the angle measured and reported by the iEC controller.
- The offset is added at the start of threshold.
- The default value for this is 100. The range is 1 to 200.
- The units are $(\text{value} - 100) = \text{degrees of correction}$.
- Examples:
 - A value of 100 = No correction. This is the default value.
 - A value of 90 = 10 degrees added to iEC angle measurement.
 - A value of 110 = 10 degrees subtracted from iEC angle measurement.

Reset to Factory Calibration: The angle calibration value will be set to 100 = No correction.

Angle Offset Calibration Routine: Toolware will automaticity calculate and send the angle offset calibration value to the controller.

2.6.4 View/Edit Date Time

Sets the date and time in the Controller

2.6.5 Reset Controller to Defaults

This option resets the Controller configuration to its factory default state.

2.7 Tool

2.7.1 View

Tool Parameters

Reads all the tool parameters and displays on the screen

Torque Cal Value

Shows the current calibration value of the tool as well as the factory calibration

RPM's

Performing this test will determine the actual RPM of the tool.

Cycle Count

Displays the total number of rundowns on the tool good or bad

2.7.2 Edit

Tool Setup

Each tool has a special parameter file that defines the tool. You can view the parameter file for that tool and how it differs from what is in the tool. The tool Information such as Tool Id, Tool Model number, Tool cycle count and Tool Multiplier value are displayed. The User can change the Tubenut Parameters according to their application need and send it to the tool.

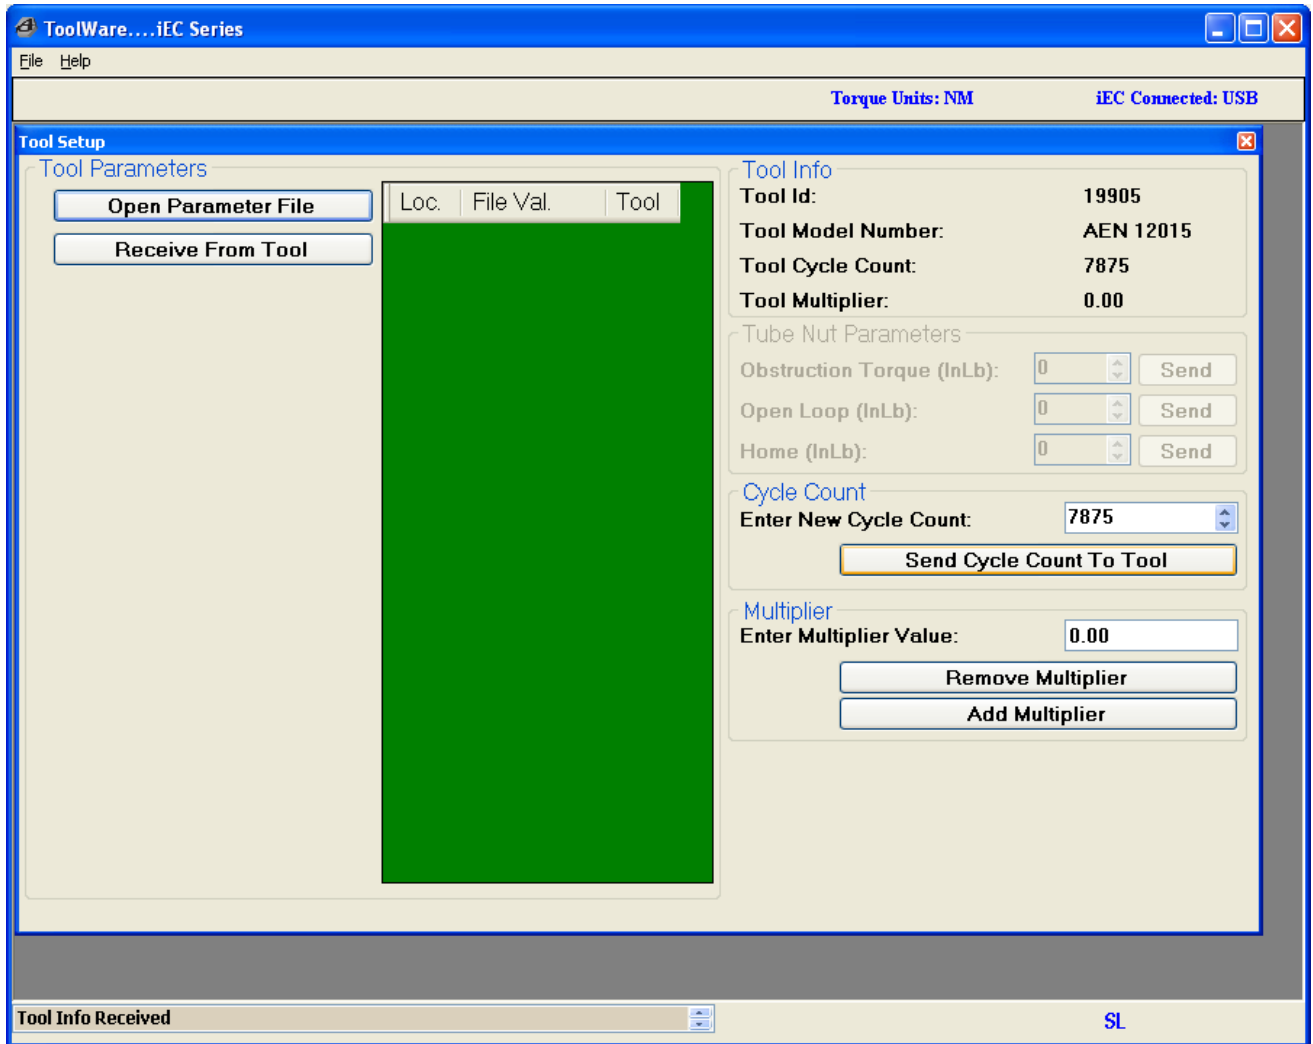


Figure 2.7.2 Tool Configuration and tubenut tool setup

Multiplier - Configures the tool to include gearing added to the base model.
Units: Gear Ratio * 100.

- a. Example: Adding a multiplier with a gear ratio of 5:1, Multiplier setting = 5.

Obstruction Torque - In 1st 90° degrees of rotation in the tightening direction cycle will be aborted if this torque is exceeded. If the tool rotates 90° degrees and stops without any obstruction, the value is too low.

Open Loop - After reaching the open position, this open loop torque prevents the socket from bouncing to a partially closed position. This torque should be set to a value slightly less than the tube nut home torque.

Home - In the reverse direction, reaching this torque indicates to the controller the socket is in the open position. If the socket does not attempt to return to the open position or returns at an extremely fast rate this value is too low. AcraDyne recommends starting at about 12 in-lbs.

2.7.3 Calibrate

Torque

This is used to calibrate the tool. Following are the steps that need to be followed to calibrate the Tool

1. Press the “Start To Test” Button
2. Run the Tool to Final Torque
3. Put the External transducer value in the Measured Torque box.
4. Press “Send to Tool” Button.
5. The new Cal value is calculated automatically and assigned to the tool.

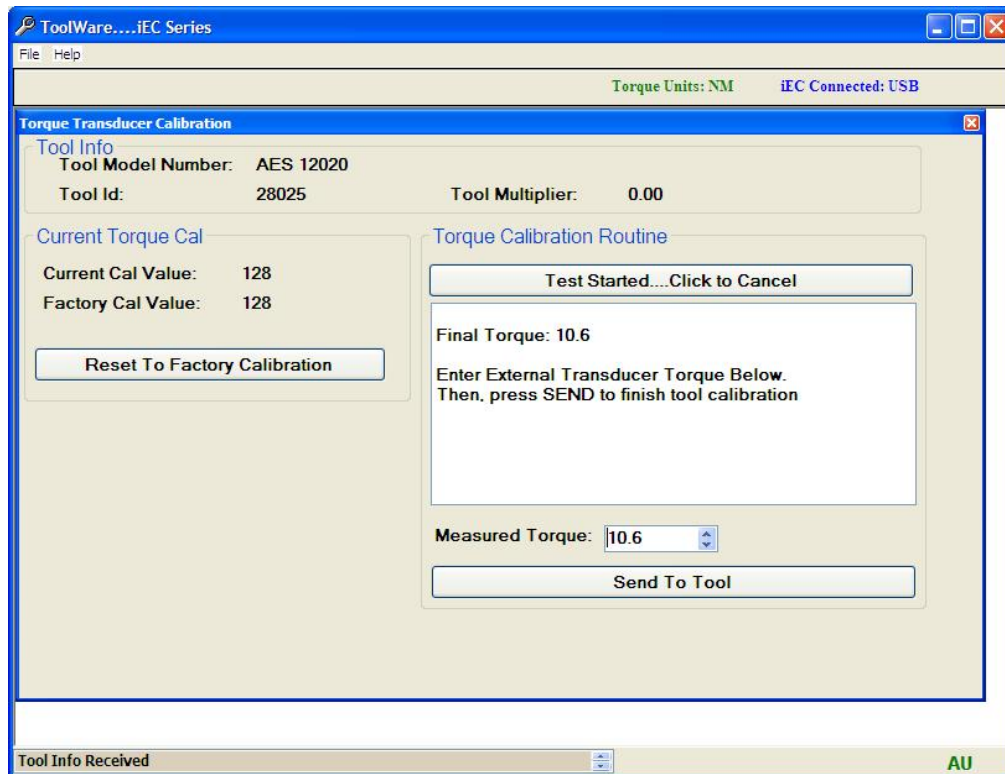


Figure 2.7.3 Tool calibration screen

Buttons and LED's

Calibrate Buttons - After a tool has been worked on, it is possible the relationship between hall sensors and magnet have changed. Using the Tool Button Calibration screen calibrates the field between the two. Test Trigger, Ccw, Center and Cw positions and send the values to the Tool.

LED States - Turns the tool lights on, off, or flashes. Used for testing of the Tool

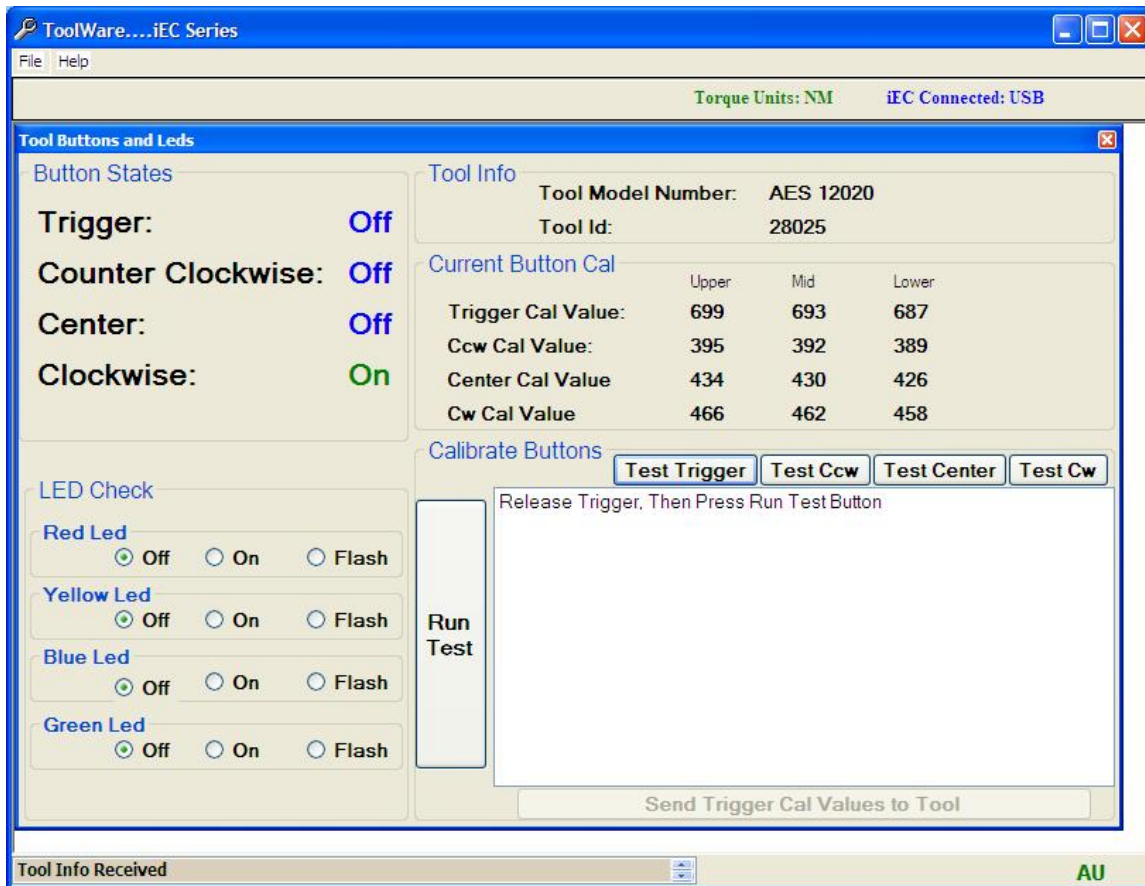


Figure 2.7.4 LED programming and button calibration

Service and Calibration Log

The Service Parameters are stored in the memory of the Tool and they can be viewed in this screen. The Next Service cycle or Next Service date in this screen will turn red if they exceed the value the service is due.

ToolWare...IEC Series

File Help

Torque Units: NM iEC Connected: USB

Tool Service And Calibration Log

Receive From Tool Send To Tool

Tool Info

Tool Model Number	AEM 2010	Tool ID	29712
Parameter Rev	255	Cycle Count	5019

Service Log

Month Day Year
 Last Service Date 7 / 3 / 2008 Use Today's Date
 Last Service (Cycles) 17 Use Current Count
 Next Service Date 11 / 8 / 2008
 Next Service (Cycles) 5017
 Service Interval (Months) 4
 Service Interval (Cycles X 1000) 5

Calibration Log

Month Day Year
 Last Cal Date 4 / 2 / 2008 Use Today's Date
 Last Cal (Cycles) 17 Use Current Count
 Cal Interval (Months) 0
 Cal Interval (Cycles X 1000) 0

Tool Service/Cal Log Received TL

2.7.5 Tool Service and Calibration Log

2.8 Rundowns

Data for rundowns in all or selected Parameter Sets can be displayed in a tabular format. This information can then be saved as a "Ms.csv" File.

- You can print the rundown results by using File ->Print in the menu.
- Rundowns must be saved to a file before the statistics function can be used to evaluate the data.
- Controller memory can be cleared by clicking the "Clear iEC Rundown Memory" button

2.8.1 Download Data

- If rundown data is to be analyzed with the Statistics function, select **All Data**
- If no statistical analysis is to be applied, select **Results Only**. This will significantly decrease the time taken to download the data from the controller to the PC.

2.8.2 Select Parameter Set

- To view results of all saved rundowns, regardless of Parameter Set, select zero (0)
- To view results of rundowns for a specific Parameter Set, select the appropriate Parameter Set number

- To select the columns you want to see, select custom and choose the columns from the selection menu
- You can restrict the number of rundowns you want to see by selecting the Max. Rows (0 means all)
- The Rundowns are ordered by latest first. So the Recent Rundown will be the first record to be downloaded. You can stop download at any time and analyze the records that are downloaded.

To begin rundown data download, click “Start Rundown Receive”

Note: Statistics functionality requires “All Data” to be selected.

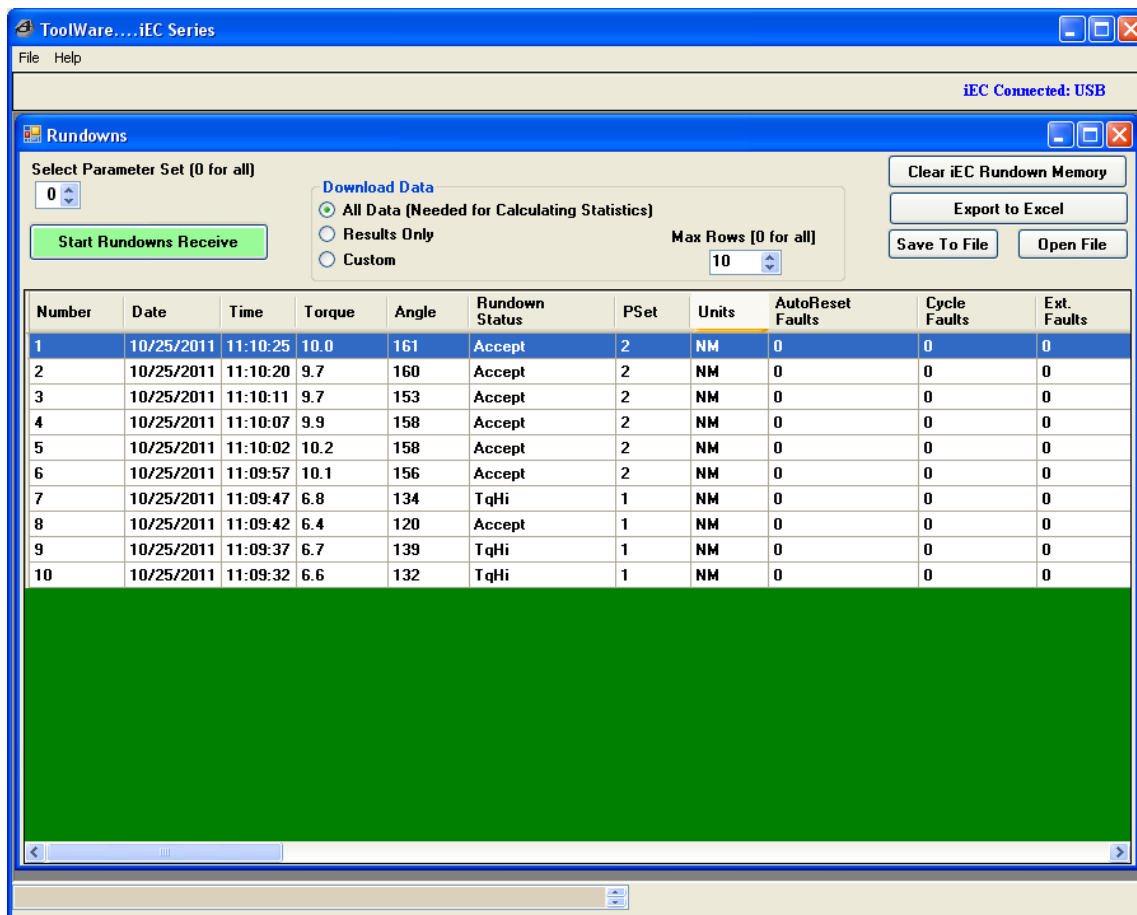


Figure 2.8 Rundown Log example

2.9 Log Info

Log info describes the usage of the Controller and the tools that have been used with that controller.

POR Counts - Number of times the controller power has been cycled.

Controller Cycles - Number of rundown the controller has completed.

Tool Log - Displays history of tools that have been previously connected to the controller.

Note: Serial/Model number entries in usage log are abbreviated for functionality will legacy tools.



The statistics page takes a collection of final torque samples from a rundown file then calculates and displays statistical information about the collection. In addition, a histogram is plotted, and the final torque for each rundown is displayed graphically. The maximum number of rundowns that can be evaluated is 2048. If more data is stored in the file, then data for only first 2048 rundowns are used. Torque values are displayed in the units shown on the Main Window toolbar. Rundown Files are saved using Toolware with *.MS.csv extension. This file type can be generated in the Rundowns page by receiving rundown data, then saving the data to a type *.MS.csv file. We can open this using the File -> Open option.

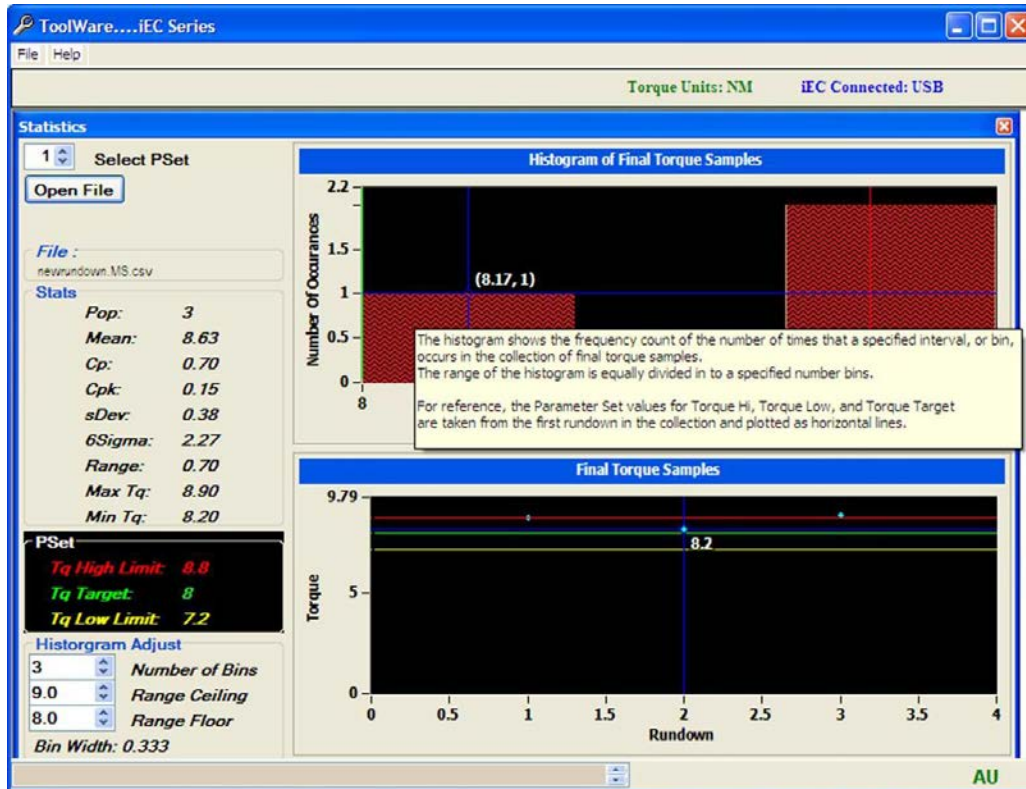


Figure 2.10 Statistics screen example

PSet Selection (Parameter Set):

- Only rundowns with the PSet selected are used in the collection. In addition, Only Rundowns with settings for Torque High Limit, Torque Low Limit, and Target that match the first rundown are used in the collection.
- If 0 is selected for the PSet, all rundowns in the file will be used in the collection.

Stats:

- POP:** Population; The total number of observations used to calculate the statistical data.
- Mean:** (Sum of All Readings) / (Number of Readings)
- CP:** Overall capability, which is the ratio of 6 sigma to the tolerance. The equation for CP is: $(\text{Torque High Limit} - \text{Torque Low Limit}) / 6 \text{ Sigma}$
- CPK:** Process capability, which takes both sigma and mean into account. The equation for CPK is the smaller of: $(\text{Torque High Limit} - \text{Mean}) / 3 \text{ Sigma}$ or $(\text{Mean} - \text{Torque Low Limit}) / 3 \text{ Sigma}$
- 6 Sigma:** The standard deviation multiplied by 6. A total range of 6 sigma will include 99.7% of all data. The equation for six sigma is as follows:

$$6\sigma = 6 X$$

- **Range:** The difference between the maximum and minimum reading.
- **Min Tq:** The maximum torque reading.
- **Max Tq:** The minimum torque reading.

Histogram of Final Torque Samples

The histogram shows the frequency count of the number of times that a specified interval, or bin, occurs in the collection of final torque samples. The range of the histogram is equally divided in to a specified number bins using the following equations:

- The width
- of the frequency bin is
 - $\Delta x = \frac{\text{max} - \text{min}}{m}$
 - Where:
 - m is the selected *Number of Bins*.
 - max is the upper ceiling for the torque range to be evaluated (*Range Ceiling*)
 - min is the lower floor for the torque range to be evaluated (*Range Floor*)
- The *center points* of each bin are set according to the following equation:
 - $\text{center}_i = \text{min} + \frac{\Delta x}{2} + \Delta x i$

For reference, the Parameter Set values for Torque Hi, Torque Low, and Torque Target are taken from the first rundown in the collection and plotted as horizontal lines.

Histogram adjustment:

The width, center point, and number of bins can be adjusted by selecting different values for Range Ceiling, Range Floor and the Number of Bins.

- **Number of Bins Selection:** The histogram initially uses the number of rundowns in the collection for the number of bins. If there are more than 200 rundowns, then the number of bins is set to 200. The number of bins can be adjusted from 2 to the number of rundowns + 1.
- **Range Ceiling Adjustment:** This value is initially set to the maximum torque sample rounded up to the next higher integer. This can be adjusted in increments of 0.1
- **Range Floor Adjustment:** This value is initially set to the minimum torque sample rounded down to the next lower integer. This can be adjusted in increments of 0.1

Bin width and center points will be updated on a change to these values.

Final Torque Sample Graph

The Final Torque Sample graph shows the final torque of each rundown in the collection.

For reference, the Parameter Set values for Torque Hi, Torque Low, and Torque Target are taken from the first rundown in the collection and plotted as vertical lines.

2.11 AcraVision

AcraVision displays the current rundown information in an easy to read screen. If there is a failure in the tightening the Torque/Angle is displayed in red.

Use *Record Rundowns* to save the Rundown information straight to the Computer memory. You can use View saved rundowns to see the saved rundowns.

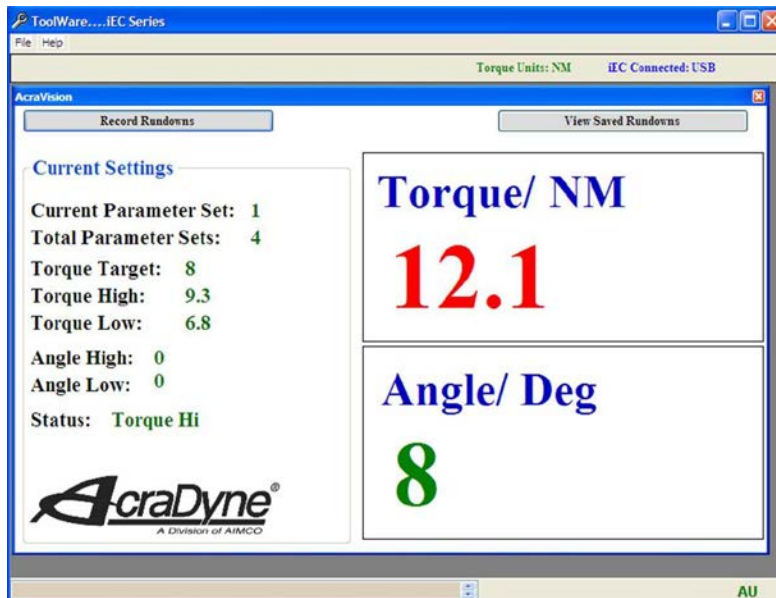


Figure 2.11 AcraVision Screen example

2.12 System

2.12.1 Serial Test

Hyper-terminal like screen that can be used to monitor the serial output messages from the iEC controller

3.2 Trouble Shooting

Fault Description

TID Timeout: No Communication between the tool and controller. This fault condition is usually caused by a problem in the tool ID board. Try connecting another tool to the controller

Tool GND: The tool ground loop is broken. This fault condition is usually caused by a problem in the controller or tool. Try the tool and cable on another controller. The fault can be intermittent.

Power on Throttle: The System thinks that the throttle is being activated or the run command through logic I/O is turned on. You can verify this by monitoring the tool buttons in Toolware. Make sure that the throttle is completely returning home completely after being released.

Button Timeout: The button signals from the tool are not being received by the controller in a certain amount of time. Try connecting another tool to the system.

Button State: An illegal light ring state has occurred. Two or more direction halls are enabled. You can verify this by monitoring buttons using ToolWare. Try recalibrating the buttons using ToolWare (CW, Center, and CCW or Trigger and MFB button

Undefined Voltage: Either the controller voltage configuration or the tool voltage parameter are undefined. Try the tool on another system.

Incompatible Voltage: The controller is not compatible with the tool.

Illegal tool: A tubenut tool is connected to a system setup for multiples.

Free Run Timeout: The tool has run for a period of time before seeing the threshold torque. The throttle must be released and pressed again before the tool will run again. This time is adjustable using ToolWare. The default value is 5 seconds.

Load Run Timeout: The tool has run for a period of time after seeing the threshold torque. The throttle must be released and pressed again before the tool will run again. This time is adjustable using ToolWare. The default value is 15 seconds.

Hall Error: The motor hall sensors (for commutation) have achieved an illegal state a specific number of times. If the tool does not run at all or the square drive has to be rotated before the tool will run the motor is probably damaged. Run this tool on a different controller to determine where the problem lies.

Tool Offset: Based on the offset value of the transducer during re-zero and the tool cal value, the tool cannot mathematically reach the target torque. This problem can occur if the cal value has been drastically changed and the target torque is near the max torque of the tool. Try resetting the cal value to defaults and calibrating the tool using an approved rotary transducer.

Tool Level: The tool transducer output voltage has exceeded the maximum or minimum allowable value. Try the tool on another system.

Locked rotor: The controller has not sensed hall transitions from the motor for a period of time. This is possible if the tool is trying to achieve a high torque at a low speed. Increase the rundown speeds and make sure the tool is calibrated properly. It is also possible that the controller is faulty. If the tool does not run at all try connecting it to a different controller.

Drive Fault: The servo drive is not trying to run the tool. Try the tool on another controller.

PSet Value: An illegal rundown parameter set has been sent to the controller. Try resetting the parameter sets back to factory defaults.

TID Parameter Value: The tool sent an illegal parameter to the controller. Try cycling power to the system. Also, try the tool on another system.

TID Parameter Timeout: The tool did not respond to a requested parameter for a period of time. Try cycling power to the system. Also, try the tool on another system.

Target Value Fault: The target torque is set higher than the capacity of the tool.

No Direction Hall: The tool was told to start running either from the throttle or through logic I/O but it wasn't told what direction to go. Use ToolWare to monitor the buttons. Make sure the wiring to the I/O is correct if running the tool remotely.

Xdcr Level: The tool transducer output voltage has exceeded the maximum or minimum allowable level.

3.3 Tubenut Tool Setup Details

Overview

The following describes the setup required for tube-nut tool operation. This includes determining the values for tube-nut specific TID parameters (parameters residing in the tool memory) and iEC Controller parameters.

3.3.1 Tube-Nut Homing

Tube-Nut Home TID parameters:

The tube-nut TID parameters can be viewed and modified from the Tool-> Edit->Tool Setup screen in ToolWare. The tool to be configured must be connected to the controller.

- Home Detection Torque - **Home (in*Lb)**
 - When the tool is homing, reaching this torque indicates to the controller the tool output socket has reached the home stop and is in the open position.
 - If the tool output does not attempt to return or does not completely reach the home position, this value is too low

- **Attention: Setting this value too high can potentially damage the tool.**
- Units: lbf-in
- TID memory location: 53
- Hold at Home Torque - **Open Loop (in*Lb)**
 - After reaching the home position, this torque is applied against the home stop to prevent the socket from bouncing to a partially closed position.
 - This value is typically set to a value slightly lower than the home detection torque.
 - If the socket is bouncing back to a partially closed position after reaching the home stop, this value is too low.
 - **Attention: Setting this value too high can cause the socket to snap back to the home stop too quickly and potentially damage the tool.**
 - Units: lbf-in (approximation)
 - TID memory location: 54

Typical Procedure for setting the tool's Tubenut Home TID Parameters

- Set the Hold at Home Torque = 0
- Set the Home Detection Torque = 1
- Free run the tool and watch the homing routine while making the adjustments below.
- Gradually increase the value for the Home Detection Torque until the tool reliably returns to the home position.
- Once a good value for the Home Detection Torque is found, if the tool is bouncing back to a partially closed position after hitting the home stop.
 - Gradually increase the value for the Hold at Home Torque until bounce back is eliminated.

Controller parameters affecting tube-nut homing:

Controller parameters for tube-nut operation can be viewed and modified from the Controller->Edit Controller Parameter->Tube-nut screen in ToolWare.

- Tube-Nut Backoff Speed:
 - This is the speed the tool output socket travels when returning to the home position.
 - Decreasing this can reduce the impact force when hitting the home stop.
 - **Attention: Care must be taken, increasing the speed above the default value. Too high of a value can greatly increase how hard the output will hit the home stop and potentially damage the tool.**
 - Units: RPM of the tool output socket in the homing direction
 - Default value: 100 RPM.
 - Range: 10 to 500 RPM
- Tube-Nut Homing Reverse Dwell Time:
 - The amount of time before the output is allowed to home, after the rundown is complete and the tool lever is released.
 - Units: Seconds
 - Default value: 0.5 Seconds
 - Range: 0 to 2 Seconds

- Tube-Nut Home Dwell time:
 - The amount of time the tool holds at home to prevent bounce back
 - Too short of home dwell time can increase the occurrence of bounce back. However, decreasing the homing speed can decrease the severity of bounce back after the home stop is reached and allow for a shorter dwell time.
 - Units: Seconds
 - Default value: 0.5 Seconds
 - Range: 0 to 2 Seconds

3.3.2 Tube Nut Pinch Detection

Tube-Nut Home TID parameters:

The tube-nut TID parameters can be viewed and modified from the Tool-> Edit->Tool Setup screen in ToolWare. The tool to be configured must be connected to the controller.

- Obstruction Detection Torque - (**in*Lb**)
 - At the start of rundown before the output rotation has passed through the Obstruction Check Zone (where the output is open at the start of the fastening cycle), the tool will stop and fastening cycle will be aborted if this torque is exceeded.
 - If the tool stops, when the output is open during this first part of the rundown, without any obstruction, the value is too low.
 - Units: lbf-in
 - TID memory location: 53

Typical Procedure for setting the tool's Tubenut obstruction detection parameters:

- Set the value for the obstruction torque just high enough so the tool will reliably overcome gear friction and make it past the obstruction checking zone.
- Check the torque of the stop on obstruction feature by measuring the actual "pinch" torque the tube nut produces at the start of the rundown when the jaws are open (within the obstruction detection angle range). This can be done on a semi-tightened joint simulator set for a hard joint, while auditing the torque.
- Note: Gear friction in the tube-nut head can greatly affect the ability to reliably detect an obstruction.

Controller parameters affecting tube nut pinch detection.

Controller parameters for soft-start operation can be viewed and modified from the Controller->Edit Controller Parameter->Soft Start in ToolWare.

- Soft Start Dwell Speed
 - The Soft Start Dwell Speed is used during the check for obstructions.
 - Decreasing this can reduce the impact force when hitting an obstruction.
 - **Attention: Care must be taken, increasing the speed above the default value. Too high of a value can greatly increase how hard the output will hit the obstruction.**

- Units: RPM of the tool output
- Default: 90 RPM
- Range: 1 to 500 RPM

3.3.3 Tube-Nut Homing Start Input Logic Selection

The controller parameters for tube- operation can be viewed and modified from the Controller->Edit Controller Parameter->Tube-nut screen in ToolWare.

- Tube-nut Home Strategy:
 - Lever action required to start the home sequence.
 - Options:
 - Home on release and repress of the lever (default)
 - Home on release of the lever



CORPORATE HEADQUARTERS
10000 SE Pine Street
Portland, Oregon 97216
Phone: (503) 254-6600
Toll Free: 1-800-852-1368

AIMCO CORPORATION DE MEXICO SA DE CV
Ave. Cristobal Colon 14529
Chihuahua, Chihuahua. 31125
Mexico
Phone: (01-614) 380-1010
Fax: (01-614) 380-1019

AIMCO CHINA
Room 607, No. 3998 Hongxin Rd
Minhang District, Shanghai
China
Phone: 0086-21-34319246
Fax: 0086-21-34319245

AIMCO EUROPE
Dibao Plaza Avenida Río Gallo, 431
19174 Galápagos - Guadalajara
Spain
Phone: + 34 673 34 99 25

AIMCO SOUTH AMERICA
Carrera 29A, #7B-91
Origami Building
Int604 Medellin
Colombia 050021