



VCE-1-1 Vacuum Extractor

**Caution: Always dispose of pulse fluid properly.
Never pour down drain or in garbage can.**

How to use:

- Hook air up to air inlet.
- Put needle into the oil filler plug on the pulse unit.
- When air bubbles appear in the extractor hose, all of the fluid has been extracted from the pulse unit.
- Pull the switch back to turn off the vacuum.
- Remove the needle from the pulse unit.

Now your pulse unit is ready to be refilled or rebuilt.



1204 E. Maple Rd.
Troy, MI 48083
(800) 852-1368
FAX (800) 582-9015

CORPORATE HEADQUARTERS
10000 S.E. Pine St.
Portland, OR 97216
(800) 852-1368
FAX (800) 582-9015

Ave. Morones Prieto 2110 Pte.
Col. Loma Larga
Monterrey, NL CP 64710, Mexico
52-81 1001-1600
FAX 52-81 1001-1630

LIT-MAN360
Rev. 10/2006
Printed in USA
©2006 AIMCO