



Using an AIMCO Gen IV Controller with Ethernet

Using the Touch Screen or System Port, navigate to Controller→Communication Interfaces→Ethernet and verify the IP address

Ethernet/Second Ethernet

Ethernet
Ethernet

IP Address	10.10.13.45
Subnet Mask	255.255.255.0
Gateway	0.0.0.0

At the bottom of the screen, there are two buttons: a green checkmark on the left and a red circle with a white diagonal line on the right.

- **IP Address:** IP address of controller's Ethernet port.
- **Subnet Mask:** Subnet mask of the controller.
- **Gateway:** Gateway is the IP address of the gateway computer that provides access beyond the local network.

NOTE: Consult your local System Administrator to connect the controller to your Network and assign IP addresses.