



VCE-1-1 Vacuum Extractor

**Caution: Always dispose of pulse fluid properly.
Never pour down drain or in garbage can.**

How to use:

- Hook air up to air inlet.
- Put needle into the oil filler plug on the pulse unit.
- When air bubbles appear in the extractor hose, all of the fluid has been extracted from the pulse unit.
- Pull the switch back to turn off the vacuum.
- Remove the needle from the pulse unit.

Now your pulse unit is ready to be refilled or rebuilt.



CORPORATE HEADQUARTERS
10000 S.E. Pine St.
Portland, OR 97216
(800) 852-1368
FAX (800) 582-9015

AIMCO CORPORATION DE MEXICO SA DE CV
Ave.Cristobal Colon 14529
Chihuahua, Chihuahua. 31125
Mexico
Phone: (01-614) 380-1010
Fax: (01-614) 380-1019