US-LT60P SERIES SCREWDRIVERS

EXPLODED VIEW

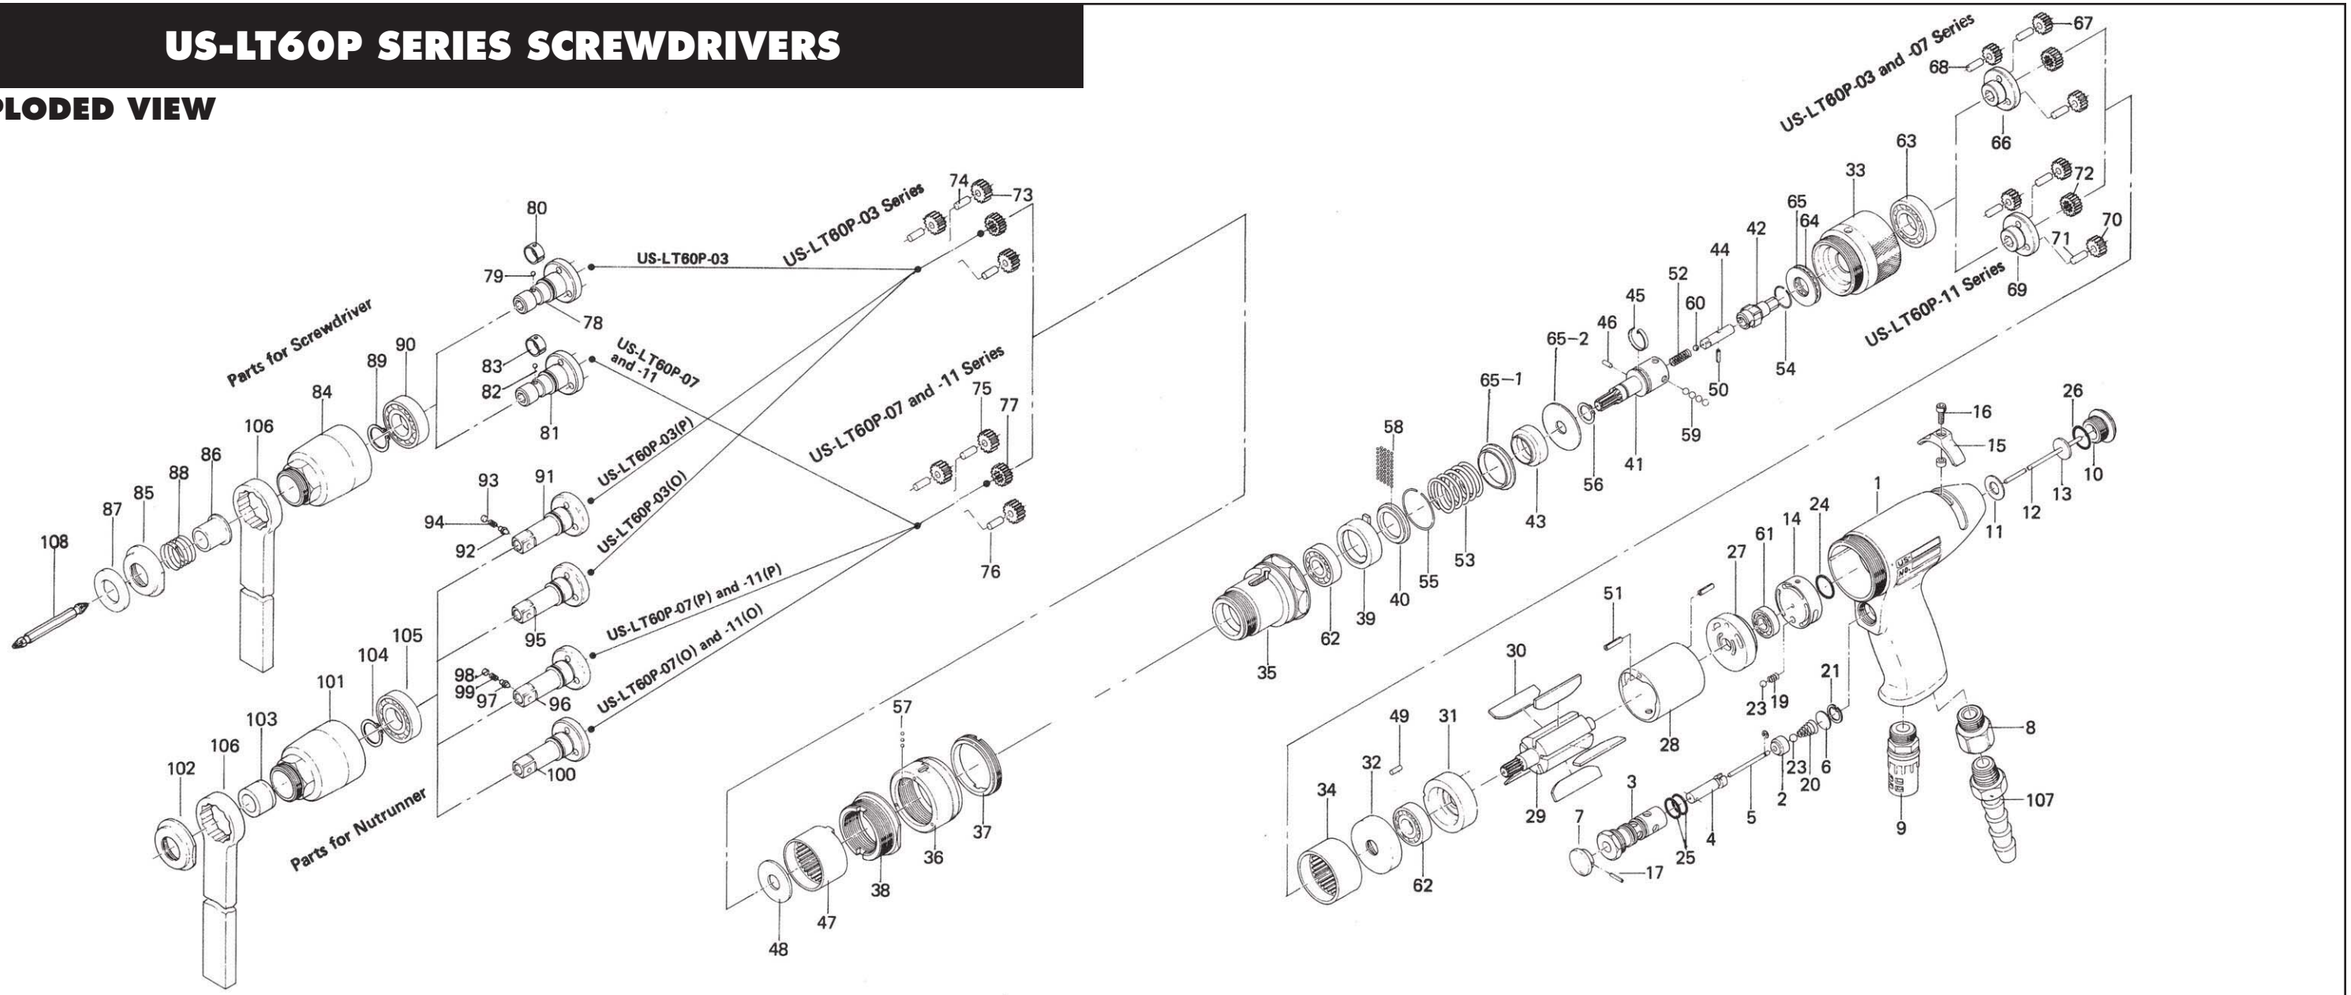

PARTS LIST — FOR REFERENCE ONLY

Casing assembly components are marked with"×".

Index No.	Code No.	Parts Name	Quantity
	499-984-7	HANDLE ASSEMBLY	
# 1	499-025-8 ×	Handle	1
# 2	621-100-0 ×	Valve	1
# 3	499-101-7 ×	Valve Bushing	1
# 4	499-103-8 ×	Valve Rod Bushing	1
# 5	969-412-0 ×	Pin (G) (2×12)	1
# 6	621-164-0 ×	Spring Spacer	1
# 7	603-107-2 ×	ThrottleTrigger	1
# 8	180-091-6 ×	Air Inlet Bushing	1
# 9	235-885-0 ×	Silencer Assy	1
#10	499-108-7 ×	Valve Plug	1
#11	996-421-0 ×	Packing (16×8×1)	1
#12	499-104-7 ×	Operating Rod	1
#13	499-106-7 ×	Operating Rod Cap	1
#14	499-210-7 ×	Reverse Valve	1
#15	496-212-2 ×	Reverse Lever	1
#16	945-001-0 ×	Allen Head Bolt (M3×10)	1
#17	973-010-0 ×	Roll Pin (2×10)	1
#19	976-033-0 ×	Spring (3.6×7)	1
#20	976-942-0 ×	Spring (7.5×12)	1
#21	979-005-0 ×	Inner Snap Ring (12)	1
#23	981-003-0 ×	Ball (5/32)	2
#24	990-011-0 ×	O-Ring (P12)	1
#25	990-909-0 ×	O-Ring (SNS11.2)	2
#26	990-912-0 ×	O-Ring (SNS14)	1
#27	499-285-7	Rear Plate	1
#28	499-286-7	Cylinder	1
#29	499-287-7	Rotor	1
#30	609-288-1	Blade	5
#31	499-289-7	Front plate	1
#32	499-296-7	Front plate Spacer	1
#33	499-036-7	Hammer Casing Connector	1
#34	499-465-7	First Internal Gear	1
#35	499-028-7	Hammer Casing	1
#36	499-264-7	Regulating Dial	1
#37	499-257-7	Regulating Screw	1
#38	499-382-7	Hammer Casing Nut	1
#39	499-164-7	Spring Setter	1
#40	499-379-7	Retainer	1
#41	499-452-7	Cam Guide	1
#42	499-346-3	Cam	1
#43	499-375-8	Cam Ring	1
#44	471-318-5	Pilot Pin	1
#45	499-670-7	Cam Guide Band	1
#46	499-764-7	Notch Pin	1
#47	499-466-7	Second Internal Gear	1
#48	499-483-7	Gear Cage Spacer	1
#49	971-110-0	Pin (2×10)	1
#50	969-470-0	Pin (2×8)	1
#51	973-112-0	Roll Pin (3×12)	2
#52	976-139-0	Spring (4.5×18)	1
#53	976-586-0	Spring (25×21) for US-LT60-03 & -07	1
#53-1	976-585-0	Spring (25×21) for US-LT60P-11	1
#54	978-150-0	Snap Ring (15×1)	1
#55	978-289-0	Snap Ring (29×1)	1
#56	979-107-0	Outer Snap Ring (10)	1
#57	981-000-0	Ball (1/16)	3
#58	981-000-0	Ball (1/16)	49
#59	981-003-0	Ball (5/32)	4
#60	981-004-0	Ball (3/16)	1
#61	982-035-0	Ball Bearing (698)	1
#62	982-100-0	Ball Bearing (6000)	2
#63	982-102-0	Ball Bearing (6002)	1
#64	988-837-0	Thrust Needle Bearing (NTB 1226)	1
#65	988-962-0	Thrust Washer (AS1226)	2
#65-1	499-165-7	Spring Holder	1
#65-2	499-682-7	Cushion Rubber	1
PARTS for US-LT60P-03 and -07			
#66	499-480-7	Gear Cage	1
#67	499-470-7	First Planet Gear	3
#68	972-111-0	Needle Roller (4×11)	3
PARTS for US-LT60P-11			
#69	499-480-0	Gear Cage	1
#70	499-470-0	First Planet Gear	3
#71	972-111-0	Needle Roller (4×11)	3
#72	499-445-0	First Middle Gear	1
PARTS for US-LT60P-03			
#73	499-471-7	Second Planet Gear	3
#74	972-111-0	Needle Roller (4×11)	3
PARTS for US-LT60P-07 and -11			
#75	499-471-3	Second Planet Gear	3
#76	972-111-0	Needle Roller (4×11)	3
#77	499-445-3	Second Middle Gear	1
PARTS for SCREWDRIVER			
For US-LT60P-03			
#78	499-350-6	Driver Anvil	1
#79	981-002-0	Ball (1/8)	1
#80	471-356-7	Bit Band	1
For US-LT60P-07 and -11			
#81	499-350-3	Driver Anvil	1
#82	981-002-0	Ball (1/8)	1
#83	471-356-7	Bit Band	1
In common			
#84	499-029-7	Gear Casing	1
#85	499-057-7	Bit Casing	1
#86	472-351-7	Bit Sleeve	1
#87	444-567-4	Bushing	1
#88	976-450-0	Spring (18.5×10)	1
#89	979-112-0	Outer Snap Ring (15)	1
#90	982-102-0	Ball Bearing (6002)	1
PARTS for NUTRUNNER			
For US-LT60P-03 Series			
#91	499-319-8 ○	Anvil (P)	1
#92	135-800-1	Socket Retainer Pin	1
#93	971-250-0	Pin (3.3×2)	1
#94	976-018-0	Spring (2.8×8.5)	1
#95	499-319-7 ○	Anvil (O)	1
For US-LT60P-07and-11 Series			
#96	499-319-5 ○	Anvil (P)	1
#97	135-800-1	Socket Retainer Pin	1
#98	971-250-0	Pin (3.3×2)	1
#99	976-018-0	Spring (2.8×8.5)	1
#100	499-319-4 ○	Anvil (O)	1
In common			
#101	499-029-7	Gear Casing	1
#102	499-057-7	Bit Casing	1
#103	499-328-7	Anvil Bushing	1
#104	979-112-0	Outer Snap Ring (15)	1
#105	982-102-0	Ball Bearing (6002)	1
Anvil marked with"○"are at use's option.			
ACCSSORIES			
#106	499-516-7	Reaction Bar	1
#107	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#108	916-810-0	(+)Double Bit (No.2×75) only for Screwdriver	1

AIMCO

10000 SE PINE, PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify tool type, part number and description.

FOOTNOTES

AIMCO also offers a complete line of standard & special adapters, bits, sockets and extensions.

REVISED 4/09