AE-8681 & AE-8682 ELECTRIC SCREWDRIVER

EXPLODED VIEW

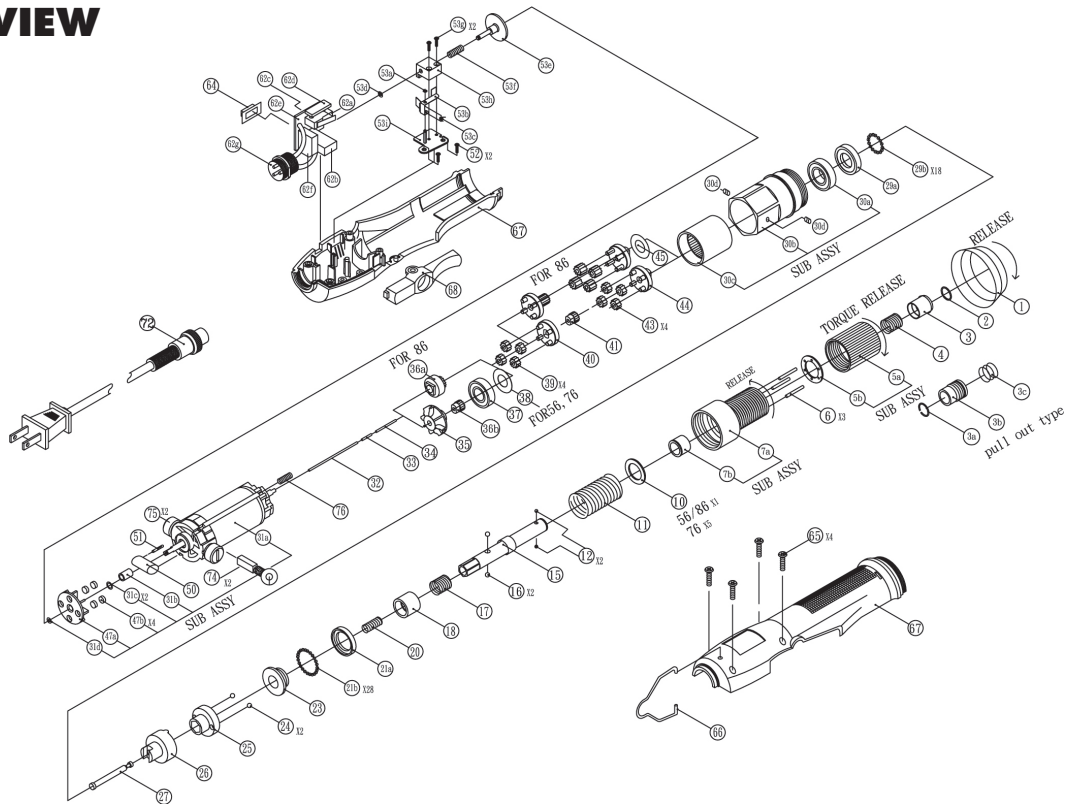

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.
1	4H1101	Retaining Ring	1
2	4U1051	Snap Ring	1
3a	4U1051	Snap Ring - Pull Out Type	1
3b	4H2048	Bit Slide Sleeve - Pull Out Type	1
3c	4S3065	Sleeve Spring (For Pull Type)	1
4	4S3045	Sleeve Spring (For Pull Type)	1
5	4A4022	Regulating Handle Sub. Ass'y for AE-8681	(1)
5a	4J1064	Regulating Handle	
5b	4W4712	Washer	
6	4N1025	Push Pin	1
7	4A1021	Hammer Casing Sub. Ass'y for AE-8681	(1)
7a	4T1073	Hammer Casing	
7b	4Q1064	Anvil Bushing	
10	4W4712	Washer (For AE-8681)	1
11	4S1104	Spring (For AE-8681)	1
12	4B1025	Ball	2
15	4C1153	Anvil (For Pull Type)	1
16	4B2018	Ball	2
17	4S3067	Spring	1
18	4K3054	Slide Sleeve (L=9.6)	1
	4K3058	Slide Sleeve (L=9.4)	1
20	4S2025	Spring	1
21	4A5017	Retainer Sub Ass'y	(1)
21a	4E2015	Retainer	1
21b	4B1024	Ball	28
23	4K3048	Driven Clutch	1
24	4B1028	Ball	2
25	4K2033	Hammer	1
26	4K1073	Hammer Shank	1
27	4C2041	Slide Pin	1
29	4A5018	Retainer Sub Ass'y	(1)
29a	4E2014	Retainer	1
29b	4B1026	Ball	18

Index Number	Part Number	Description	Qty.
30	4A7012	Gear Housing Sub Ass'y for AE-8681	(1)
30a	4E1019	Ball Bearing	1
30b	4R1064	Gear Housing	1
30c	4X1065	Inner Gear Box	1
30d	4B3025	Needle Roller	2
31	2A1106	Motor Sub Ass'y 110V	(1)
31a	2M5021	Motor	1
31b	4Q1073	Anvil Bushing	1
31c	6W1013	Plastic washer	2
	6W1014	Plastic washer	1
31d	4U1066	Snap Ring	1
31	2A1025	Motor Sub Ass'y for AE-8682 (220V)	(1)
31a	2M5022	Motor	1
31b	4Q1073	Anvil Bushing	1
31c	6W1013	Plastic washer (T=0.5)	2
	6W1014	Plastic washer (T=0.25)	1
31d	4U1066	Snap Ring	1
32	4N4024	Guide Pin A	1
33	4N4032	Guide Pin B	1
34	4N1131	Guide Pin C	1
36a	6G9011	Connector Gear (for AE-8681)	1
39	4G2687	First Planet Gear (for AE-8681)	4
40	4L1885	First Gear Cage (for AE-8681)	1
43	4G2689	Second Planet Gear (for AE-8681)	4
44	4L2823	Second Gear Cage (for AE-8681)	1
45	4W4212	Washer (for AE-8681)	1
47	6A3012	Fan Sub Ass'y	(1)
47a	6R2013	Fan	1
47b	2V1016	Magnet	4
50	2C6811	Capacitor	1
51	2R2014	Resistor	1
52	8T2685	Screw	2

Index Number	Part Number	Description	Qty.
53	4A6011	Braking Disk Sub Ass'y	(1)
53a	6W1012	Plastic washer	1
53b	4S5016	Spring Plate	1
53c	4S3101	Support Spring	1
53d	4U1061	Snap Ring	1
53e	4K4011	Braking Disk	1
53f	4S2027	Spring	1
53g	8T3326	Screw	2
53h	4V1026	Slide Base	1
53i	4V1122	Fixing Plate	1
62	2A6023A	Pwb Sub Ass'y	(1)
62a	2S3011	Micro Switch	1
62b	2F3015	Protector	1
62c	2S2019	Fwd/Rev Slide Switch	1
62d	2C6812	Capacitor	1
62e	2H1079	Circuit Board	1
62f	2E1036	Bidge Rectifier	1
62g	2G1014	3P Plug	1
64	6V1042	Push Button	1
	6V1041	Push Button (ESD)	1
65	8T2687	Screw	4
66	4F1041	Hanger Ring	1
67	6Z3013	Plastic Housing [L+R]	1
	6Z3010	Plastic Housing [L+R] (ESD)	1
68	6P1027	Trigger	1
	6P1020	Trigger (ESD)	1
72	2W1081	AC Cord For USA	1
	2W1082	AC Cord For Europe	1
	2W1083	AC Cord For U.K.	1
74	2B1015	Carbon Brush [Pair]	(1)
75	6V1021	Brush Cover	2
76	4S2027	Spring For Grounding	1

ACCESSORIES

	4H2055	Torque Cover
	4H2022	Torque Reacting Ring

FOOTNOTES

AIMCO

10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify tool type, part number, and description.