


UL-40, UL-40D SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

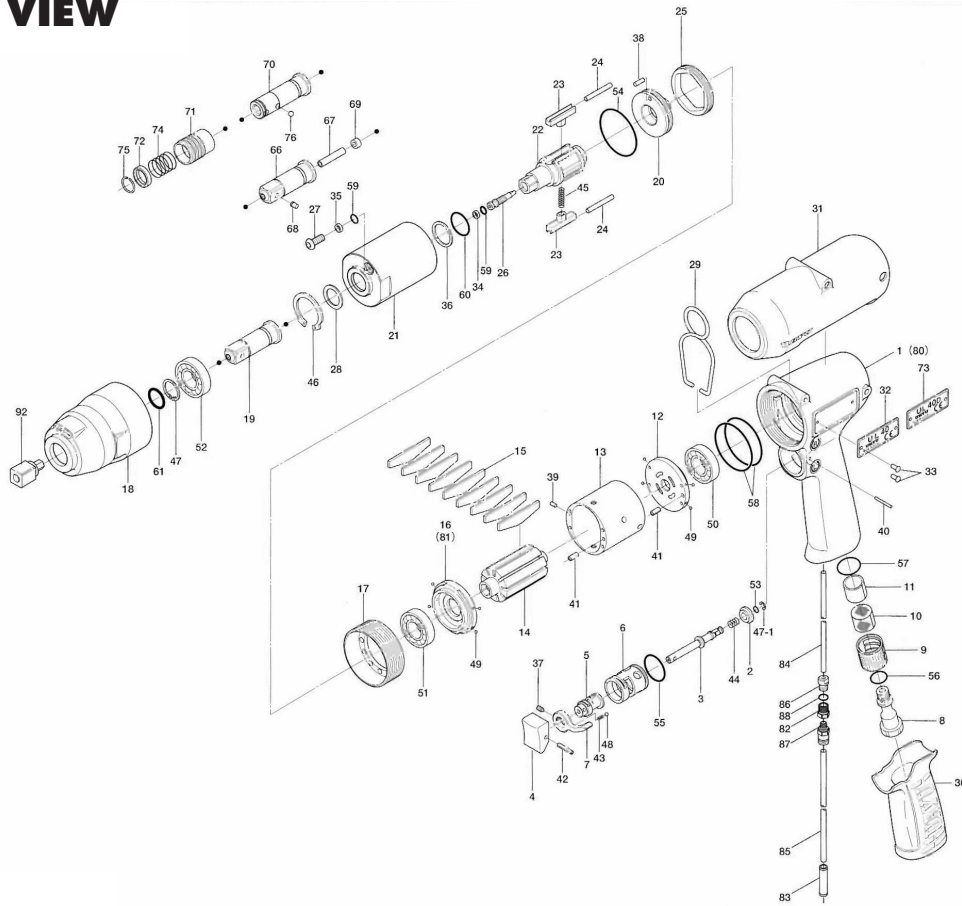

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.	Index Number	Part Number	Description	Qty.
1	143-025-0	Handle	1	31	143-840-0	Casing Protector	1	59	990-970-0	O-Ring (SNS-2)NOK	2 ●
2	147-100-3	Valve	1	32	143-924-0	Name Plate	1	60	992-019-0	SU-Ring (Q10) (NTN)	1 ●
3	147-104-2	Valve Rod	1	33	930-205-0	Driver Rivet (No.0 x 2.6)	2	61	993-100-0	Rubber Sponge (12 x 16.5 x 2)	1
4	147-107-2	Valve Lever	1	34	944-002-0	Supporting Ring (2.6 x 4.5 x 1)	1 ●	66	891-565-1	Socket Spindle Assembly (P)	1
5	147-210-2	Reverse Valve	1	35	944-003-0	Supporting Ring (3 x 5 x 1)	1 ●	67	891-559-1	Pipe	1
6	147-211-2	Reverse Valve Bushing	1	36	944-234-0	Supporting Ring (10 x 14 x 1.5)	1 ●	68	891-560-1	Socket Snap Pin	1
7	098-212-5	Reverse Lever	1	37	952-106-0	Allen Head Dog Point Screw (M4 x 6)	1	69	975-001-0	Spacer (6 x 2.8 x 3)	1
8	143-091-0	Air Inlet Bushing	1	38	970-148-0	Pin (H) (2.5 x 3.5)	1	PARTS FOR UL-40D			
9	147-780-3	Exhaust Slack	1	39	971-102-0	Pin (2 x 3.8)	1	70	143-350-2	Driver Anvil	1
10	147-042-2	Silencer	1	40	971-123-0	Pin (2 x 23)	1	71	011-351-1	Bit Sleeve (1/8)	1
11	145-835-6	FiHer (K50)	1	41	973-008-0	Roll Pin (2 x 8)	2	72	011-352-1	Bit Spacer	1
12	143-285-0	Rear Plate	1	42	973-014-0	Roll Pin (2 x 14)	1	73	143-924-2	Name Plate	1
13	143-286-0	Cylinder	1	43	976-006-0	Spring (3 x 5) (0.4)	1	74	976-327-0	Spring (13.5 x 11) (0.9)	1
14	143-287-0	Rotor	1	44	976-457-0	Spring (7 x 12) (0.9)	1	75	978-117-0	Snap Ring (11.7 x 10)	1
15	143-288-0	Blade (PC)	9	45	976-803-0	Spring (2.8 x 18) (0.4)WPC	1 ●	76	981-002-0	Ball (1/8)	1
16	144-289-0	Front Plate	1	46	979-324-0	Inner Snap Ring (IRTW-24)	1	PARTS FOR (TM) TYPE			
17	143-036-0	Hammer Casing Connector	1	47	979-353-0	Inner Snap Ring (ISTW-12)	1	80	852-522-1	Handle	1
18	143-439-0	Front Casing	1	47-1	979-405-0	Outer Snap Ring (E2.5)	1	81	852-528-1	Front Plate	1
19	143-454-0	Socket Spindle	1	48	981-002-0	Ball (1/8)	1	82	1/16BK1-10F	Barb 10/32 x 1/16npt x 1/16	1
20	143-901-0	Rotor	1	49	981-045-0	Ball (1.5)	8	83	909-442-0	Quick Exhaust Connector	1
21	143-902-0	Liner	1	50	982-014-0	Ball Bearing (607)	1	84	935-358-0	Polyurethane Hose (TU-0212)	1
22	143-319-2	Anvil	1	51	982-901-0	Ball Bearing (6900)	1	85	935-350-0	Polyurethane Hose (F-1504)	1
23	143-440-0	Driving Blade	2	52	982-922-0	Ball Bearing (6901ZZ)	1	87	PQ-MC05N	5/32 x 10/32 Fitting	1
24	143-974-0	Roller (2.5 x 21)	2	53	990-306-0	O-Ring (ARP-568-004) (H)	1	ACCESSORIES			
25	143-906-0	Liner Casing Setter	1	54	990-329-0	O-Ring (JW1530-19)	1 ●	90	939-090-1	Allen Wrench (1.5)	1
26	143-970-3	Relief Valve	1	55	990-912-0	O-Ring (SNS-14)	1	92	143-242-2	Adjuster	1
27	194-742-3	Oil Plug	1	56	990-914-0	O-Ring (SNS-16)	1				
28	143-327-1	Anvil Front Spacer	1	57	990-916-0	O-Ring (SNS-18)	1				
29	143-790-3	Suspension Ring	1	58	990-925-0	O-Ring (SNS-32)	2				
30	147-842-2	Handle Cover	1								



10000 SE PINE
PORTLAND, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify
tool type, part number, and description.

FOOTNOTES

● = Items in Pulse Repair Kit UL-30D-PRK